


# Whirlpool LTG6234DQ2 10 - AGITATOR, BASKET AND TUB PARTS

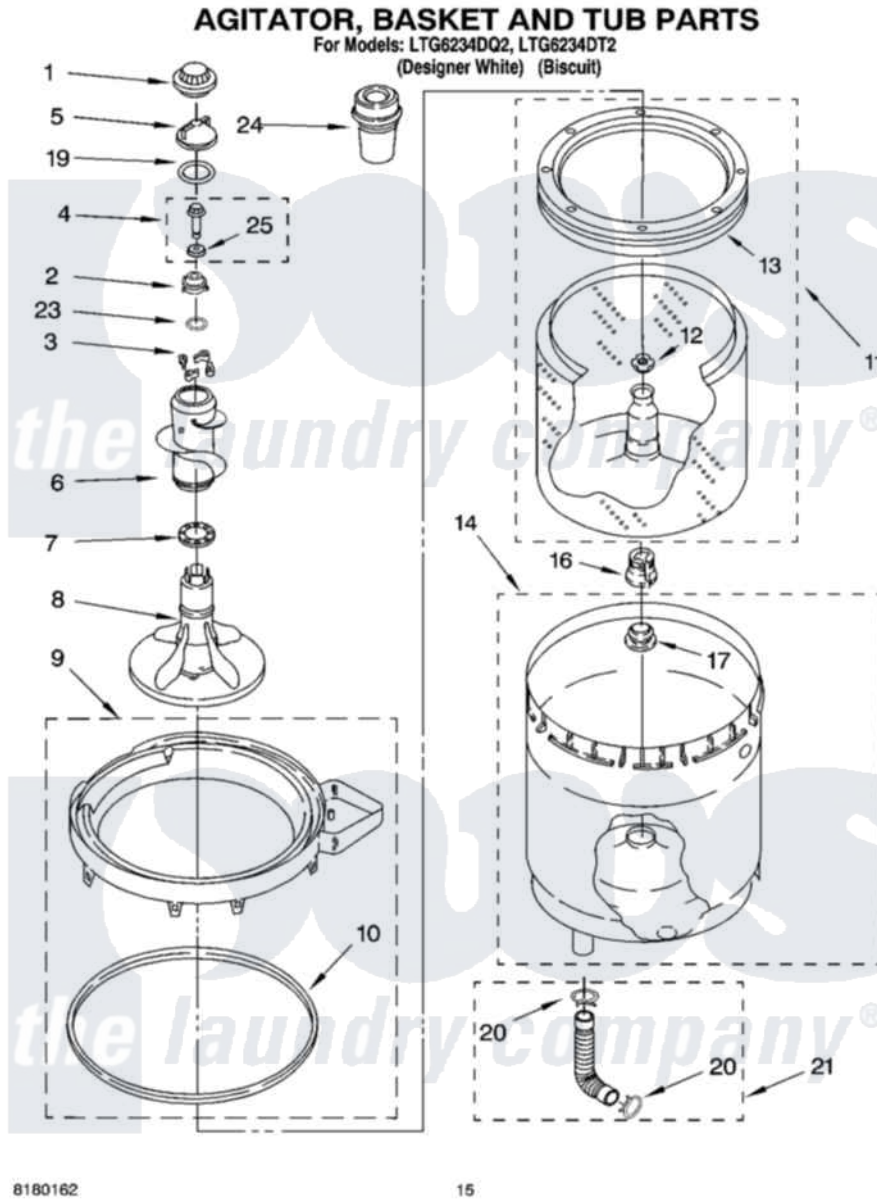

Whirlpool Residential Whirlpool LTG6234DQ2 Washer/Dryer Parts Parts Diagram 10 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	3947410	<a href="#">285751</a>		Dog-Agitator
3	3366877	<a href="#">80040</a>		Dog-Agitator
4	<a href="#">358237</a>			Screw And Washer
5	387094	<a href="#">285550</a>		Cap
6	<a href="#">3349610</a>			Mover, Agitator Clutch
7	3351014	<a href="#">285620</a>		Washer
8	<a href="#">3349578</a>			Agitator
9	8528150	<a href="#">W10445870</a>		Ring-Tub
10	<a href="#">3976308</a>			Gasket, Tub Ring
11	3979385	<a href="#">3352234</a>		Basket And Balance Ring Assembly
12	<a href="#">21366</a>			Nut, Spanner
13	8519788	<a href="#">387240</a>		Ring, Balance
14	<a href="#">3349292</a>			Tub
16	<a href="#">389140</a>			Tub Block, Basket Drive

17	<a href="#">383727</a>		Gasket, Centerpodt
19	3348855	<a href="#">W10072840</a>	Fabric Softener
20	3363366	<a href="#">616099</a>	Clamp
21	3951449	<a href="#">285871</a>	Hose
23	<a href="#">64002</a>		Seal, Agitator
24	<a href="#">3350834</a>		Dispenser,
25	<a href="#">3949550</a>		Washer

