


Whirlpool LTG6234DQ3 10 - AGITATOR, BASKET AND TUB PARTS

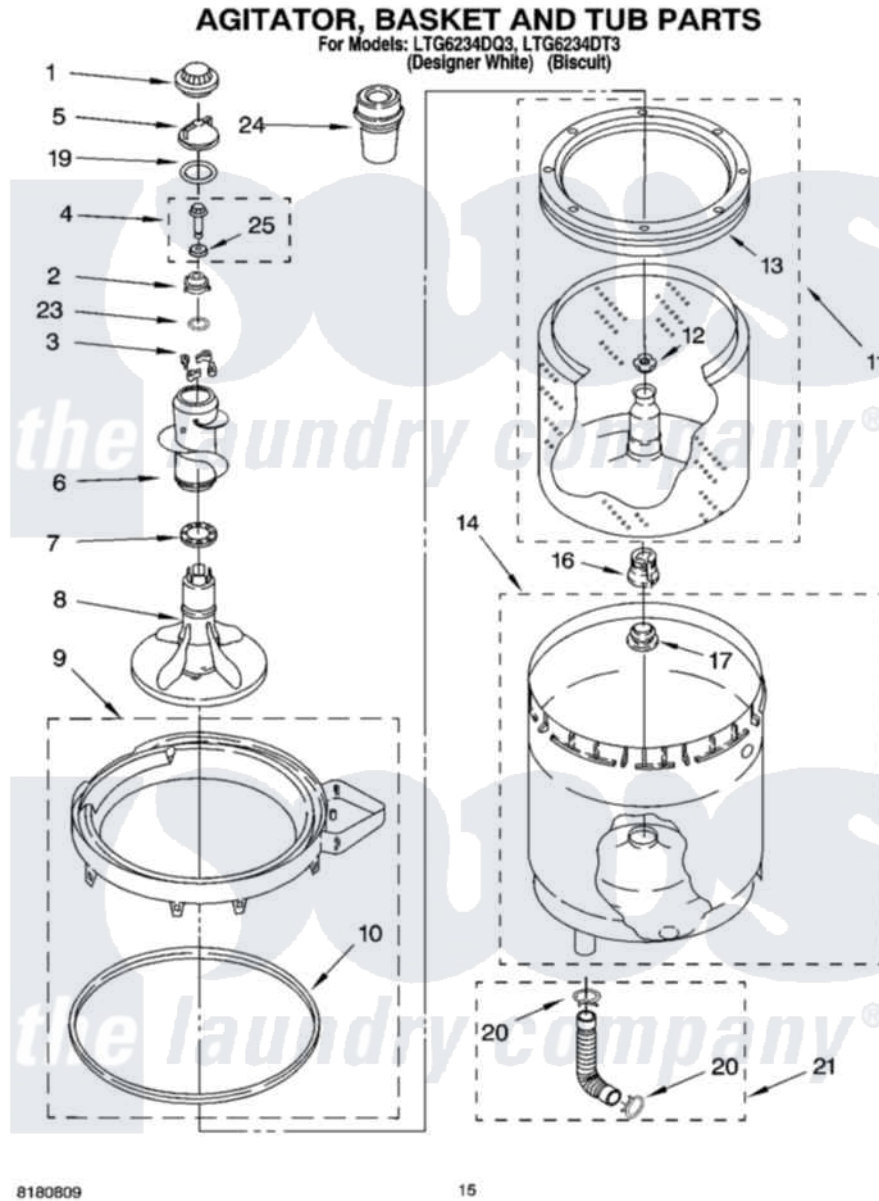

Whirlpool Residential Whirlpool LTG6234DQ3 Washer/Dryer Parts Parts Diagram 10 - AGITATOR, BASKET AND TUB PARTS

Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|---------------------------|--------|----------------------------------|
| 1 | 3355758 | | | Cap, Agitator |
| 2 | 3947410 | 285751 | | Dog-Agitator |
| 3 | 3366877 | 80040 | | Dog-Agitator |
| 4 | 358237 | | | Screw And Washer |
| 5 | 387094 | 285550 | | Cap |
| 6 | 3349610 | | | Mover, Agitator Clutch |
| 7 | 3351014 | 285620 | | Washer |
| 8 | 3349578 | | | Agitator |
| 9 | 8528150 | W10445870 | | Ring-Tub |
| 10 | 3976308 | | | Gasket, Tub Ring |
| 11 | 3979385 | 3352234 | | Basket And Balance Ring Assembly |
| 12 | 21366 | | | Nut, Spanner |
| 13 | 8519788 | 387240 | | Ring, Balance |
| 14 | 3349292 | | | Tub |
| 16 | 389140 | | | Tub Block, Basket Drive |

| | | | |
|----|-------------------------|---------------------------|--------------------|
| 17 | 383727 | | Gasket, Centerpodt |
| 19 | 3348855 | W10072840 | Fabric Softener |
| 20 | 3363366 | 616099 | Clamp |
| 21 | 3951449 | 285871 | Hose |
| 23 | 64002 | | Seal, Agitator |
| 24 | 3350834 | | Dispenser, |
| 25 | 3949550 | | Washer |

