


# Whirlpool LTG6234DT3 02 - DRYER FRONT PANEL AND DOOR PARTS

## DRYER FRONT PANEL AND DOOR PARTS

For Models: LTG6234DQ3, LTG6234DT3  
(Designer White) (Biscuit)

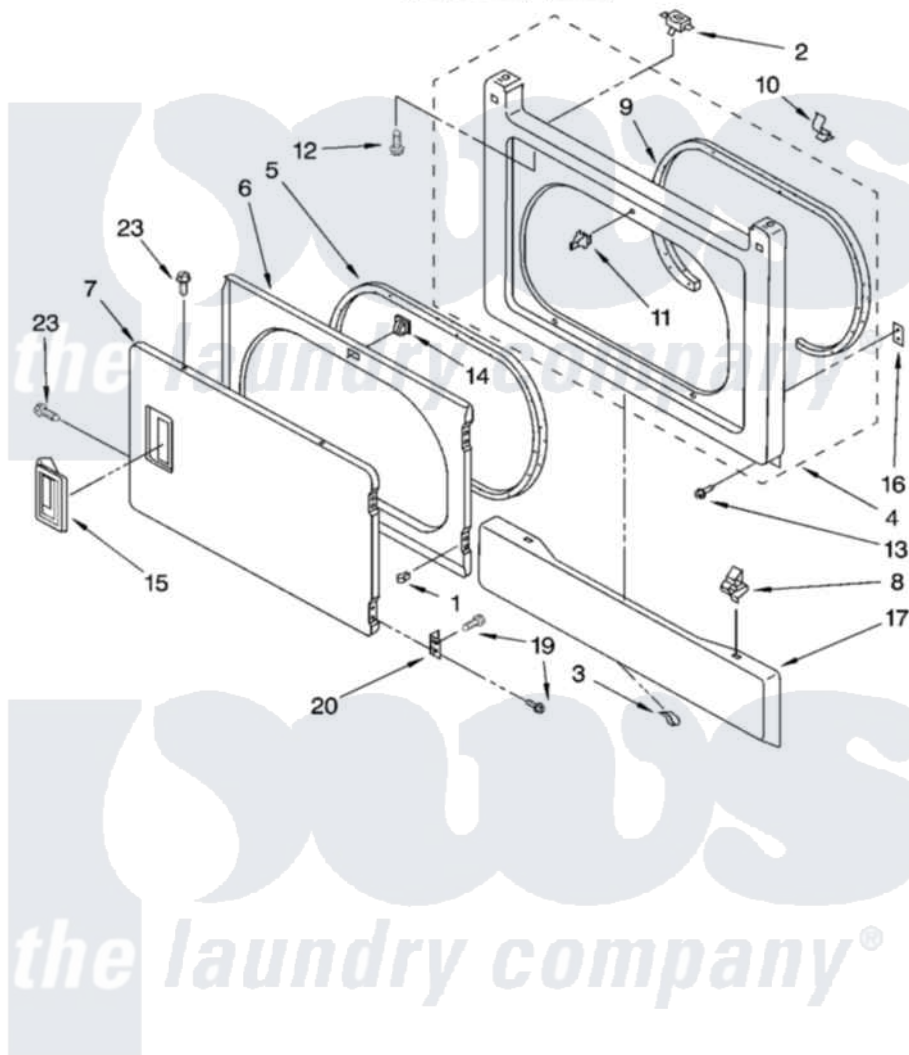

2

8180809

Whirlpool [Residential Whirlpool LTG6234DT3 Washer/Dryer Parts](#) Parts Diagram 02 - DRYER FRONT PANEL AND DOOR PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3389249</a>			Nut, Inner Door
2	3391901	<a href="#">3391902</a>		Switch, Door
3	<a href="#">98234</a>			Clip, U-Bend
4	3392547	<a href="#">279718</a>		Panel
"	3977780	<a href="#">279938</a>		Panel
5	<a href="#">3390735</a>			Seal, Door
6	3392563	<a href="#">280083</a>		Door-Rear
7	<a href="#">3387872</a>			Door, Front
"	<a href="#">3387877</a>			Door, Front
8	<a href="#">3388229</a>			Retainer, Toe Panel
9	<a href="#">3387242</a>			Seal, Front Panel
10	3392602	<a href="#">W10134186</a>		Clip, Harness
11	696144	<a href="#">279570</a>		Latch
12	697773	<a href="#">3395530</a>		Screw
13	3393008	<a href="#">308685</a>		Side Trim )
14	3392538	<a href="#">279570</a>		Latch

15	<a href="#">3389522</a>		Handle, Door
"	<a href="#">3389528</a>		Handle, Door
16	<a href="#">3390902</a>		Clip, Door Hinge
17	<a href="#">3388958</a>		Panel, Toe
"	<a href="#">3388963</a>		Panel, Toe
19	342055	<a href="#">488627</a>	Screw
20	<a href="#">3389247</a>		Hinge And Pin Assembly
23	<a href="#">694091</a>		Trim, Side Right Hand

