


# Whirlpool RAS7133PQ1 03 - AGITATOR, BASKET AND TUB PARTS

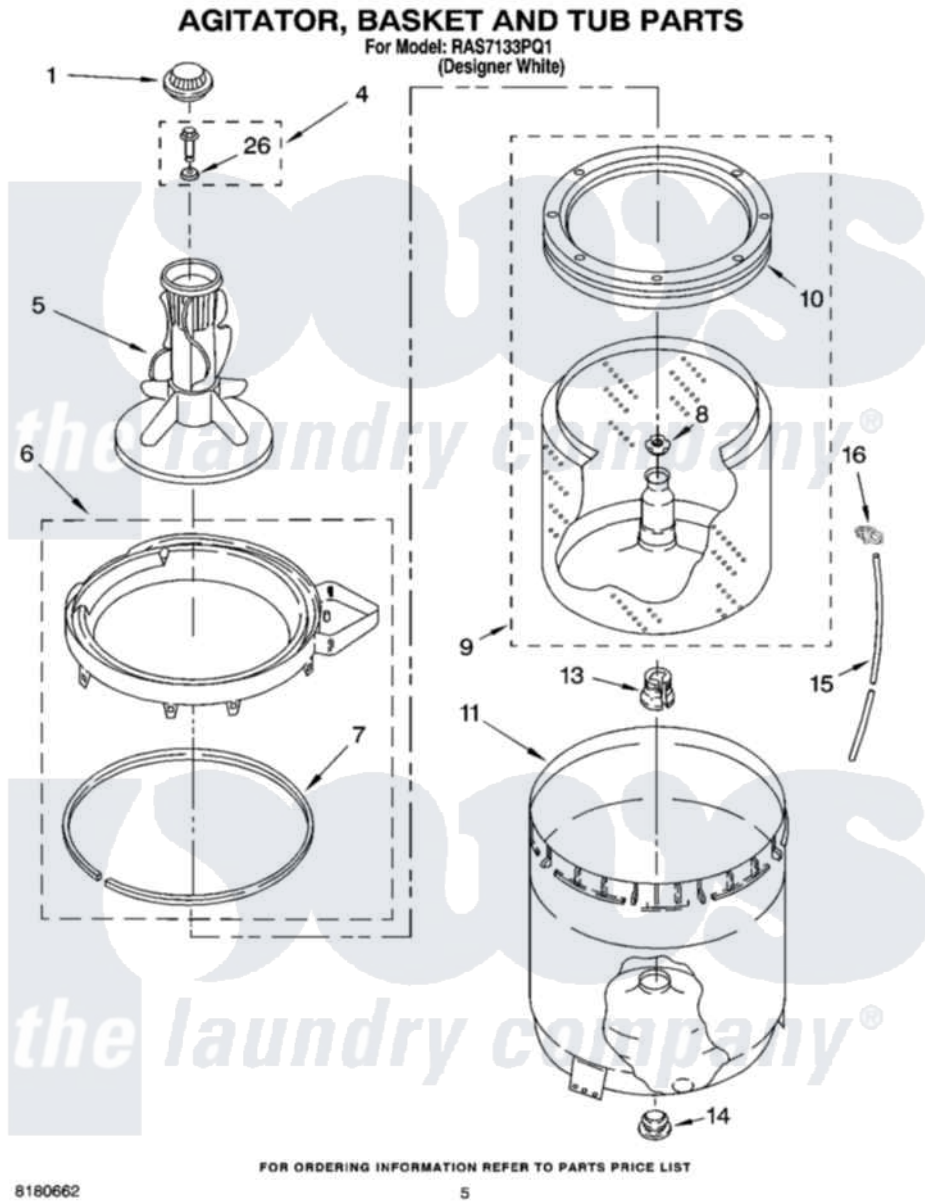

Whirlpool [Residential Whirlpool RAS7133PQ1 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
4	<a href="#">358237</a>			Screw And Washer
5	<a href="#">63235</a>			Agitator Assembly
6	8528150	<a href="#">W10445870</a>		Ring-Tub
7	<a href="#">3976308</a>			Gasket, Tub Ring
8	<a href="#">21366</a>			Nut, Spanner
9	8526017	<a href="#">W10389329</a>		Clothes Container, Assembly
10	8519788	<a href="#">387240</a>		Ring, Balance
11	<a href="#">63849</a>			Strain Relief, Power Cord
13	<a href="#">389140</a>			Tub Block, Basket Drive
14	<a href="#">383727</a>			Gasket, Centerpod
15	3347780	<a href="#">353244</a>		Hose, Pressure Switch
16	<a href="#">2219077</a>			Clip, Pressure Switch Hose
26	<a href="#">3949550</a>			Washer