


# Whirlpool RAS7133RQ3 03 - AGITATOR, BASKET AND TUB PARTS

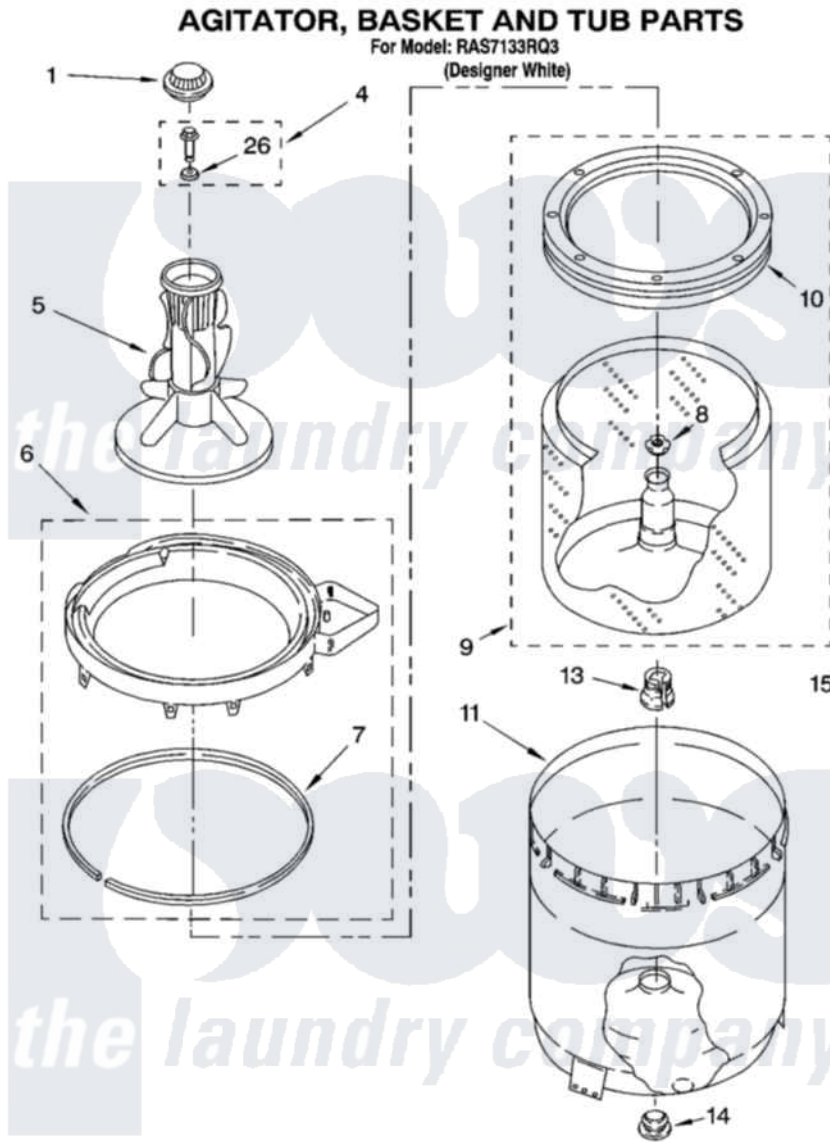

8180832

5

Whirlpool [Residential Whirlpool RAS7133RQ3 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

| Item | Original Part Number    | Replaced By               | Status | Part Description            |
|------|-------------------------|---------------------------|--------|-----------------------------|
| 1    | <a href="#">3355758</a> |                           |        | Cap, Agitator               |
| 4    | <a href="#">358237</a>  |                           |        | Screw And Washer            |
| 5    | <a href="#">63235</a>   |                           |        | Agitator Assembly           |
| 6    | 8528150                 | <a href="#">W10445870</a> |        | Ring-Tub                    |
| 7    | <a href="#">3976308</a> |                           |        | Gasket, Tub Ring            |
| 8    | <a href="#">21366</a>   |                           |        | Nut, Spanner                |
| 9    | 8526017                 | <a href="#">W10389329</a> |        | Clothes Container, Assembly |
| 10   | 8519788                 | <a href="#">387240</a>    |        | Ring, Balance               |
| 11   | <a href="#">63849</a>   |                           |        | Strain Relief, Power Cord   |
| 13   | <a href="#">389140</a>  |                           |        | Tub Block, Basket Drive     |
| 14   | <a href="#">383727</a>  |                           |        | Gasket, Centerpod           |
| 15   | 3347780                 | <a href="#">353244</a>    |        | Hose, Pressure Switch       |
| 16   | <a href="#">2219077</a> |                           |        | Clip, Pressure Switch Hose  |
| 26   | <a href="#">3949550</a> |                           |        | Washer                      |