


Whirlpool RAS8333RQ4 03 - AGITATOR, BASKET AND TUB PARTS

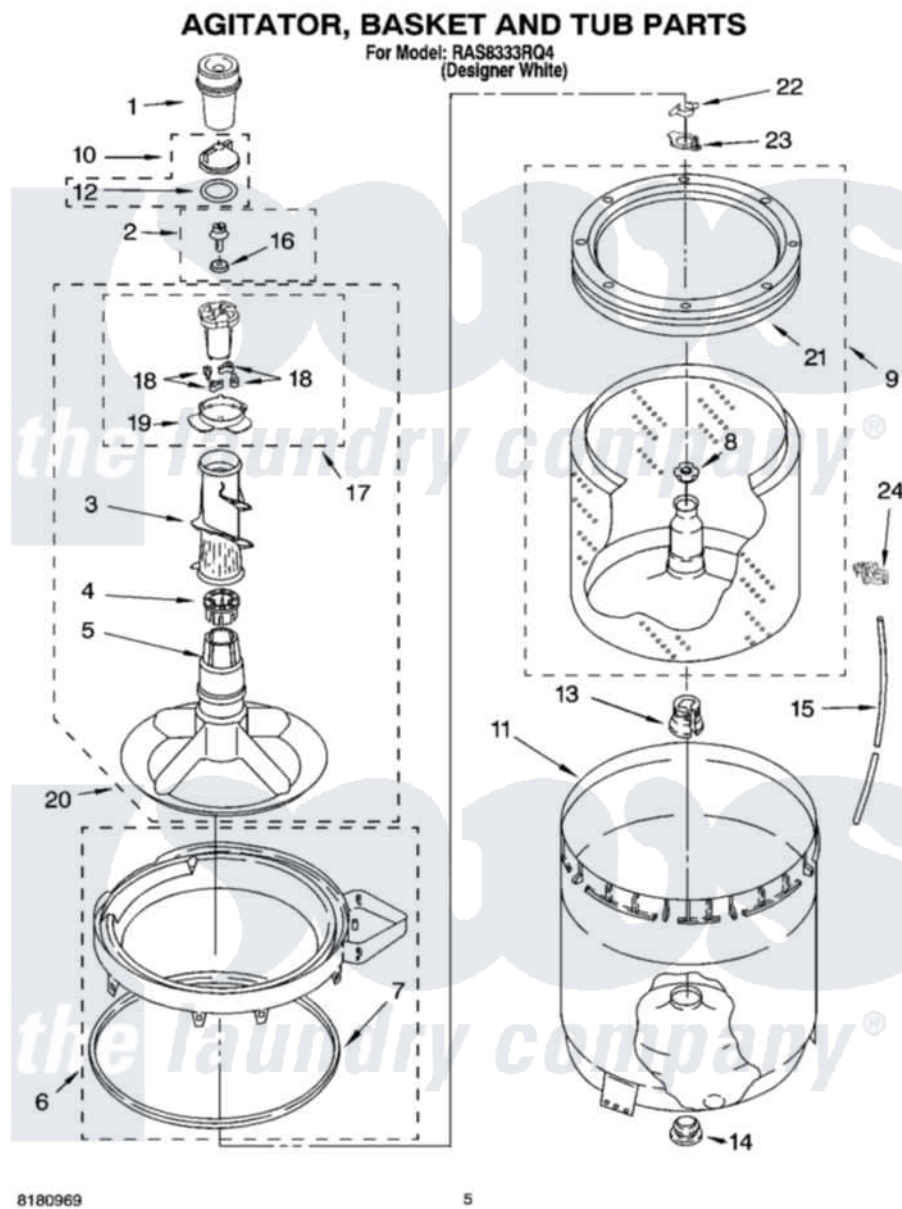

8180969

5

Whirlpool Residential Whirlpool RAS8333RQ4 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	63580			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	3348752			Mover, Clothes
4	3350389	285587		Washer
5	3347288			Agitator
6	8528150	W10445870		Ring-Tub
7	3976308			Gasket, Tub Ring
8	21366			Nut, Spanner
9	8526017	W10389329		Clothes Container, Assembly
10	3354733	W10074580		Cap, Barrier
11	63849			Strain Relief, Power Cord
12	3348855	W10072840		Fabric Softener
13	389140			Tub Block, Basket Drive
14	383727			Gasket, Centerpodt
15	3347780	353244		Hose, Pressure Switch
16	3949550			Washer

17	3363663	285811	Cam-Agitator
18	3366877	80040	Dog-Agitator
19	3363661		Bearing, Driven Cam
20	3348117	285565	Agitator
21	8519788	387240	Ring, Balance
22	3354845		Clip, Agitator
23	8543666		Washer, Agitator
24	2219077		Clip, Pressure Switch Hose

