


# Whirlpool RAX7244PQ1 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: RAX7244PQ1  
(Designer White)

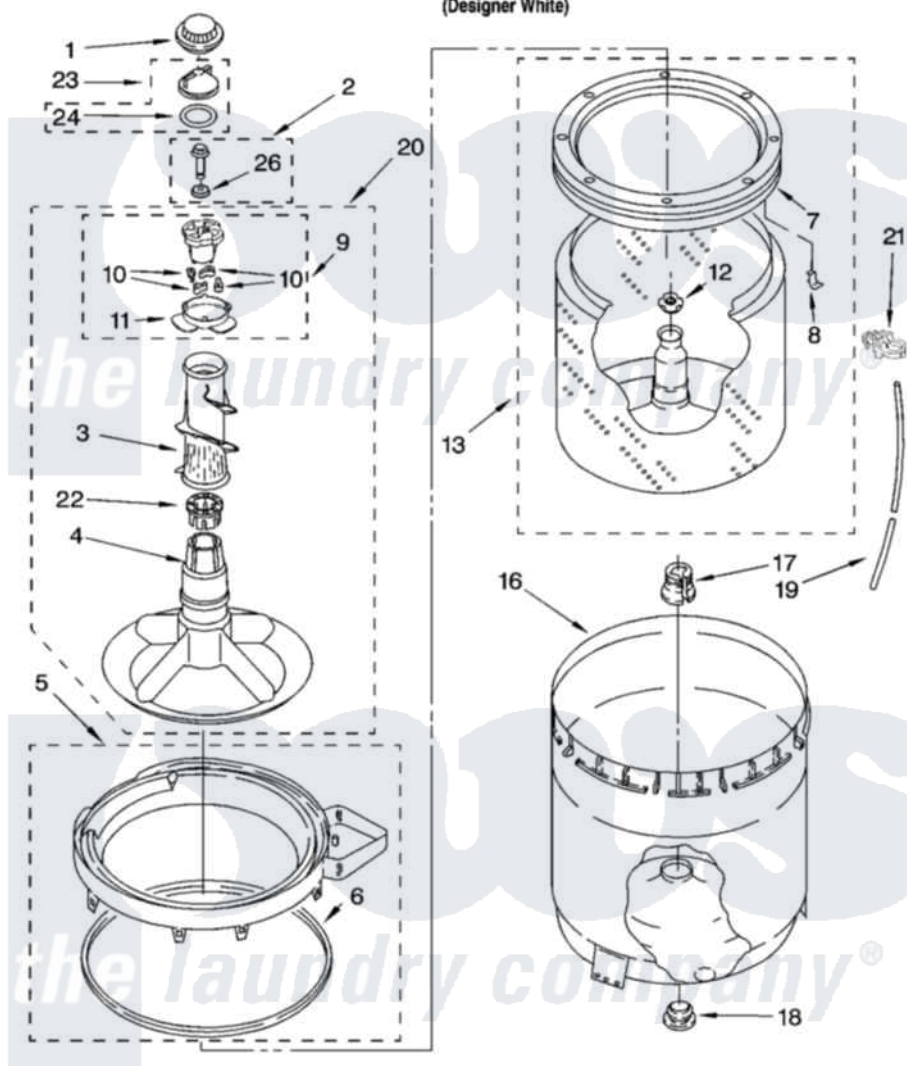

8180627

5

Whirlpool Residential Whirlpool RAX7244PQ1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	<a href="#">358237</a>			Screw And Washer
3	<a href="#">3349019</a>			Auger, Agitator
4	<a href="#">3350830</a>			Agitator
5	<a href="#">3360611</a>			Tub Ring And Gasket Assembly
6	<a href="#">3359586</a>			Gasket, Tub Ring
7	<a href="#">3956205</a>			Balance Ring
8	<a href="#">8519815</a>			Clip, Balance Ring
9	3363663	<a href="#">285811</a>		Cam-Agitator
10	3366877	<a href="#">80040</a>		Dog-Agitator
11	<a href="#">3363661</a>			Bearing, Driven Cam
12	<a href="#">21366</a>			Nut, Spanner
13	3956206	<a href="#">3956207</a>		Basket And Balance Ring
16	<a href="#">63125</a>			Tub
17	<a href="#">389140</a>			Tub Block, Basket Drive
18	<a href="#">383727</a>			Gasket, Centerpodt

19	3347780	<a href="#">353244</a>	Hose, Pressure Switch
20	3350829	<a href="#">285574</a>	Large Ring
21	<a href="#">2219077</a>		Clip, Pressure Switch Hose
22	3350389	<a href="#">285587</a>	Washer
23	3354733	<a href="#">W10074580</a>	Cap, Barrier
24	3348855	<a href="#">W10072840</a>	Fabric Softener
26	<a href="#">3949550</a>		Washer

