


Whirlpool RED4100SQ 01 - TOP AND CONSOLE PARTS

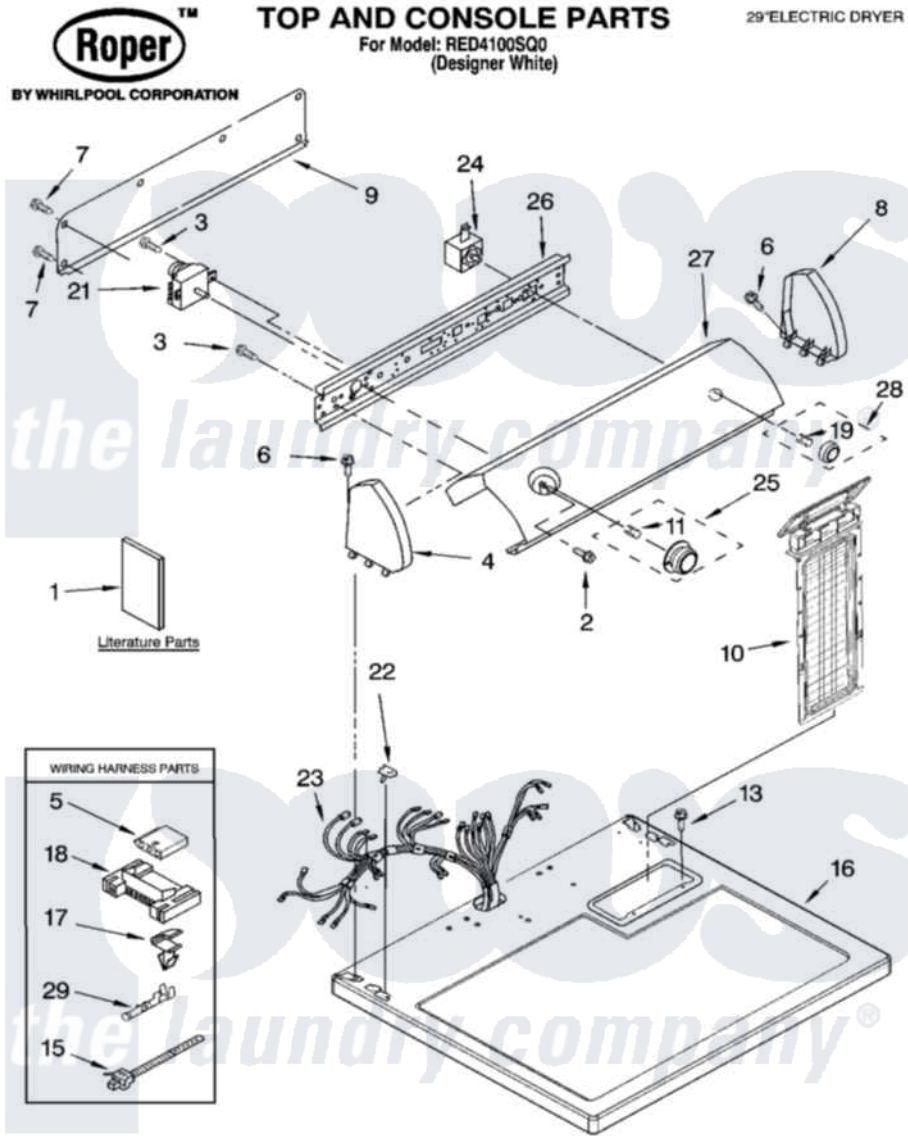

5-06 Litho in U.S.A. (LT)

1

Part No. 8181360

Whirlpool [Residential Whirlpool RED4100SQ Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578192		Not Available	Guide, Use & Care
"	8577187		Not Available	Instructions, Installation
"	W10043010		Not Available	Sheet, Cycle Feature
"	8528187			Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8274434	279960		Endcap
9	8274261			Do-It-Yourself Repair Manuals

10	8558467		Screen, Lint
11	688805		Clip, Spring Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
15	3391249		Cable Tie, Push Mount
16	8557930	8563985	Top
17	3394427		Clip-Harness
18	3395683		Receptacle, Multi-Terminal
19	8536939		Clip, Knob
21	8299780		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299865	8576499	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8538953		Timer Knob Assembly
26	8271418		Bracket, Control
27	8578956		Panel, Control
28	8538959		Knob, Push-To-Start
29	94614		Terminal

