


Whirlpool RED4340SQ1 01 - TOP AND CONSOLE PARTS

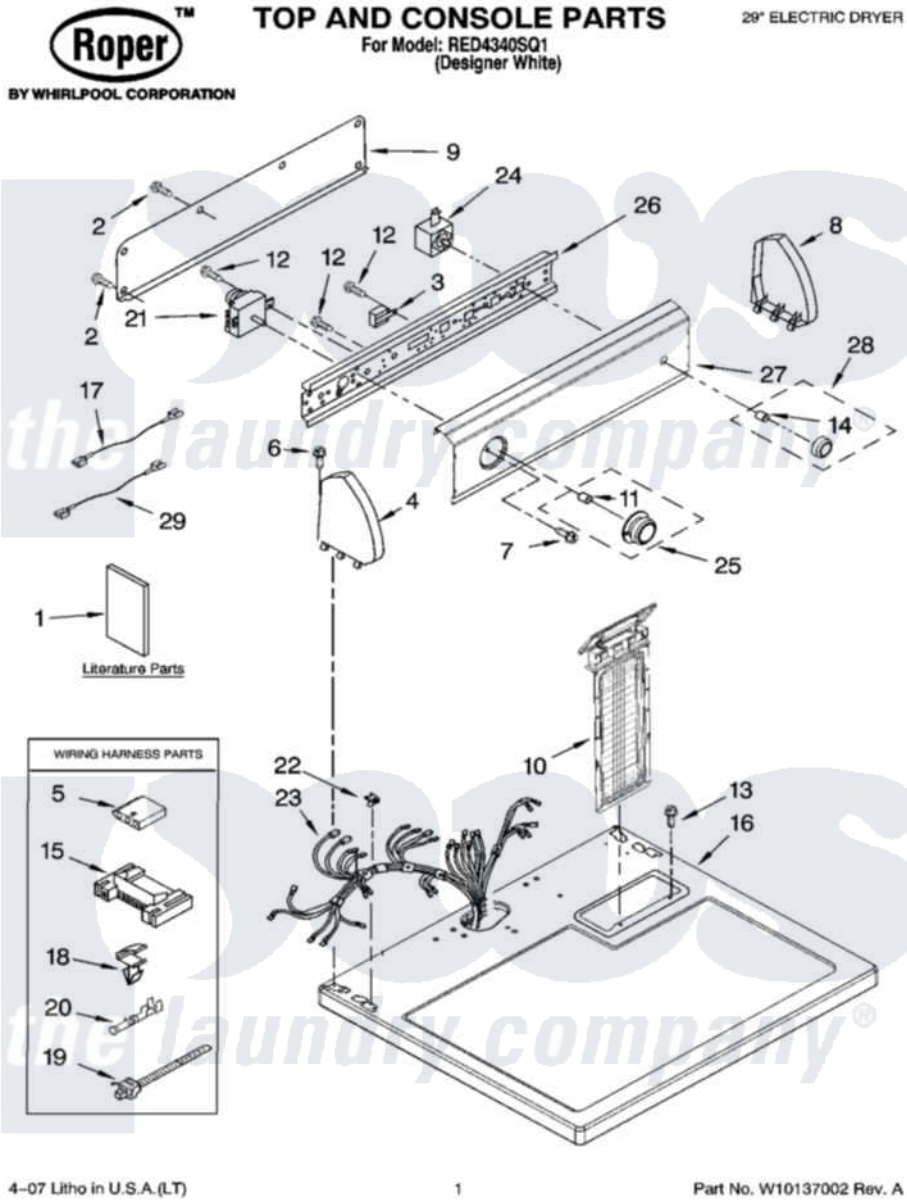

4-07 Litho in U.S.A.(LT)

1

Part No. W10137002 Rev. A

Whirlpool [Residential Whirlpool RED4340SQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578192		Not Available	Guide, Use & Care
"	8577187		Not Available	Instructions, Installation
"	W10043010		Not Available	Sheet, Cycle Feature
"	8576793		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	694419			Mini-Buzzer
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274434	279960		Endcap
9	8274261			Do-It-Yourself Repair Manuals

10	8558467		Screen, Lint
11	688805		Clip, Spring Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8536939		Clip, Knob
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
17	3393814	Not Available	Wire, Jumper (Black)
18	3394427		Clip-Harness
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	8299781		Timer, 60 Hz
22	357213		Nut, Push-In
23	8576500	W10450292	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8538953		Timer Knob Assembly
26	8271418		Bracket, Control
27	8579655		Panel, Control
28	8538959		Knob, Push-To-Start
29	3393815	3393812	Wire, Jumper

