


Whirlpool RES7646KQ3 02 - TOP AND CONSOLE PARTS

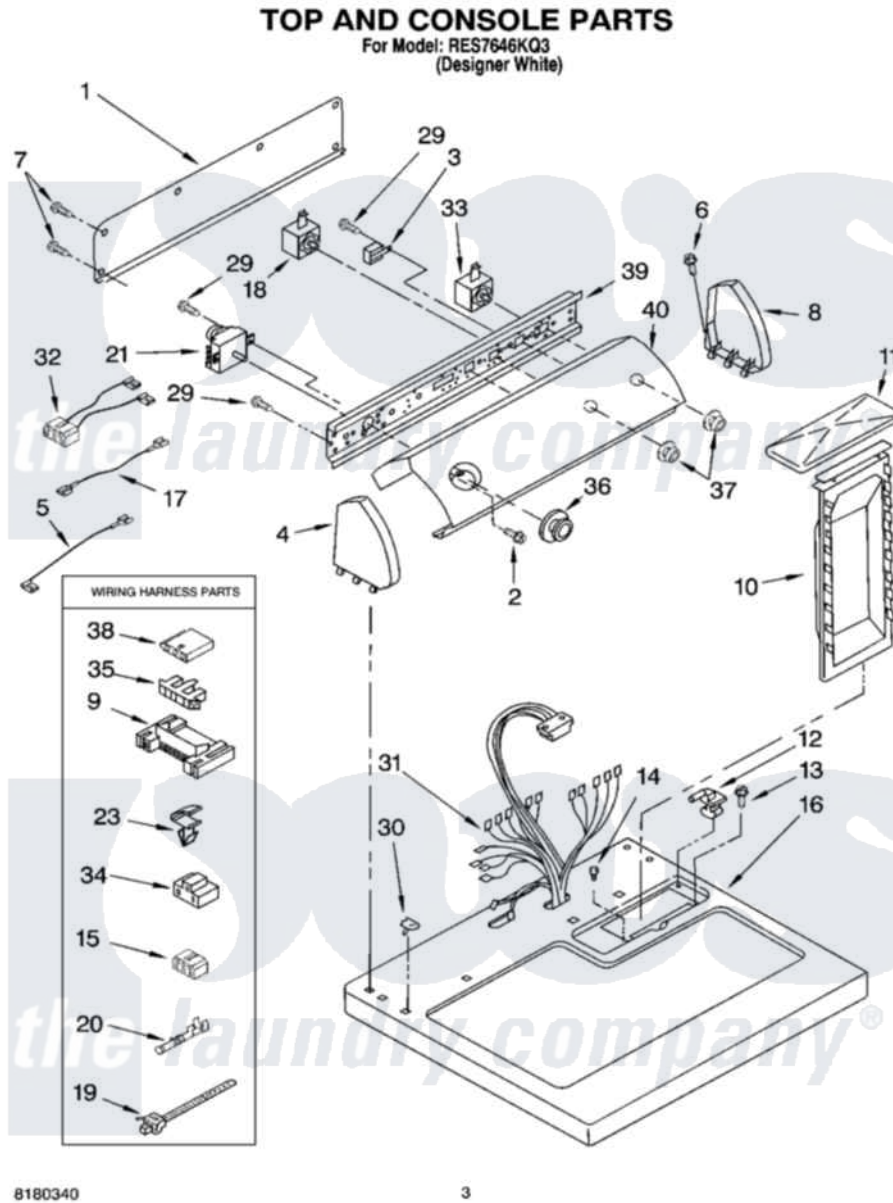

Whirlpool [Residential Whirlpool RES7646KQ3 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3400859			Screw, Grounding
3	694419			Mini-Buzzer
4	8274437	279960		Endcap
5	3401694			Wire, Jumper
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8274434	279960		Endcap
9	3395683			Receptacle, Multi-Terminal
10	349639			HANDLE AND LINT SCREEN ASSEMBLY
11	8283378			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid
13	688983	487240		Screw, For Mtg. Service Capacitor
14	297535	17258		Bumper

15	3347243		Block, Disconnect
16	8271390	8521918	Top
17	3401684		Jumper, Wire
18	3399639		Switch, Rotary Temperature
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	3979617		Timer, 60 Hz
23	3394427		Clip-Harness
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
32	3396029	8539893	Wire, Jumper
33	3398096		Switch, Push-To-Start
34	3401144		Connector
35	3397269		Connector, Timer
36	8274380	3957749	Knob
37	8274378		Knob, Control
38	3936144		Do-It-Yourself Repair Manuals
39	8271418		Bracket, Control
40	3977927		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	3404351		Accessory Parts
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]