


Whirlpool REX3514RQ0 01 - TOP AND CONSOLE PARTS

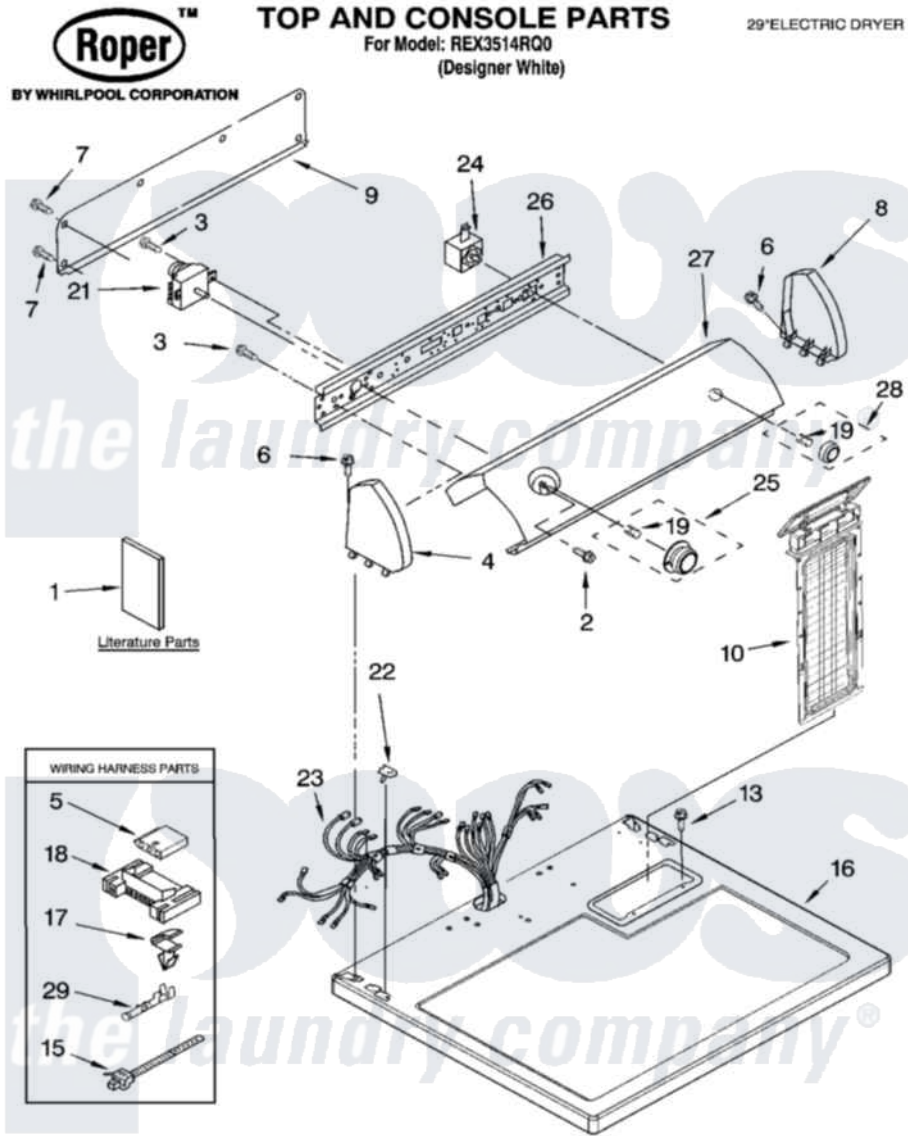

5-05 Litho in U.S.A. (LT)

1

Part No. 8180683

Whirlpool [Residential Whirlpool REX3514RQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533782		Not Available	Guide, Use & Care
"	8535914		Not Available	Instructions, Installation
"	8533780		Not Available	Sheet, Cycle Feature
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8274434	279960		Endcap
9	8274261			Do-It-Yourself Repair Manuals

10	8558467		Screen, Lint
13	688983	487240	Screw, For Mtg. Service Capacitor
15	3391249		Cable Tie, Push Mount
16	8557930	8563985	Top
17	3394427		Clip-Harness
18	3395683		Receptacle, Multi-Terminal
19	8536939		Clip, Knob
21	8299780		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299865	8576499	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	3957383		Timer Knob Assembly
26	8271418		Bracket, Control
27	8573817		Panel, Control
28	8557462		Knob, Push-To-Start
29	94614		Terminal

