


Whirlpool REX3519PQ0 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

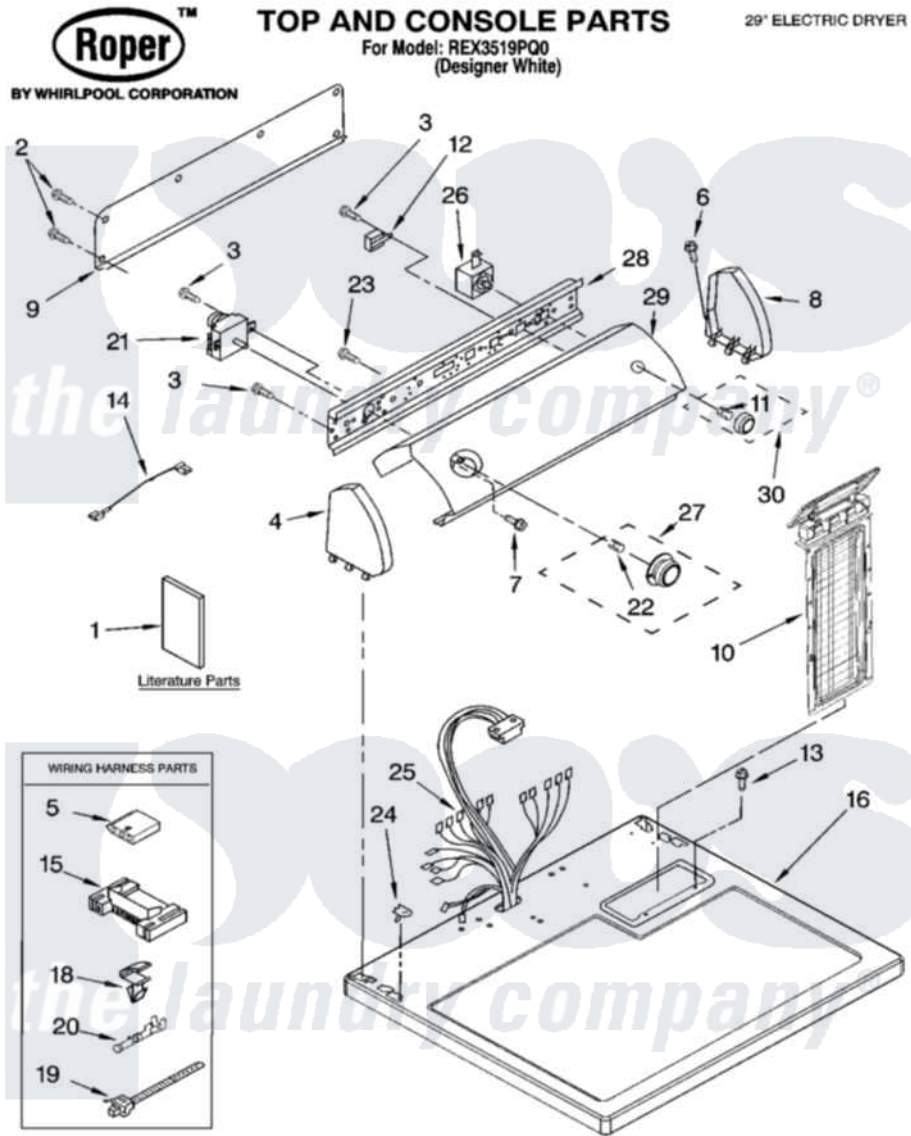

5-04 Litho in U.S.A. (djc)

1

Part No. 8180425

Whirlpool Residential Whirlpool REX3519PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533782		Not Available	Guide, Use & Care
"	8533780		Not Available	Sheet, Cycle Feature
"	8535914		Not Available	Instructions, Installation
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274434	279960		Endcap

9	8274261		Do-It-Yourself Repair Manuals
10	8558467		Screen, Lint
11	8536939		Clip, Knob
12	694419		Mini-Buzzer
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3393814		Not Available
14	3393814		Wire, Jumper (Black)
"	3393815	3393812	Wire, Jumper
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	8299780		Timer, 60 Hz
22	688805		Clip, Spring Knob
23	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
24	357213		Nut, Push-In
25	8299865	8576499	Harness, Wiring
26	3977456		Switch, Push-To-Start
27	8557455		Timer Knob Assembly
28	8271418		Bracket, Control
29	3977942		Panel, Control
30	8557461		Knob, Push-To-Start
"	N/A		Not Available
"	279948	4392065	ACCESSORY PARTS
"	689790		Kit, Dryer Repair
"	8522199		Dry Rack
"	72017		Accessory Parts
"	350930		Paint, Touch-Up
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Pressurized Spray B
"			Paint, Touch-Up)

