


Whirlpool REX3614KW2 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

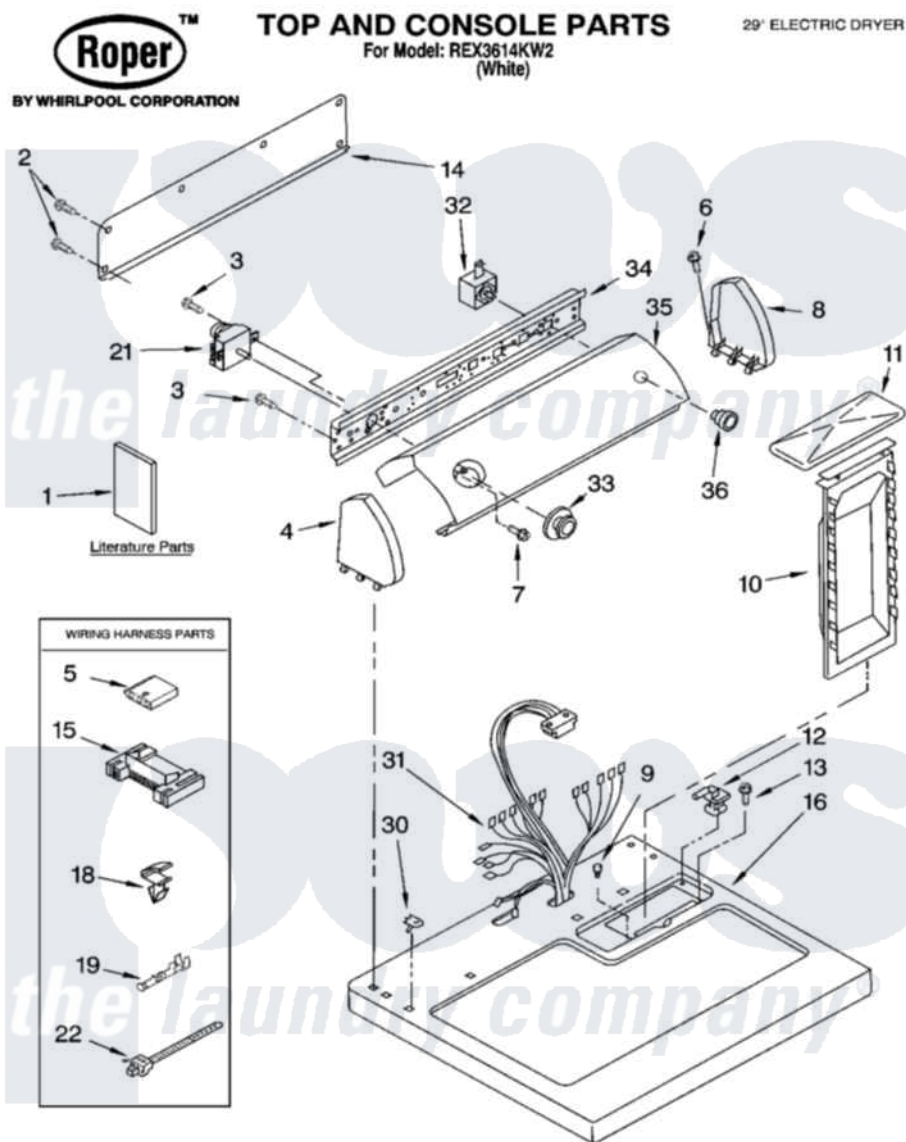

04-04 Litho in U.S.A. (djc)

1

Part No. 8180341

Whirlpool [Residential Whirlpool REX3614KW2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3405639		Not Available	Literature Parts (Guide, Use & Care)
"	LIT3397618		Not Available	Literature Parts (Instructions, Installation)
"	LIT8528187		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	LIT677818	677818L		Diy
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8274438	279961		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3400859			Screw, Grounding
8	8274435	279961		Endcap

9	297535	17258	Bumper
10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8274261		Do-It-Yourself Repair Manuals
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
18	3394427		Clip-Harness
19	94614		Terminal
21	8299780		Timer, 60 Hz
22	3391249		Cable Tie, Push Mount
30	357213		Nut, Push-In
31	8299865	8576499	Harness, Wiring
32	3977456		Switch, Push-To-Start
33	8274381	3957748	Timer Knob Assembly
34	8271418		Bracket, Control
35	3977925		Panel, Control
36	8274377		Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

