


Whirlpool REX3614PW0 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

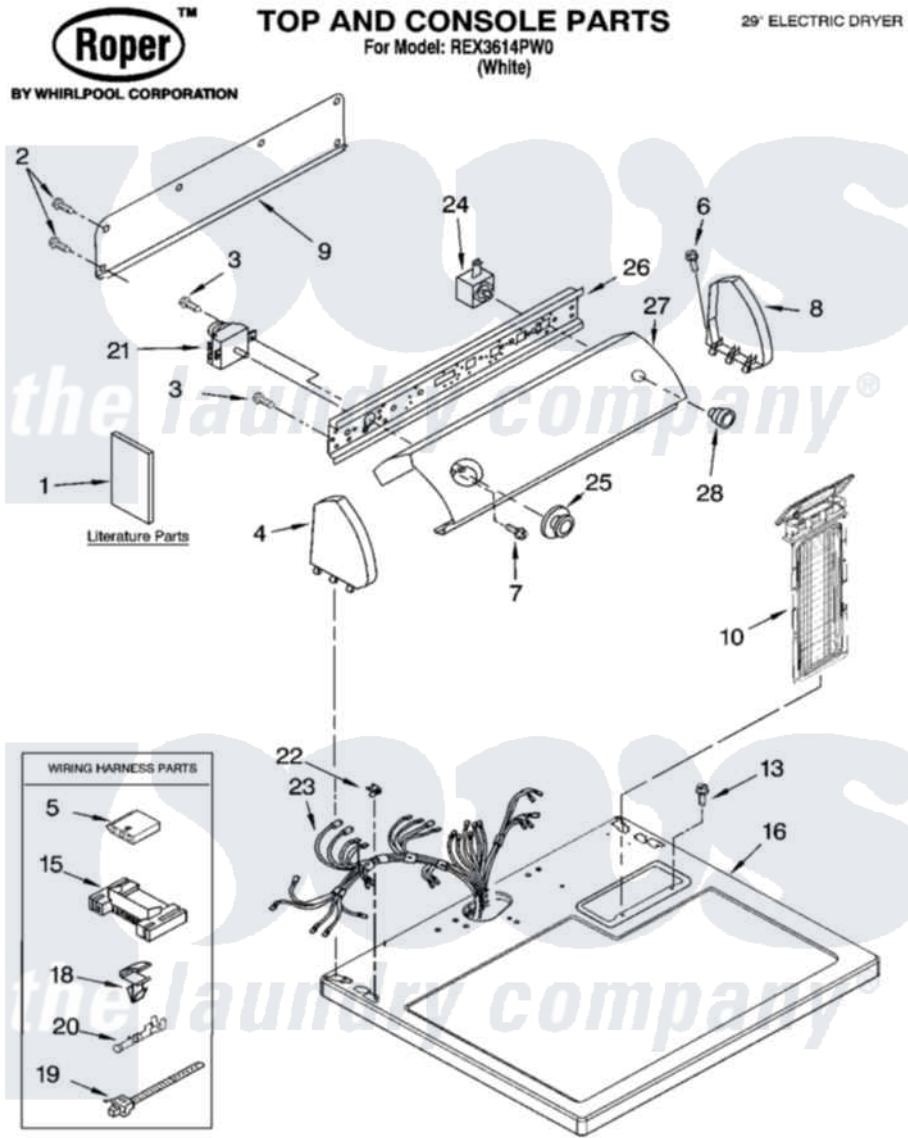

5-04 Litho in U.S.A. (djc)

1

Part No. 8180426

Whirlpool Residential Whirlpool REX3614PW0 Dryer Parts Diagram 01 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533782		Not Available	Guide, Use & Care
"	8533780		Not Available	Sheet, Cycle Feature
"	8535914		Not Available	Instructions, Installation
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8274438	279961		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3400859			Screw, Grounding
8	8274435	279961		Endcap

9	8274261		Do-It-Yourself Repair Manuals
10	8558467		Screen, Lint
13	688983	487240	Screw, For Mtg. Service Capacitor
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	8299780		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299865	8576499	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8274381	3957748	Timer Knob Assembly
26	8271418		Bracket, Control
27	3977925		Panel, Control
28	8274377		Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

Howes
the laundry company®

Howes
the laundry company®