


# Whirlpool REX3614PW2 01 - TOP AND CONSOLE PARTS

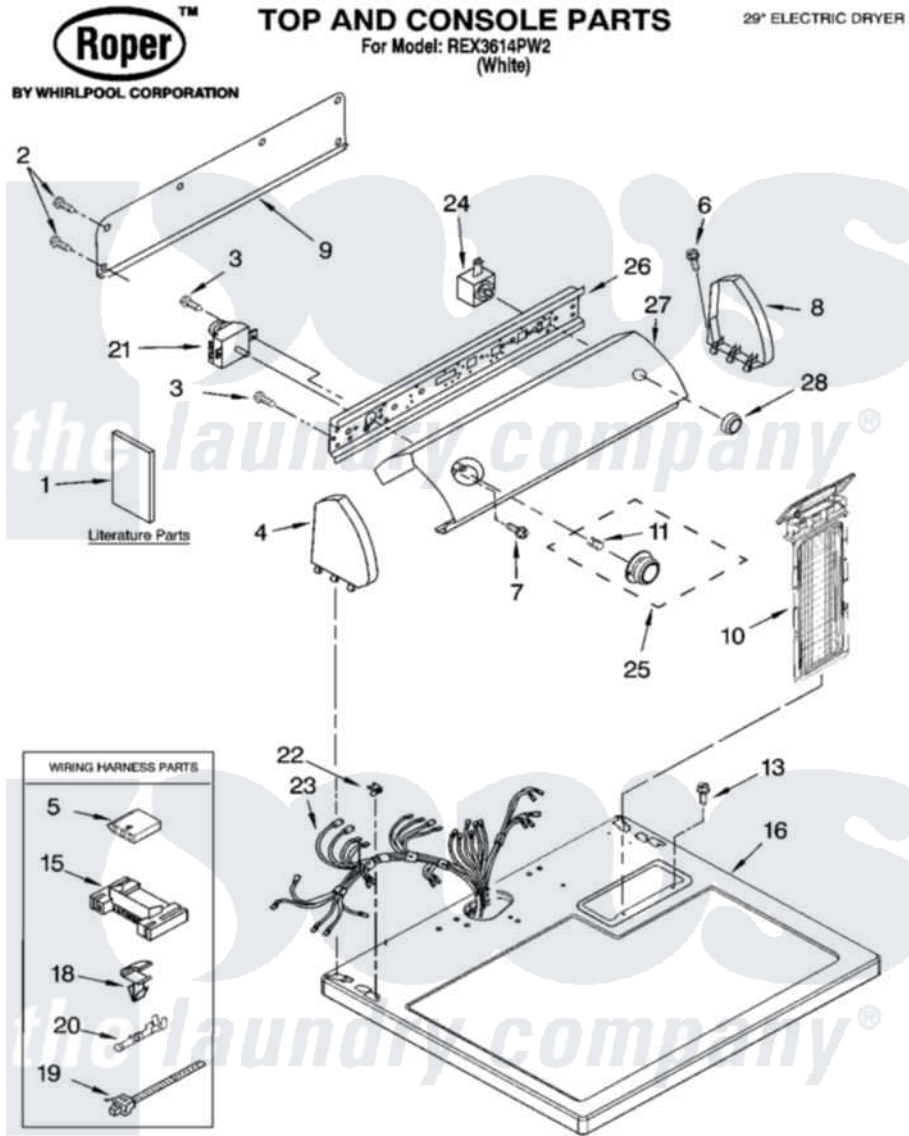

10-05 Litho in U.S.A.(LT)

1

Part No. 8180955

Whirlpool [Residential Whirlpool REX3614PW2 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578192		Not Available	Guide, Use & Care
"	8533780		Not Available	Sheet, Cycle Feature
"	8577187		Not Available	Instructions, Installation
"	<a href="#">8528187</a>			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">693995</a>			Screw, Hex Head
3	8533971	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8274438	<a href="#">279961</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	<a href="#">388326</a>			Screw, 8-18 X 1.25
7	8533951	<a href="#">3400859</a>		Screw, Grounding
8	8274435	<a href="#">279961</a>		Endcap
9	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals

10	<a href="#">8558467</a>		Screen, Lint
11	<a href="#">688805</a>		Clip, Spring Knob
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	8557930	<a href="#">8563985</a>	Top
18	<a href="#">3394427</a>		Clip-Harness
19	<a href="#">3391249</a>		Cable Tie, Push Mount
20	<a href="#">94614</a>		Terminal
21	<a href="#">8299780</a>		Timer, 60 Hz
22	<a href="#">357213</a>		Nut, Push-In
23	8299865	<a href="#">8576499</a>	Harness, Wiring
24	<a href="#">3977456</a>		Switch, Push-To-Start
25	<a href="#">3957748</a>		Timer Knob Assembly
26	<a href="#">8271418</a>		Bracket, Control
27	<a href="#">3977925</a>		Panel, Control
28	<a href="#">3957802</a>		Knob, Control

