


Whirlpool REX6634PQ0 01 - TOP AND CONSOLE PARTS

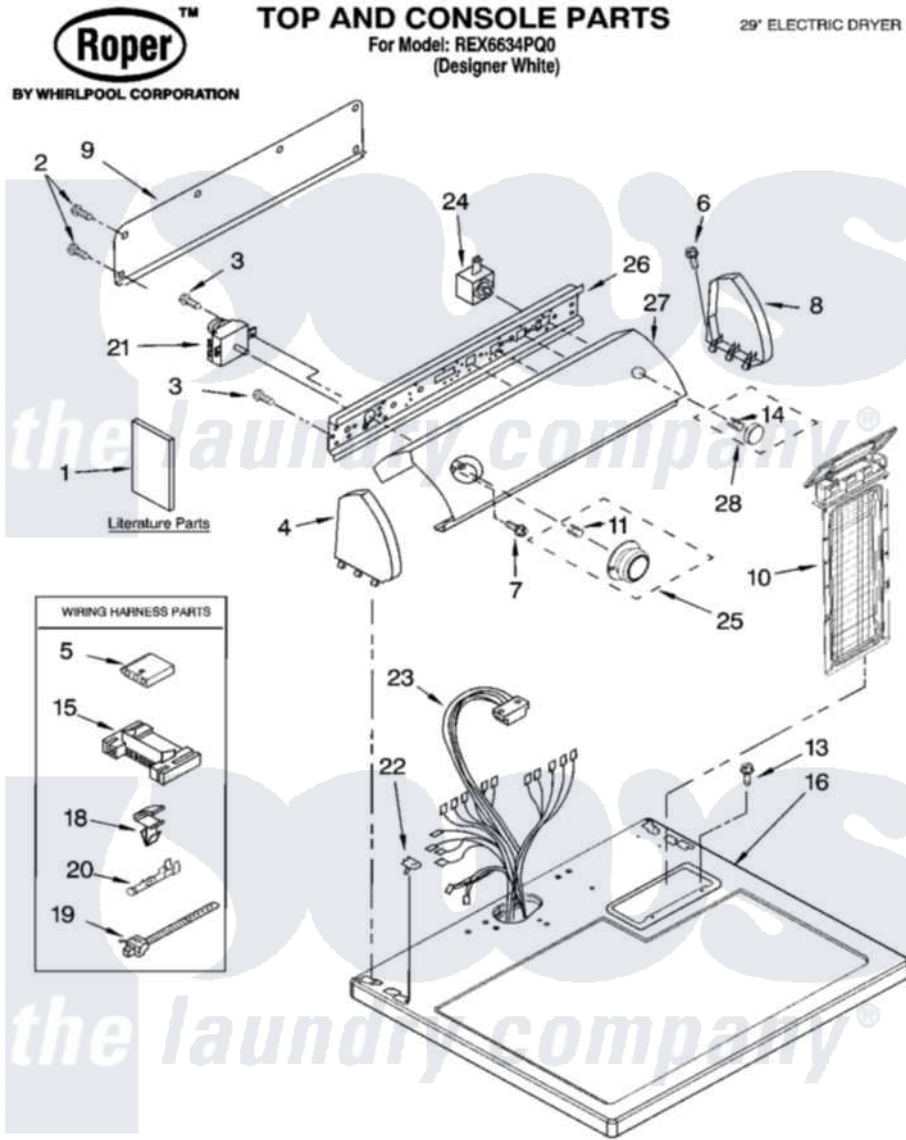

03-04 Litho in U.S.A. (djc)

1

Part No. 8180281

Whirlpool [Residential Whirlpool REX6634PQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8533782		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8533780		Not Available	Literature Parts (Sheet, Cycle Feature)
"	LIT8535914		Not Available	Literature Parts (Instructions, Installation)
"	LIT8528187		Not Available	Literature Parts (Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	3400859			Screw, Grounding

8	8274434	279960	Endcap
9	8274261		Do-It-Yourself Repair Manuals
10	8558467		Screen, Lint
11	688805		Clip, Spring Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8536939		Clip, Knob
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	8299781		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299867	W10450292	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	8557455		Timer Knob Assembly
26	8271418		Bracket, Control
27	3977945		Panel, Control
28	8557461		Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]