


Whirlpool RGD4340SQ1 01 - TOP AND CONSOLE PARTS

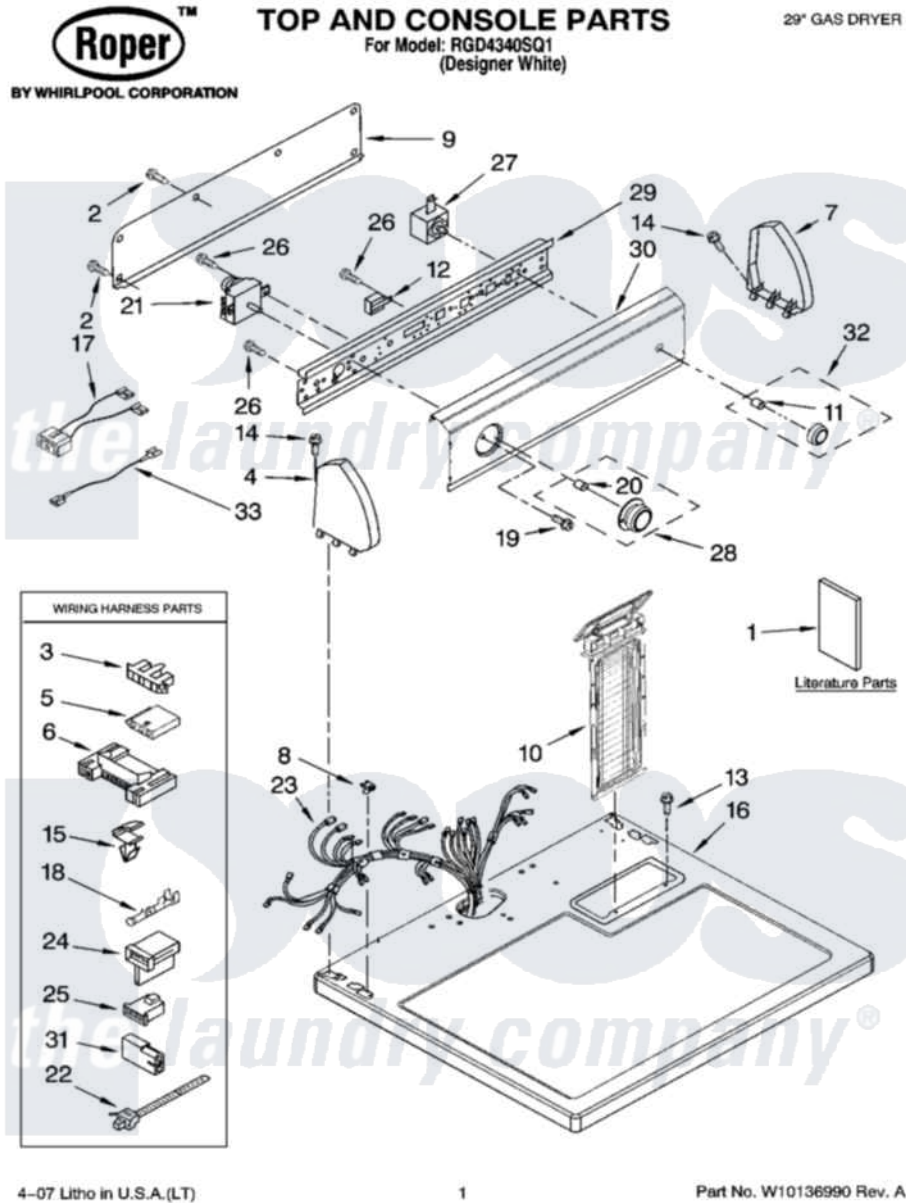

4-07 Litho in U.S.A.(LT)

1

Part No. W10136990 Rev. A

Whirlpool [Residential Whirlpool RGD4340SQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578192		Not Available	Guide, Use & Care
"	8562589		Not Available	Instructions, Installation
"	8576793		Not Available	Wiring Diagram
"	W10043010		Not Available	Sheet, Cycle Feature
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3397269			Connector, Timer
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	3395683			Receptacle, Multi-Terminal
7	8274434	279960		Endcap
8	357213			Nut, Push-In
9	8274261			Do-It-Yourself Repair Manuals

10	8558467		Screen, Lint
11	8536939		Clip, Knob
12	694419		Mini-Buzzer
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3394427		Clip-Harness
16	8557930	8563985	Top
17	3393815	3393812	Wire, Jumper
18	94614		Terminal
19	8533951	3400859	Screw, Grounding
20	688805		Clip, Spring Knob
21	8299764		Timer Assembly, 60 Hz
22	3391249		Cable Tie, Push Mount
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
26	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
27	3977456		Switch, Push-To-Start
28	8538953		Timer Knob Assembly
29	8271418		Bracket, Control
30	8579655		Panel, Control
31	717252		Receptacle, Terminal
32	8538959		Knob, Push-To-Start
33	3393814	Not Available	Wire, Jumper (Black)

the laundry company®

the laundry company®