


# Whirlpool RGX3519PQ0 01 - TOP AND CONSOLE PARTS

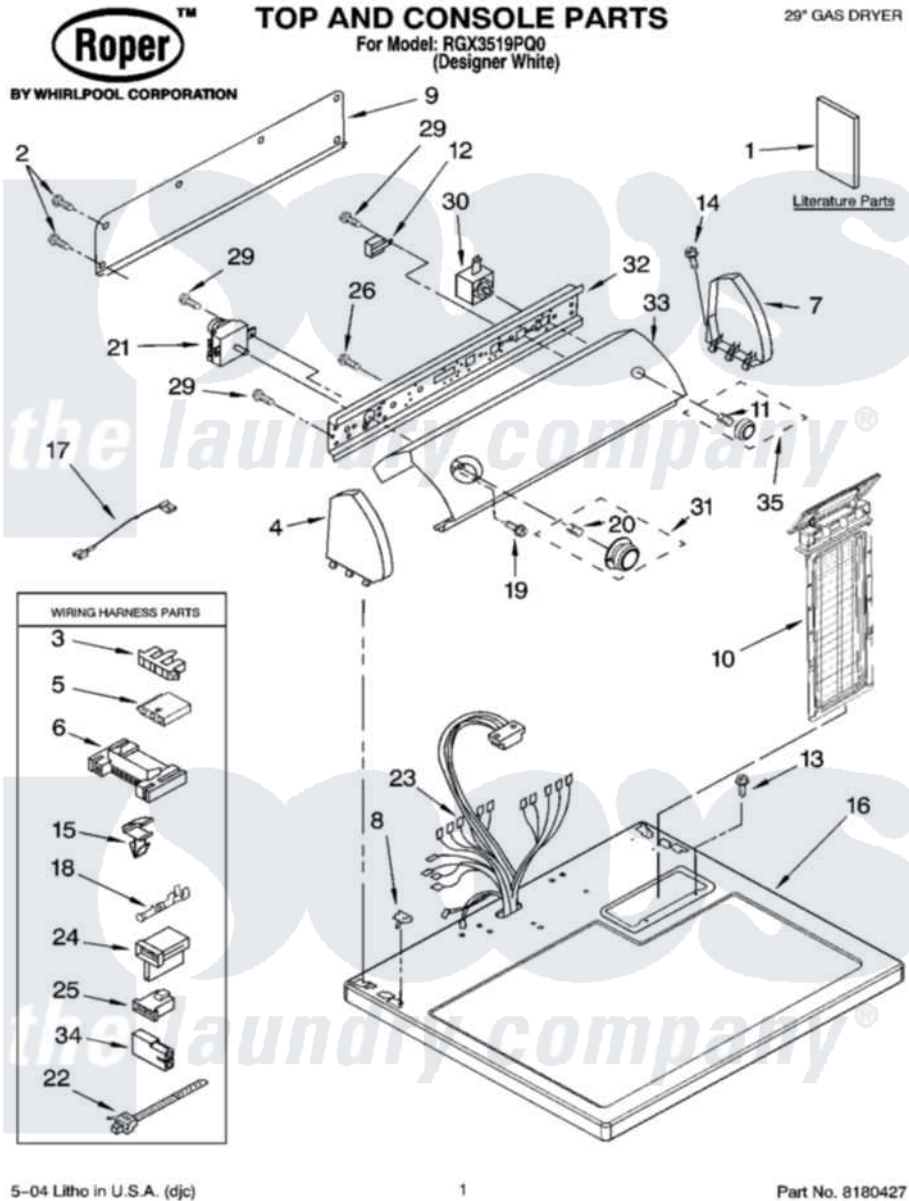

5-04 Litho in U.S.A. (djc)

1

Part No. 8180427

Whirlpool [Residential Whirlpool RGX3519PQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533782		Not Available	Guide, Use & Care
"	8562589		Not Available	Instructions, Installation
"	8533780		Not Available	Sheet, Cycle Feature
"	<a href="#">8528187</a>			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	<a href="#">693995</a>			Screw, Hex Head
3	<a href="#">3397269</a>			Connector, Timer
4	8274437	<a href="#">279960</a>		Endcap
5	<a href="#">3936144</a>			Do-It-Yourself Repair Manuals
6	<a href="#">3395683</a>			Receptacle, Multi-Terminal
7	8274434	<a href="#">279960</a>		Endcap
8	<a href="#">357213</a>			Nut, Push-In
9	<a href="#">8274261</a>			Do-It-Yourself Repair Manuals

10	<a href="#">8558467</a>		Screen, Lint
11	<a href="#">8536939</a>		Clip, Knob
12	<a href="#">694419</a>		Mini-Buzzer
13	688983	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
14	<a href="#">388326</a>		Screw, 8-18 X 1.25
15	<a href="#">3394427</a>		Clip-Harness
16	8557930	<a href="#">8563985</a>	Top
17	3393814	Not Available	Wire, Jumper (Black)
"	3393815	<a href="#">3393812</a>	Wire, Jumper
18	<a href="#">94614</a>		Terminal
19	8533951	<a href="#">3400859</a>	Screw, Grounding
20	<a href="#">688805</a>		Clip, Spring Knob
21	<a href="#">8299763</a>		Timer Assembly, 60 Hz
22	<a href="#">3391249</a>		Cable Tie, Push Mount
23	<a href="#">8299875</a>		Harness, Wiring
24	<a href="#">3403499</a>		Connector, 2-Position
25	<a href="#">3403498</a>		Connector, 3-Position
26	8533971	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
29	3390646	<a href="#">W10139210</a>	Screw, 8-18 X 5/16
30	<a href="#">3977456</a>		Switch, Push-To-Start
31	<a href="#">8557455</a>		Timer Knob Assembly
32	<a href="#">8271418</a>		Bracket, Control
33	<a href="#">3977942</a>		Panel, Control
34	<a href="#">717252</a>		Receptacle, Terminal
35	<a href="#">8557461</a>		Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	<a href="#">4392065</a>	Kit, Dryer Repair
"	<a href="#">8522199</a>		Accessory Parts
"	<a href="#">346764</a>		Kit, Hold Down
"	<a href="#">689790</a>		Dry Rack
"	<a href="#">72017</a>		Paint, Touch-Up
"	<a href="#">350930</a>		Paint, Pressurized Spray B
"	<a href="#">350938</a>		Paint, Pressurized Spray B
"	<a href="#">799344</a>		Paint, Touch-Up )

