


# Whirlpool RGX3519PQ0 02 - CABINET PARTS

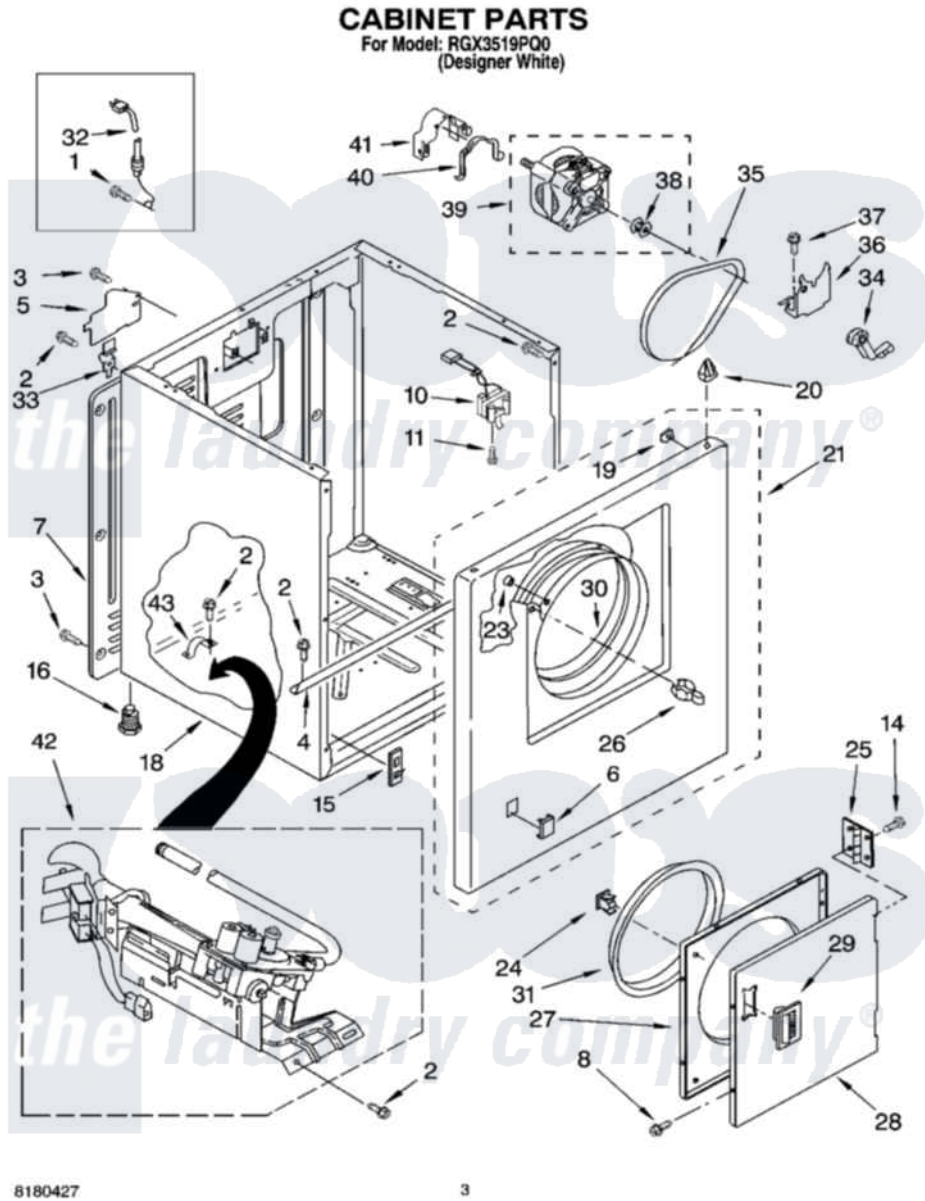

Whirlpool [Residential Whirlpool RGX3519PQ0 Dryer Parts](#) Parts Diagram 02 - CABINET PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	697776	<a href="#">4331106</a>		Screw, No.10-32 X 7/16
2	343641	<a href="#">681414</a>		Screw, 10AB X 1/2
3	<a href="#">693995</a>			Screw, Hex Head
4	<a href="#">8541400</a>			Bracket, Cabinet
5	<a href="#">3396795</a>			Cover, Terminal Block
6	<a href="#">3394975</a>			Plug, Front Panel
7	3396807	<a href="#">280040</a>		Panel-Rear
8	342055	<a href="#">488627</a>		Screw
10	<a href="#">3406102</a>			Door Switch Assembly
11	697773	<a href="#">3395530</a>		Screw
14	<a href="#">694091</a>			Trim, Side Right Hand
15	<a href="#">3394083</a>			Clip, Front Panel
16	3392100	<a href="#">49621</a>		Feet-Leveling
18	8530603	<a href="#">8533643</a>		Cabinet
19	<a href="#">98234</a>			Clip, U-Bend
20	690363	<a href="#">18776</a>		Lock, Front Top

21	3394895	<a href="#">280022</a>	Panel
23	685203	<a href="#">279220</a>	Clip
24	<a href="#">3389441</a>		Door Catch Assembly
25	<a href="#">348023</a>		Hinge And Pin Assembly
26	696144	<a href="#">279570</a>	Latch
27	695656	<a href="#">280077</a>	Door
28	<a href="#">348205</a>		Door, Front
29	<a href="#">686711</a>		Handle, Door
30	8066123	<a href="#">279264</a>	Air Channel Box
31	<a href="#">3390734</a>		Seal, Door
32	344020	<a href="#">3401402</a>	Cord, Power
33	238088	<a href="#">8066217</a>	Hinge, Top
34	<a href="#">691366</a>		Idler And Pulley Assembly
35	8066065	<a href="#">341241</a>	Belt
36	<a href="#">348780</a>		Base, Motor
37	<a href="#">3400500</a>		Bolt, 3405245 5/16-18 X 3/4
38	3394341	<a href="#">W10299847</a>	Pulley-Motor
39	8538262	<a href="#">279827</a>	Motor-Drve
40	<a href="#">660658</a>		Clamp, Motor Mounting 343481 685441
41	<a href="#">3404162</a>		Clamp, Motor
42	8318272	<a href="#">W10465748</a>	Burner-Gas
43	<a href="#">341029</a>		Clamp, Pipe Door Spring

