


Whirlpool RGX4634KQ3 01 - TOP AND CONSOLE PARTS

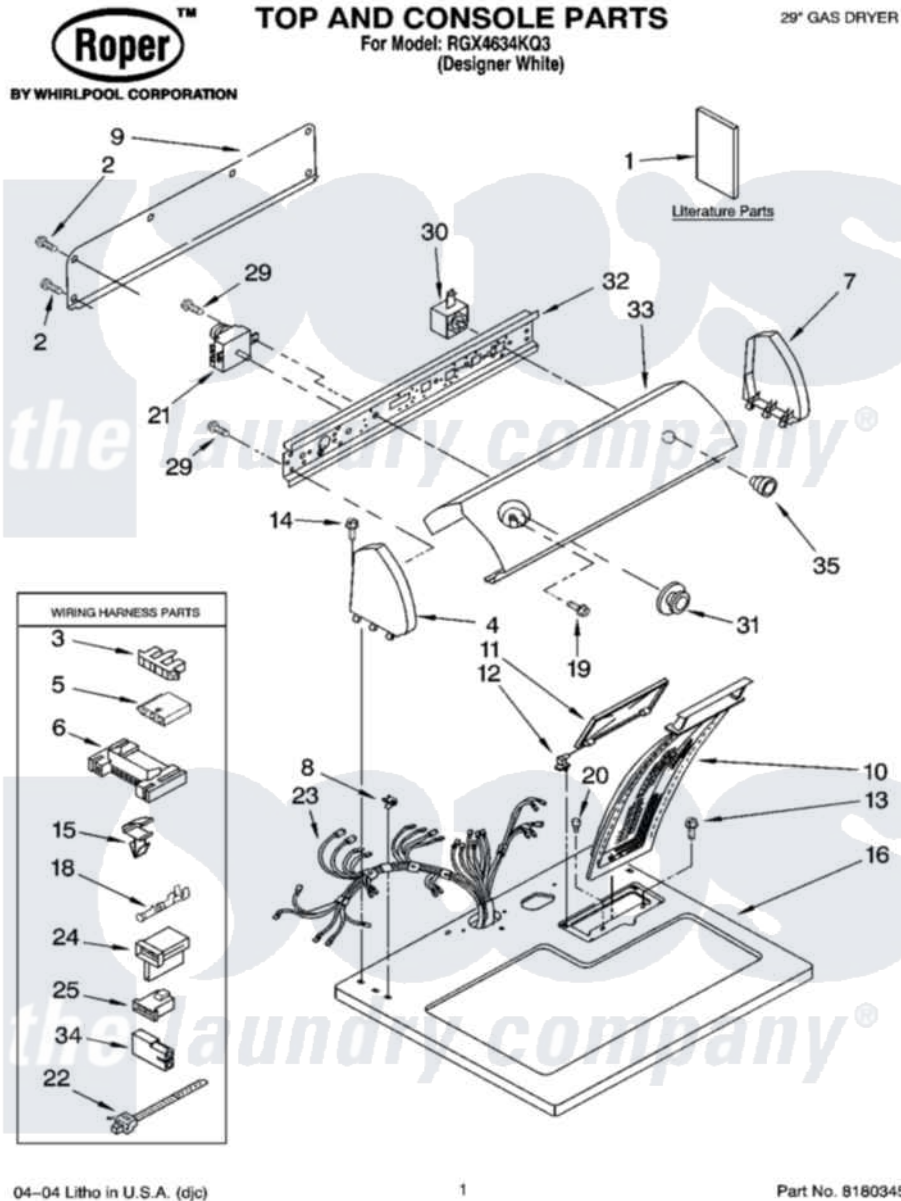

04-04 Litho in U.S.A. (djc)

1

Part No. 8180345

[Whirlpool Residential Whirlpool RGX4634KQ3 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT3978913		Not Available	Literature Parts (Guide, Use & Care)
"	LIT3978907		Not Available	Instructions, Installation
"	LIT8528188		Not Available	Literature Parts (Label, Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3397269			Connector, Timer
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	3395683			Receptacle, Multi-Terminal
7	8274434	279960		Endcap
8	357213			Nut, Push-In
9	8274261			Do-It-Yourself Repair Manuals

10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3394427		Clip-Harness
16	8271390	8521918	Top
18	94614		Terminal
19	3400859		Screw, Grounding
20	297535	17258	Bumper
21	8299764		Timer Assembly, 60 Hz
22	3391249		Cable Tie, Push Mount
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Position
25	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
30	3977456		Switch, Push-To-Start
31	8274380	3957749	Knob
32	8271418		Bracket, Control
33	3977926		Panel, Control
34	717252		Receptacle, Terminal
35	8274376	3957800	Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	346764		Kit, Hold Down
"	689790		Dry Rack
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

