


Whirlpool RGX5634PQ0 01 - TOP AND CONSOLE PARTS AND OPTIONAL PARTS (NOT INCLUDED)

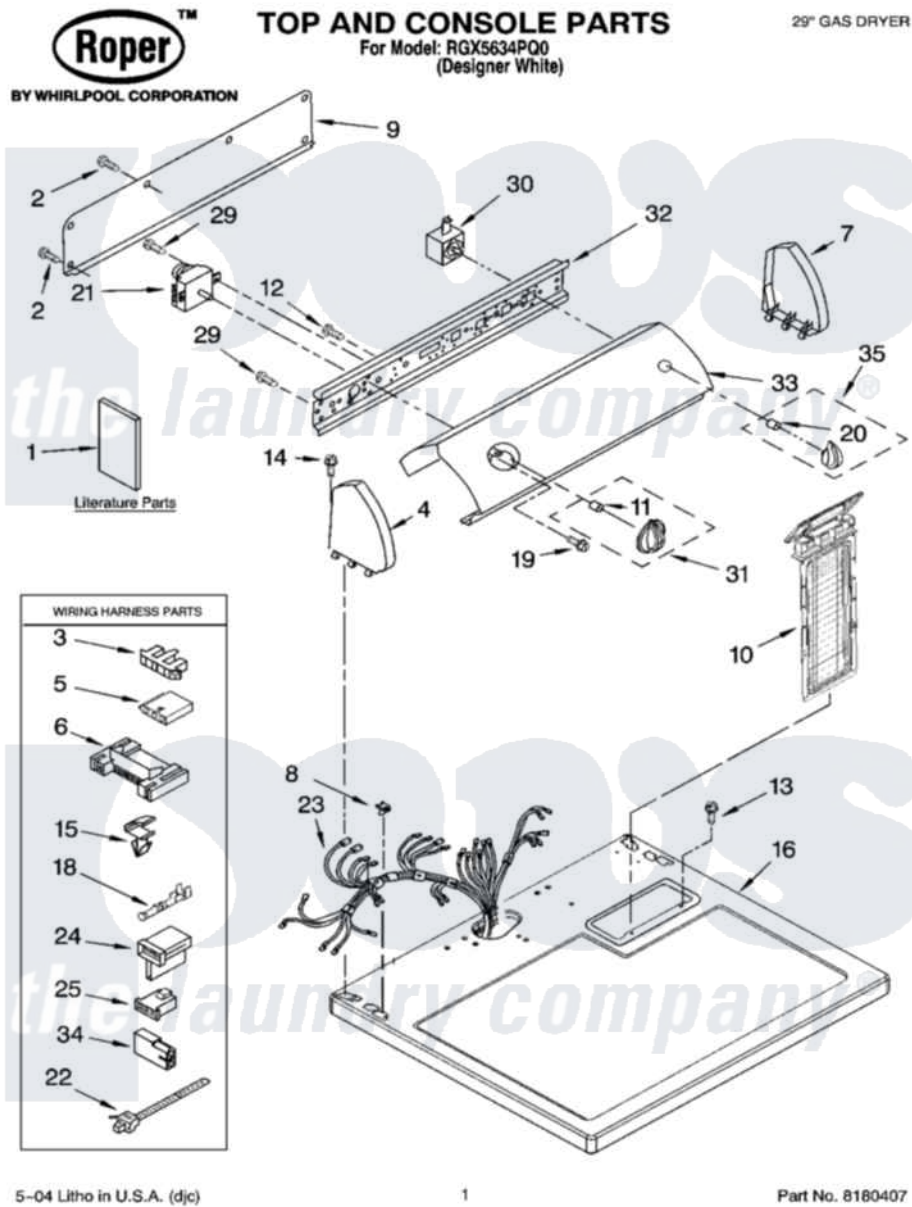

5-04 Litho in U.S.A. (djc)

1

Part No. 8180407

Whirlpool Residential Whirlpool RGX5634PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS AND OPTIONAL PARTS (NOT INCLUDED)
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8533782		Not Available	Guide, Use & Care
"	8562584		Not Available	Instructions, Installation
"	8533780		Not Available	Sheet, Cycle Feature
"	8528188		Not Available	Wiring Diagram
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3397269			Connector, Timer
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	3395683			Receptacle, Multi-Terminal
7	8274434	279960		Endcap

8	357213		Nut, Push-In
9	8274261		Do-It-Yourself Repair Manuals
10	8558467		Screen, Lint
11	688805		Clip, Spring Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3394427		Clip-Harness
16	8557930	8563985	Top
18	94614		Terminal
19	8533951	3400859	Screw, Grounding
20	8536939		Clip, Knob
21	8299764		Timer Assembly, 60 Hz
22	3391249		Cable Tie, Push Mount
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
30	3977456		Switch, Push-To-Start
31	8557455		Timer Knob Assembly
32	8271418		Bracket, Control
33	3977944	Not Available	Panel, Control
34	717252		Receptacle, Terminal
35	8557461		Knob, Push-To-Start
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	346764		Kit, Hold Down
"	689790		Dry Rack
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

