


Whirlpool RTW4100SQ3 03 - AGITATOR, BASKET AND TUB PARTS

AGITATOR, BASKET AND TUB PARTS

For Model: RTW4100SQ3

(White)

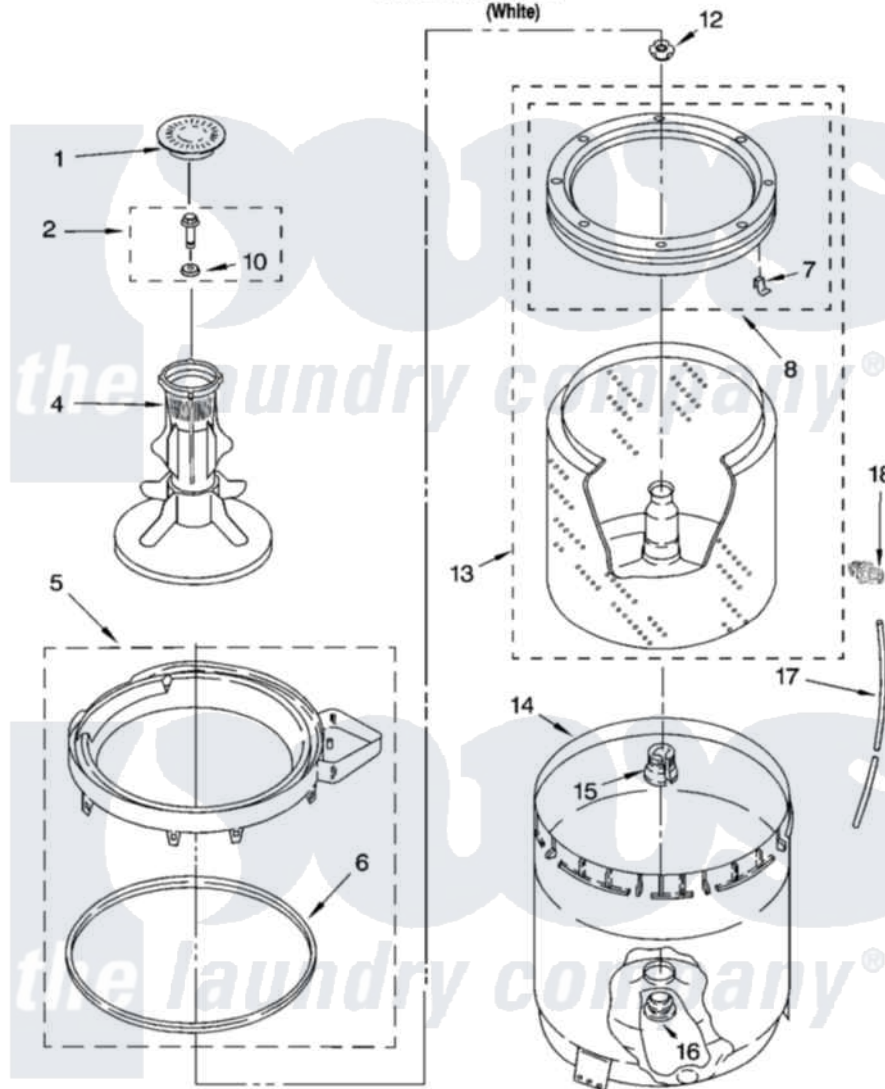

W101231535

5

Whirlpool [Residential Whirlpool RTW4100SQ3 Washer Parts](#) Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3352483			Cap, Agitator
2	358237			Screw And Washer
4	63377			Agitator
5	3360611			Tub Ring And Gasket Assembly
6	3359586			Gasket, Tub Ring
7	8519815			Clip, Balance Ring
8	3956205			Balance Ring
10	3949550			Washer
12	21366			Nut, Spanner
13	3956206	3956207		Basket And Balance Ring
14	63125			Tub
15	389140			Tub Block, Basket Drive
16	383727			Gasket, Centerpodt
17	3347780	353244		Hose, Pressure Switch
18	2219077			Clip, Pressure Switch Hose