


# Whirlpool RTW4440VQ1 03 - AGITATOR, BASKET AND TUB PARTS

## AGITATOR, BASKET AND TUB PARTS

For Model: RTW4440VQ1  
(White)

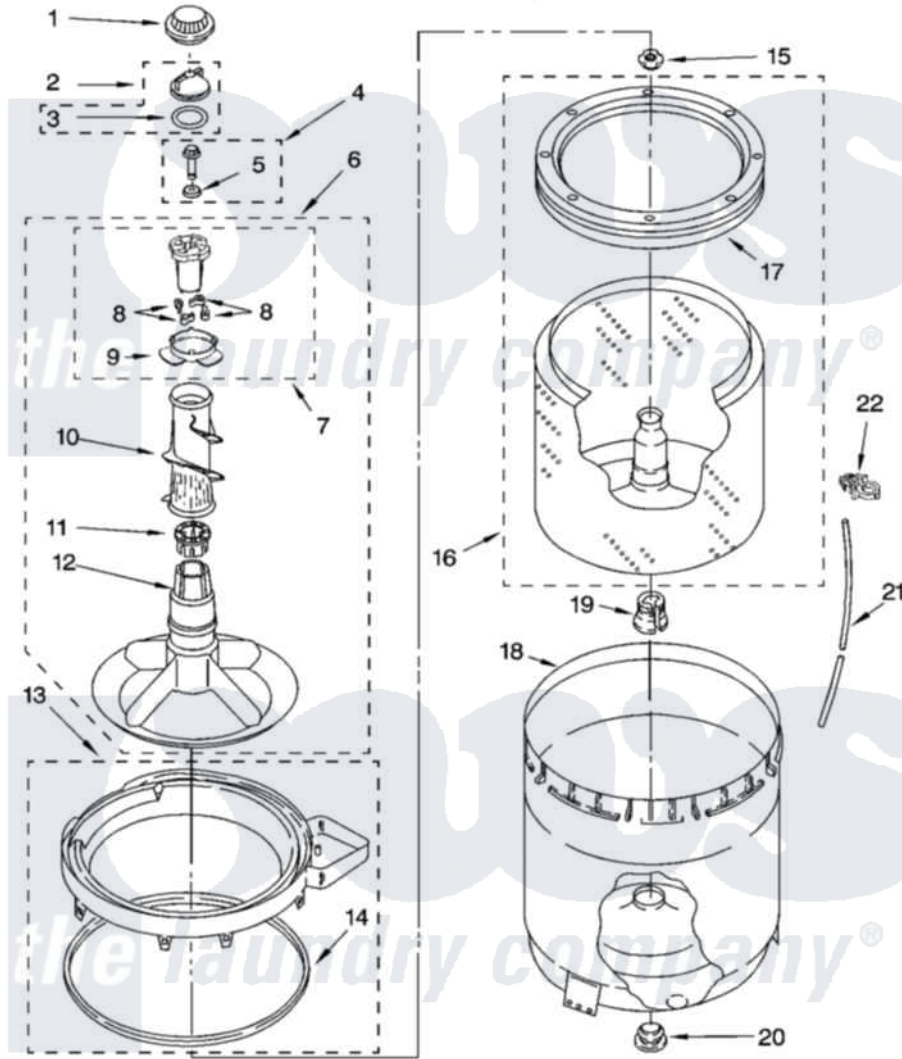

W10246387

5

Whirlpool Residential Whirlpool RTW4440VQ1 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	<a href="#">3355758</a>			Cap, Agitator
2	3354733	<a href="#">W10074580</a>		Cap, Barrier
3	<a href="#">W10072840</a>			Fabric Softener
4	<a href="#">358237</a>			Screw And Washer
5	<a href="#">3949550</a>			Washer
6	3348117	<a href="#">285565</a>		Agitator
7	3363663	<a href="#">285811</a>		Cam-Agitator
8	3366877	<a href="#">80040</a>		Dog-Agitator
9	<a href="#">3363661</a>			Bearing, Driven Cam
10	<a href="#">3348752</a>			Mover, Clothes
11	3350389	<a href="#">285587</a>		Washer
12	<a href="#">3347288</a>			Agitator
13	8528150	<a href="#">W10445870</a>		Ring-Tub
14	<a href="#">3976308</a>			Gasket, Tub Ring
15	<a href="#">21366</a>			Nut, Spanner
16	8526017	<a href="#">W10389329</a>		Clothes Container, Assembly

17	<a href="#">387240</a>		Ring, Balance
18	<a href="#">63849</a>		Strain Relief, Power Cord
19	<a href="#">389140</a>		Tub Block, Basket Drive
20	<a href="#">383727</a>		Gasket, Centerpodt
21	3347780	<a href="#">353244</a>	Hose, Pressure Switch
22	<a href="#">2219077</a>		Clip, Pressure Switch Hose

