


Whirlpool SAWS800MQ0 02 - CONTROLS AND REAR PANEL PARTS

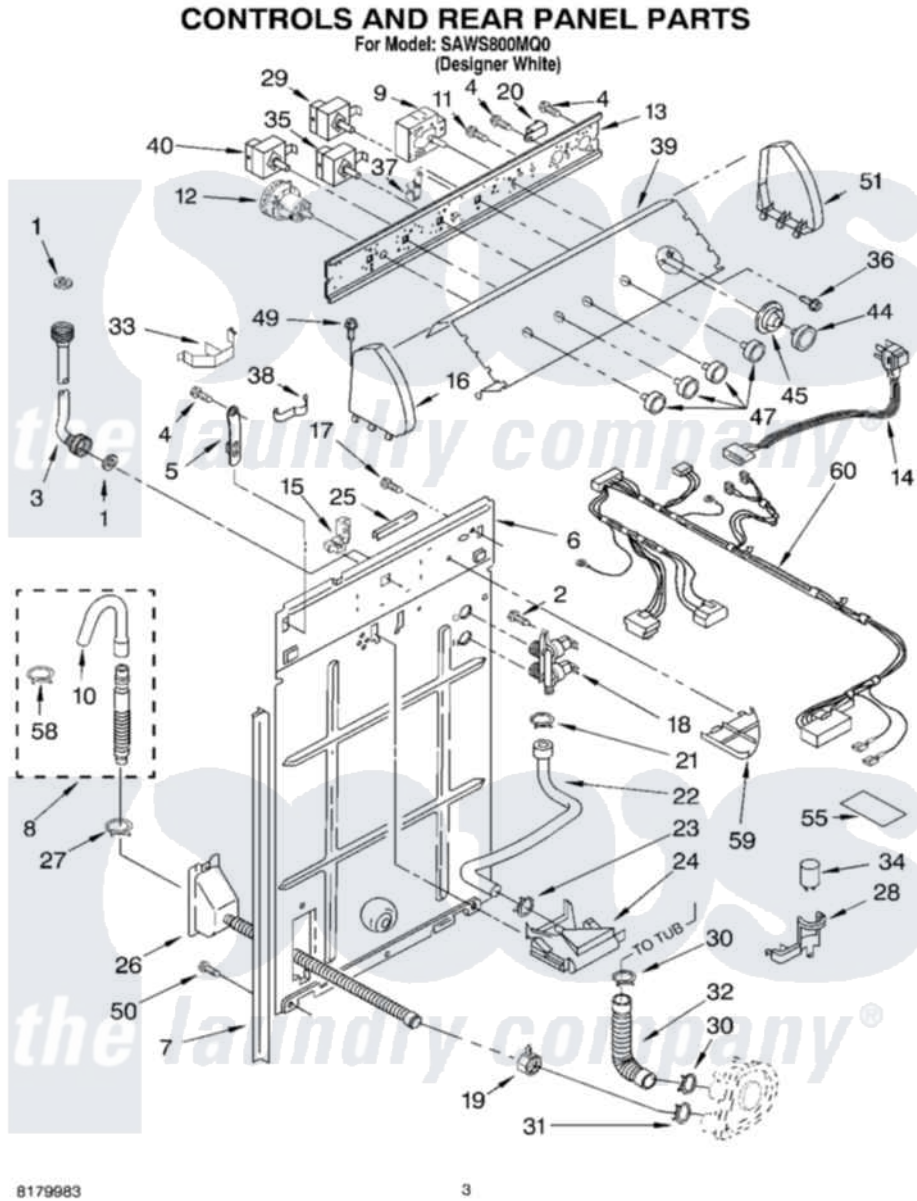

Whirlpool [Residential Whirlpool SAWS800MQ0 Washer Parts](#) Parts Diagram 02 - CONTROLS AND REAR PANEL PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	3976300	16123		Washer Inlet-Hose Miscellaneous Parts Must be Ordered Separately.
2	9740848			Screw, Mixing Valve Mounting
3	3949374	89503		Hose-Inlet
"	3949375	89503		Hose-Inlet
4	90767			Screw, 8A X 3/8 HeX Washer Head Tapping
5	8318255	8568314		Strap, Console
6	3357978			Panel, Rear
7	62747			Pad, Rear Panel
8	3951609	285664		Hose
"	661577	285666		Hose
"	3357090	285702		Hose
9	8541270			Timer, Control
10	3357027			Nozzle, Hose Drain
11	3400073			Screw, Ground

12	3366845	W10339326	Switch-WL
13	3948608		Bracket, Control
14	661661	285800	Cord-Power
15	3952821	285777	Relief-Str
16	8274437	279960	Endcap
17	3351614		Screw, Gearcase Cover Mounting
18	3952164	285805	Valve-Inlet
19	3976395		Restraint, Hose
20	694419		Mini-Buzzer
21	370451	596669	Clamp, Manifold
22	3357328		Hose, Vacuum Break
23	371503	596669	Clamp, Manifold
24	387606	3360977	Break-Vac
25	303294	3367669	Protector, Edge
26	8317940	W10358149	Drain Hose Assembly
27	3366912	356138	Clamp, Hose
28	8318201	8318046	Clip, Capacitor
29	3949180	W10168257	Switch, Rotary
30	3363366	616099	Clamp
31	8317496	285655	Clamp, Hose
32	3951449	285871	Hose
33	8055003		Clip, Harness And Pressure Switch
34	661606	8572717	Capacitor, Motor Start
35	3949187	W10168262	Switch, Rotary
36	3400818		Screw, Timer Mounting
37	8317975		Restraint, Harness
38	3347812	8528351	Clip
39	3956220		Panel, Console
40	661614		Switch, Water Temperature
44	3951026	3957821	Knob, Timer
45	3950762	3957841	Dial, Timer
47	3950759	3957796	Knob, Control
49	388326		Screw, 8-18 X 1.25
50	62863	3390631	Screw, 10-16 X 3/8
51	8274434	279960	Endcap
55	3976286		Shield, Capacitor
58	3366913	3357331	Clamp, Drain
59	3348424	8539874	Shield, Suds
60	3956538		Harness, Wiring

the laundry company[®]