


Whirlpool SGDX600MQ1 01 - TOP AND CONSOLE PARTS

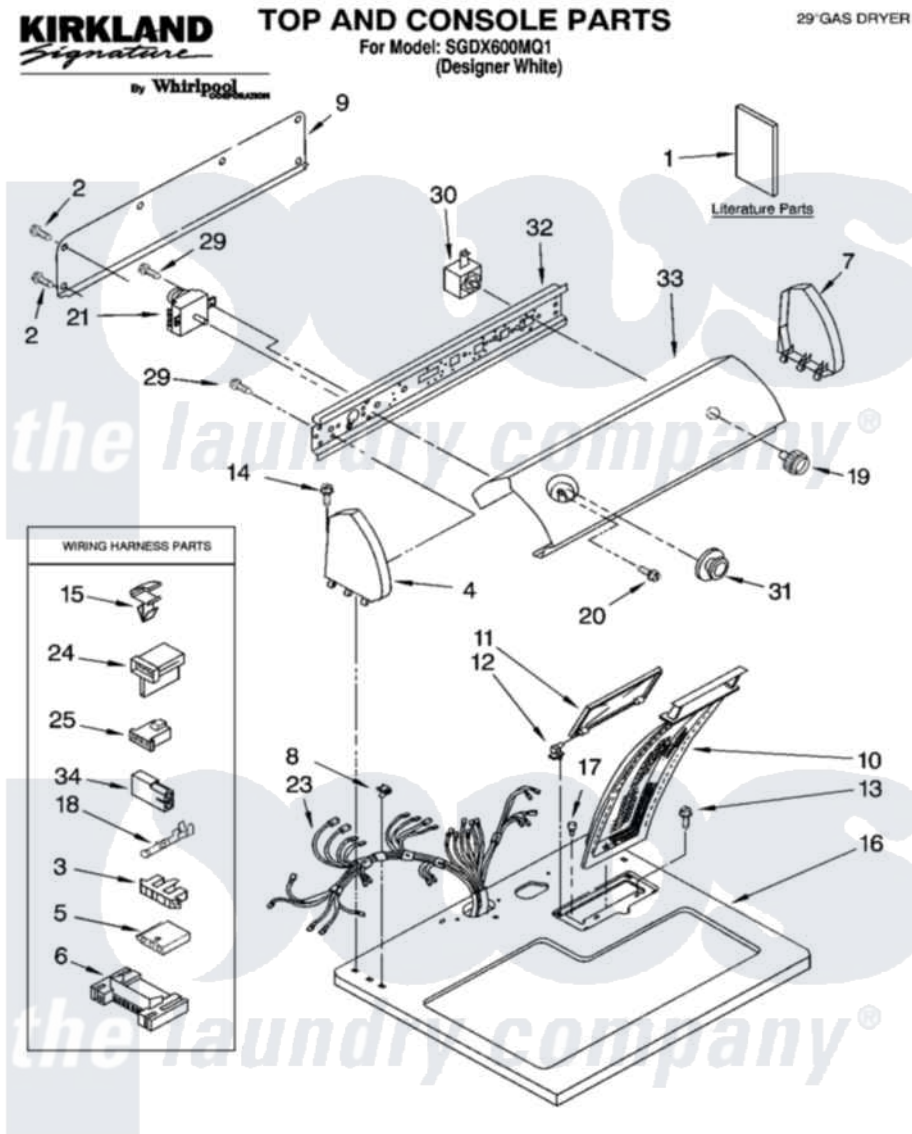

04-04 Litho in U.S.A. (djc)

1

Part No. 8180350

Whirlpool [Residential Whirlpool SGDX600MQ1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	LIT8535911		Not Available	Literature Parts (Guide, Use & Care)
"	LIT8535908		Not Available	Literature Parts (Sheet, Cycle Feature)
"	LIT8535915		Not Available	Literature Parts (Instructions, Installation)
"	LIT8528188		Not Available	Literature Parts (Label, Wiring Diagram)
"	N/A		Not Available	Following May Be Purchased
"	N/A		Not Available	DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3397269			Connector, Timer
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	3395683			Receptacle, Multi-Terminal
7	8274434	279960		Endcap

8	357213		Nut, Push-In
9	8274261		Do-It-Yourself Repair Manuals
10	339392		Screen, Lint
11	8283378		Cover, Lint Screen
12	3978605	W10044470	Hinge, RH
"	3978606		Hinge, Lint Lid
13	688983	487240	Screw, For Mtg. Service Capacitor
14	388326		Screw, 8-18 X 1.25
15	3394427		Clip-Harness
16	8271390	8521918	Top
17	297535	17258	Bumper
18	94614		Terminal
19	3406133	3957800	Knob, Push-To-Start
20	3400859		Screw, Grounding
21	8299764		Timer Assembly, 60 Hz
23	8299876		Harness, Wiring
24	3403499		Connector, 2-Postion
25	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
30	3977456		Switch, Push-To-Start
31	8283182	3957746	Knob
32	8271418		Bracket, Control
33	3977939		Panel, Control
34	717252		Receptacle, Terminal
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	346764		Kit, Hold Down
"	689790		Dry Rack
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

