


Whirlpool TAWS800JQ3 03 - AGITATOR, BASKET AND TUB PARTS

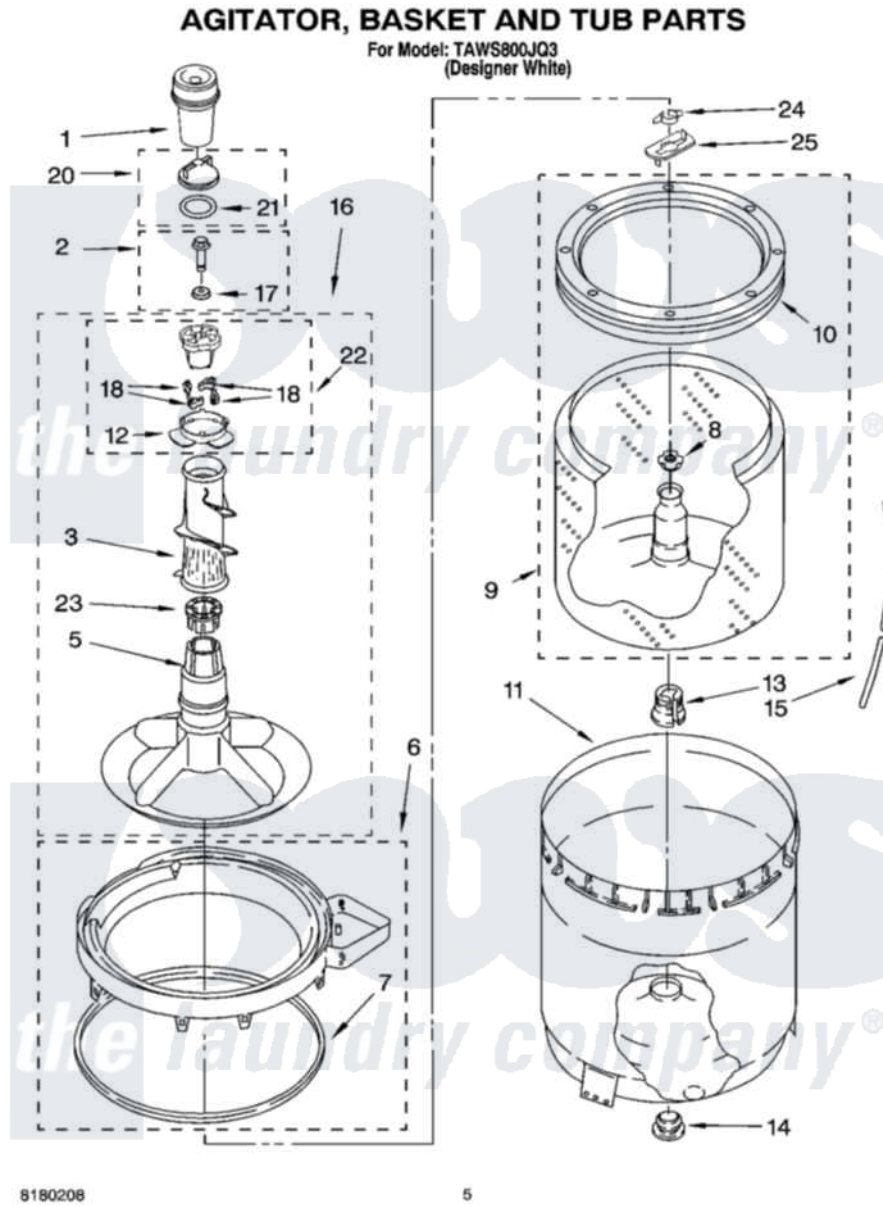

8180208

5

Whirlpool Residential Whirlpool TAWS800JQ3 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	63580			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	3348752			Mover, Clothes
5	3347288			Agitator
6	8528150	W10445870		Ring-Tub
7	3976308			Gasket, Tub Ring
8	21366			Nut, Spanner
9	8526016	W10389328		Clothes Container, Assembly
10	8519788	387240		Ring, Balance
11	63849			Strain Relief, Power Cord
12	3363661			Bearing, Driven Cam
13	389140			Tub Block, Basket Drive
14	383727			Gasket, Centerpod
15	3347780	353244		Hose, Pressure Switch
16	3348117	285565		Agitator
17	3949550			Washer

18	3366877	80040	Dog-Agitator
20	3354733	W10074580	Cap, Barrier
21	3348855	W10072840	Fabric Softener
22	3363663	285811	Cam-Agitator
23	3350389	285587	Washer
24	3354845		Clip, Agitator
25	3355921	8543666	Washer, Agitator

