


Whirlpool TAWS850PQ2 03 - AGITATOR, BASKET AND TUB PARTS

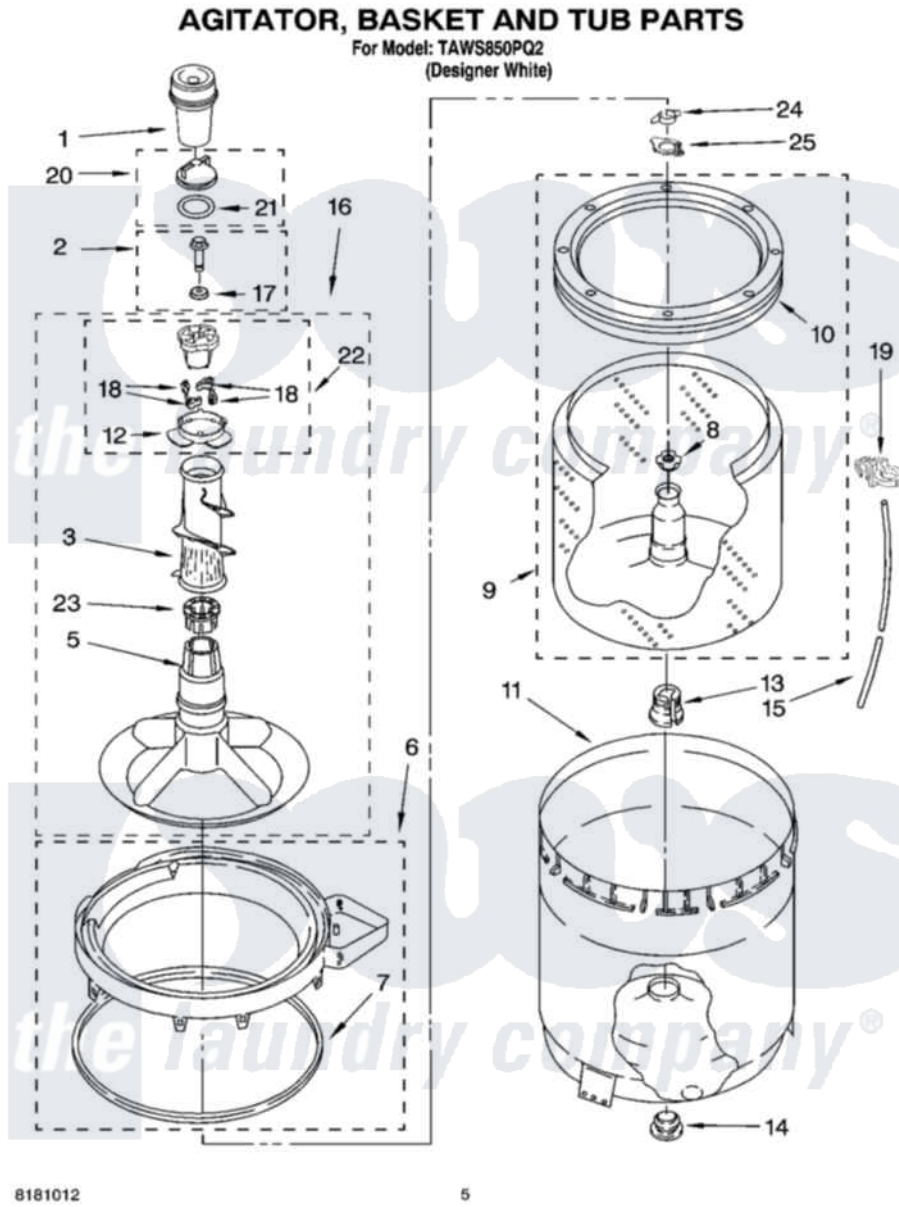

Whirlpool Residential Whirlpool TAWS850PQ2 Washer Parts Parts Diagram 03 - AGITATOR, BASKET AND TUB PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	63580			Dispenser, Fabric Softener
2	358237			Screw And Washer
3	3363003			Mover, Clothes
5	3951632			Agitator
6	8528150	W10445870		Ring-Tub
7	3976308			Gasket, Tub Ring
8	21366			Nut, Spanner
9	8526016	W10389328		Clothes Container, Assembly
10	8519788	387240		Ring, Balance
11	63849			Strain Relief, Power Cord
12	3952374			Bearing, Driven Cam
13	389140			Tub Block, Basket Drive
14	383727			Gasket, Centerpod
15	3347780	353244		Hose, Pressure Switch
16	3951744			Agitator Assembly
17	3949550			Washer

18	3366877	80040	Dog-Agitator
19	2219077		Clip, Pressure Switch Hose
20	3354733	W10074580	Cap, Barrier
21	3348855	W10072840	Fabric Softener
22	3951682	285809	Cam-Agitator
23	3951608		Spacer, Thrust
24	3354845		Clip, Agitator
25	8543666		Washer, Agitator

