


Whirlpool TEDS840JQ3 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

TOP AND CONSOLE PARTS

For Model: TEDS840JQ3
(Designer White)

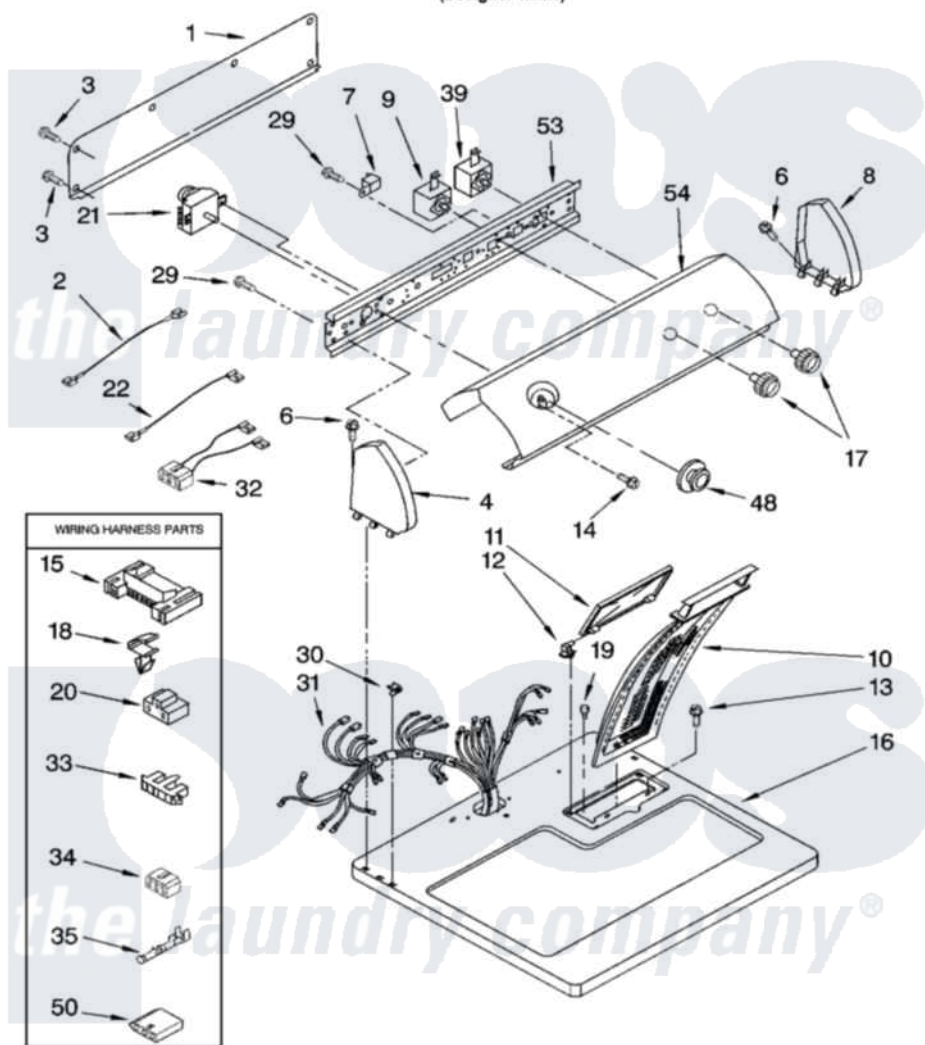

8180352

3

Whirlpool [Residential Whirlpool TEDS840JQ3 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8274437	279960		Endcap
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8274434	279960		Endcap
9	3399639			Switch, Rotary Temperature
10	349639			HANdle And Lint Screen Assembly
11	8283378			Cover, Lint Screen
12	3978605	W10044470		Hinge, RH
"	3978606			Hinge, Lint Lid
13	688983	487240		Screw, For Mtg. Service Capacitor

14	3400859		Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8271390	8521918	Top
17	3950759	3957796	Knob, Control
18	3394427		Clip-Harness
19	297535	17258	Bumper
20	3401144		Connector
21	3979617		Timer, 60 Hz
22	3401694		Wire, Jumper
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
32	3396029	8539893	Wire, Jumper
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398096		Switch, Push-To-Start
48	8283182	3957746	Knob
50	3936144		Do-It-Yourself Repair Manuals
53	8271418		Bracket, Control
54	3977932		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	3406839		Dry Rack Assembly
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

