


Whirlpool TEDS840PQ0 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)

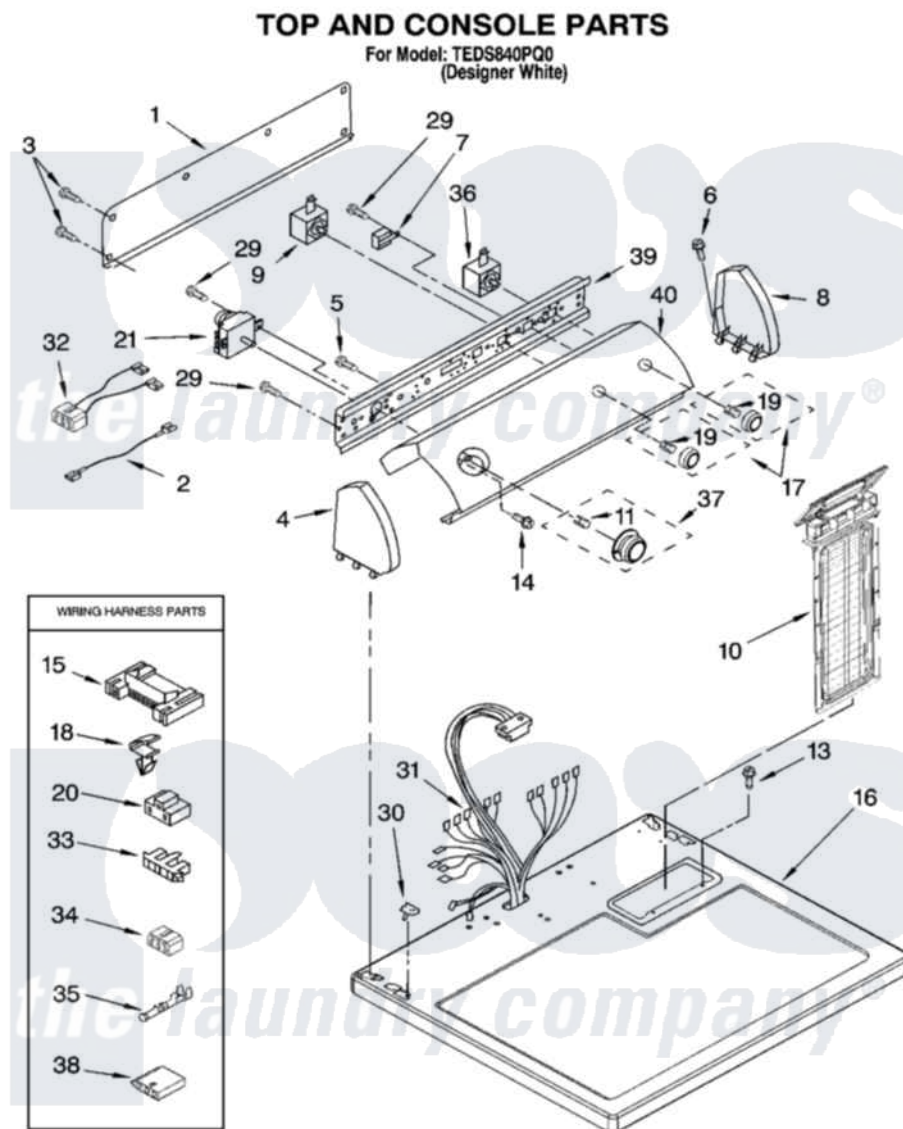

Whirlpool [Residential Whirlpool TEDS840PQ0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS OPTIONAL PARTS (NOT INCLUDED)
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8274437	279960		Endcap
5	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8274434	279960		Endcap
9	3399639			Switch, Rotary Temperature
10	8558463			HANdle And Lint Screen Assembly
11	688805			Clip, Spring Knob
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding

15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
17	8557460		Knob, Control
18	3394427		Clip-Harness
19	8536939		Clip, Knob
20	3401144		Connector
21	3979617		Timer, 60 Hz
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
32	8539893		Wire, Jumper
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
36	3398095		Switch, Push-To-Start
37	8557456		Timer Knob Assembly
38	3936144		Do-It-Yourself Repair Manuals
39	8271418		Bracket, Control
40	3977949		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	3406839		Dry Rack Assembly
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]