


Whirlpool TEDX340RW2 01 - TOP AND CONSOLE PARTS



TOP AND CONSOLE PARTS

For Model: TEDX340RW2
(White)

29" ELECTRIC DRYER

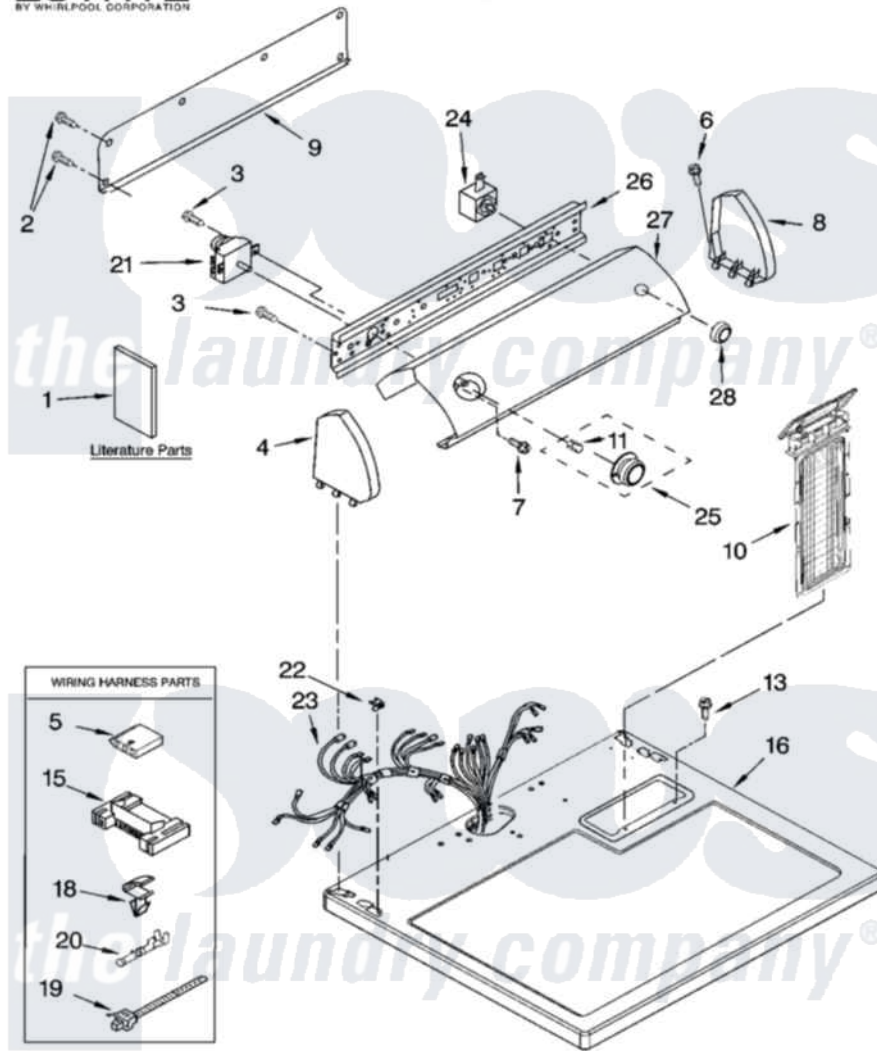

10-06 Litho in U.S.A. (LT)

1

Part No. 8180980

Whirlpool Residential Whirlpool TEDX340RW2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8578193		Not Available	Guide, Use & Care
"	8533781		Not Available	Sheet, Cycle Feature
"	8577187		Not Available	Instructions, Installation
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8274438	279961		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274435	279961		Endcap
9	8274261			Do-It-Yourself Repair Manuals

10	8558467		Screen, Lint
11	688805		Clip, Spring Knob
13	688983	487240	Screw, For Mtg. Service Capacitor
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	8299780		Timer, 60 Hz
22	357213		Nut, Push-In
23	8299865	8576499	Harness, Wiring
24	3977456		Switch, Push-To-Start
25	3957748		Timer Knob Assembly
26	8271418		Bracket, Control
27	8573820		Panel, Control
28	3957802		Knob, Control

