


Whirlpool TEDX540RQ1 01 - TOP AND CONSOLE PARTS

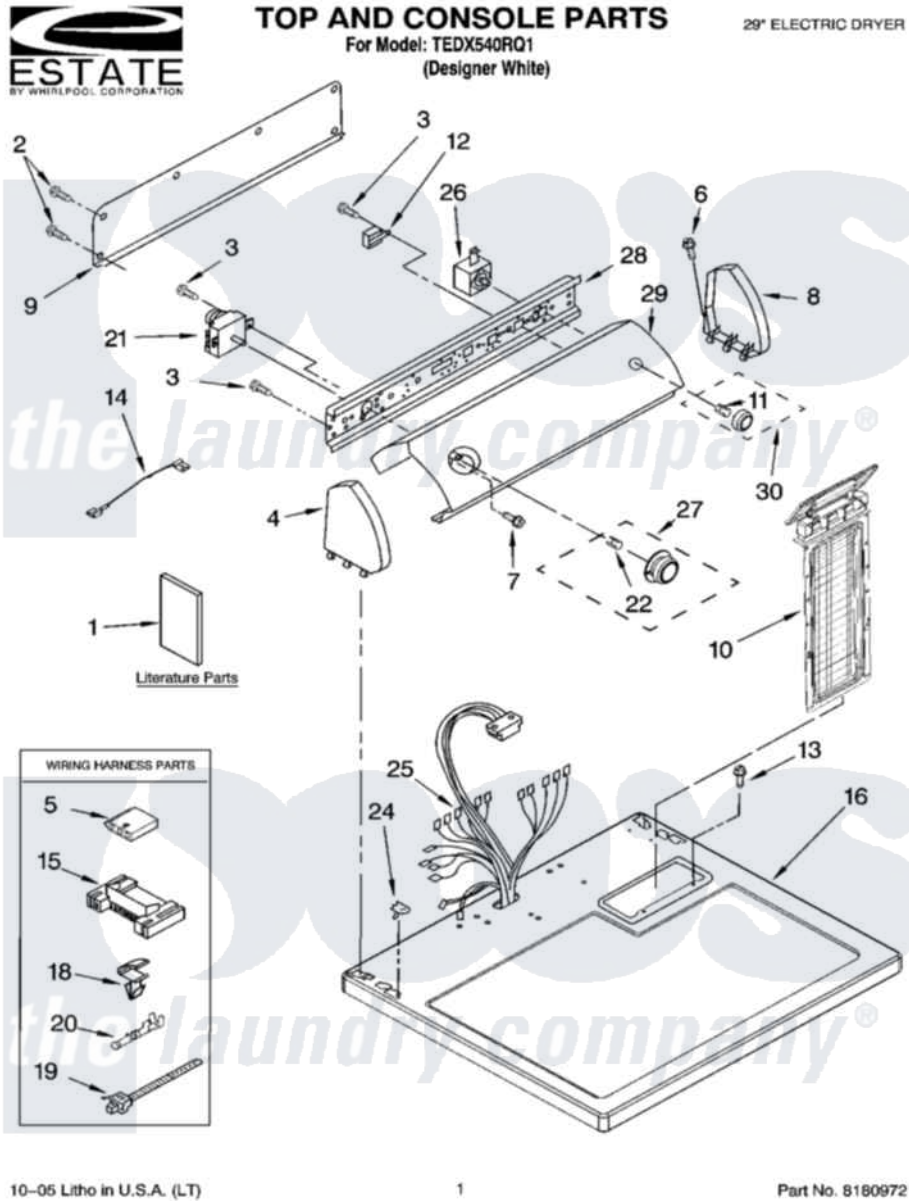

10-05 Litho in U.S.A. (LT)

1

Part No. 8180972

Whirlpool Residential Whirlpool TEDX540RQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8578193		Not Available	Guide, Use & Care
"	8533781		Not Available	Sheet, Cycle Feature
"	8577187		Not Available	Instructions, Installation
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274434	279960		Endcap
9	8274261			Do-It-Yourself Repair Manuals

10	8558467		Screen, Lint
11	8536939		Clip, Knob
12	694419		Mini-Buzzer
13	688983	487240	Screw, For Mtg. Service Capacitor
14	3393814	Not Available	Wire, Jumper (Black)
"	3393815	3393812	Wire, Jumper
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	3391249		Cable Tie, Push Mount
20	94614		Terminal
21	8299780		Timer, 60 Hz
22	688805		Clip, Spring Knob
24	357213		Nut, Push-In
25	8299865	8576499	Harness, Wiring
26	3977456		Switch, Push-To-Start
27	8557456		Timer Knob Assembly
28	8271418		Bracket, Control
29	8573821		Panel, Control
30	8557462		Knob, Push-To-Start

