


Whirlpool TEDX640PQ0 01 - TOP AND CONSOLE PARTS

Estate®

TOP AND CONSOLE PARTS

For Model: TEDX640PQ0
(Designer White)

29" ELECTRIC
DRYER

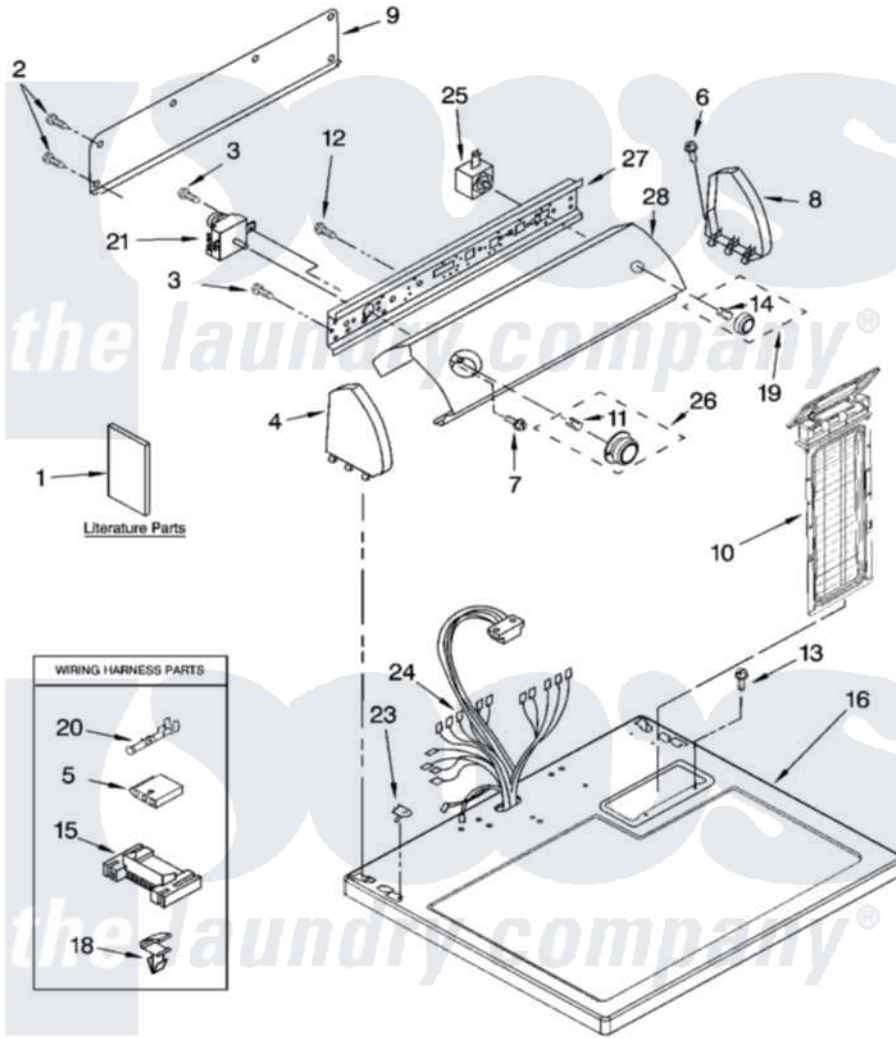

5-04 Litho in U.S.A. (djc)

1

Part No. 8180417

Whirlpool Residential Whirlpool TEDX640PQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8533783		Not Available	Guide, Use & Care
"	8535914		Not Available	Instructions, Installation
"	8533781		Not Available	Sheet, Cycle Feature
"	8528187			Wiring Diagram
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	693995			Screw, Hex Head
3	3390646	W10139210		Screw, 8-18 X 5/16
4	8274437	279960		Endcap
5	3936144			Do-It-Yourself Repair Manuals
6	388326			Screw, 8-18 X 1.25
7	8533951	3400859		Screw, Grounding
8	8274434	279960		Endcap
9	8274261			Do-It-Yourself Repair Manuals

10	8558467		Screen, Lint
11	688805		Clip, Spring Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8536939		Clip, Knob
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
18	3394427		Clip-Harness
19	8557462		Knob, Push-To-Start
20	94614		Terminal
21	8299781		Timer, 60 Hz
23	357213		Nut, Push-In
24	8299867	W10450292	Harness, Wiring
25	3977456		Switch, Push-To-Start
26	8557456		Timer Knob Assembly
27	8271418		Bracket, Control
28	3977947		Panel, Control
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	689790		Dry Rack
"	8522199		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

the laundry company[®]

the laundry company[®]