


Whirlpool TGDS740PQ0 01 - TOP AND CONSOLE PARTS

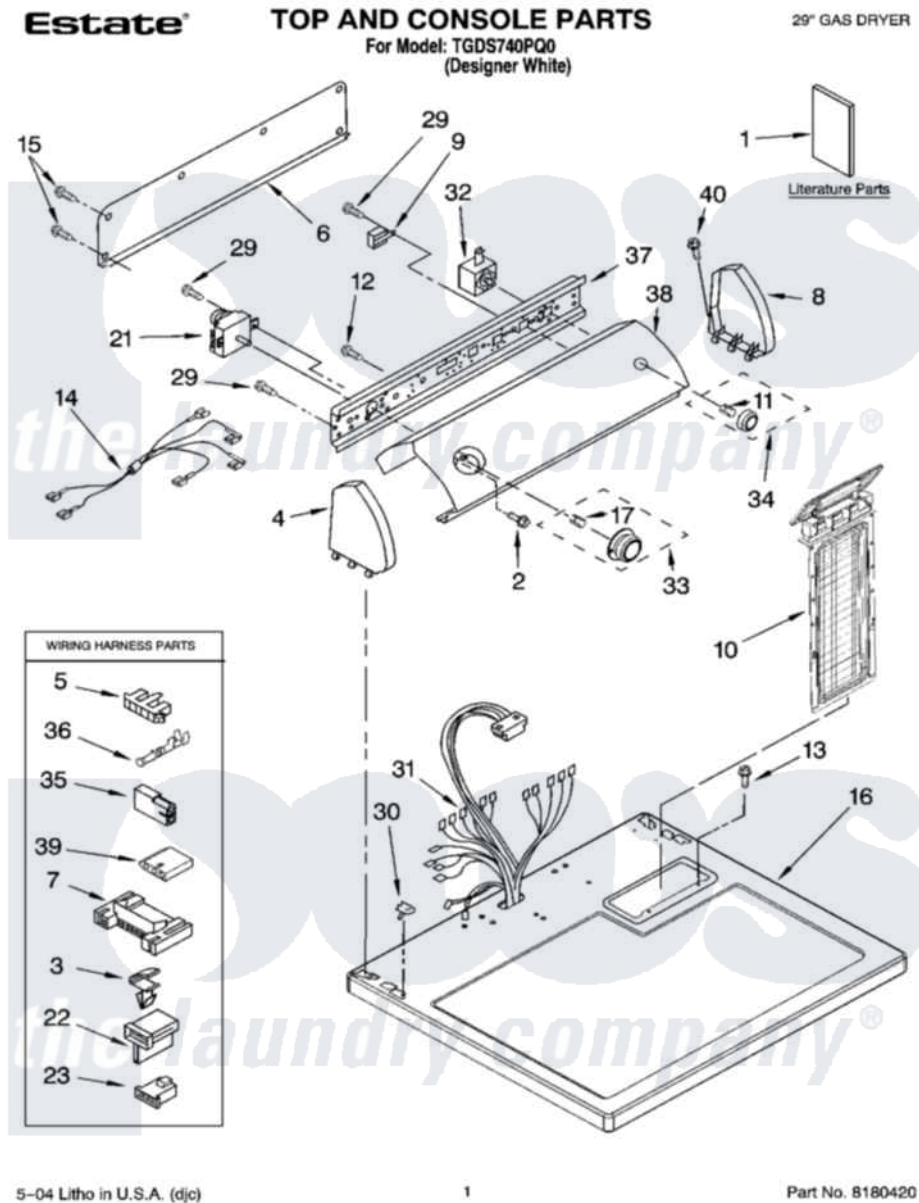

5-04 Litho in U.S.A. (djc)

1

Part No. 8180420

Whirlpool [Residential Whirlpool TGDS740PQ0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8562589		Not Available	Instructions, Installation
"	8533783		Not Available	Guide, Use & Care
"	8528187			Wiring Diagram
"	8533781		Not Available	Sheet, Cycle Feature
"	N/A		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	8533951	3400859		Screw, Grounding
3	3394427			Clip-Harness
4	8274437	279960		Endcap
5	3397269			Connector, Timer
6	8274261			Do-It-Yourself Repair Manuals
7	3395683			Receptacle, Multi-Terminal
8	8274434	279960		Endcap
9	694419			Mini-Buzzer

10	8558463		Handle And Lint Screen Assembly
11	8536939		Clip, Knob
12	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8539888		Jumper, Wire
15	693995		Screw, Hex Head
16	8557930	8563985	Top
17	688805		Clip, Spring Knob
21	3976584		Timer Assembly
22	3403499		Connector, 2-Postion
23	3403498		Connector, 3-Position
29	3390646	W10139210	Screw, 8-18 X 5/16
30	357213		Nut, Push-In
31	8299876		Harness, Wiring
32	3404233		Switch, Push-To-Start
33	8557456		Timer Knob Assembly
34	8557460		Knob, Control
35	717252		Receptacle, Terminal
36	94614		Terminal
37	8271418		Bracket, Control
38	3977948		Panel, Control
39	3936144		Do-It-Yourself Repair Manuals
40	388326		Screw, 8-18 X 1.25
"	N/A	Not Available	ACCESSORY PARTS
"	279948	4392065	Kit, Dryer Repair
"	8522199		Accessory Parts
"	346764		Kit, Hold Down
"	3404351		Accessory Parts
"	72017		Paint, Touch-Up
"	350930		Paint, Pressurized Spray B
"	350938		Paint, Pressurized Spray B
"	799344		Paint, Touch-Up)

