


Whirlpool WED4750XQ1 01 - TOP AND CONSOLE PARTS

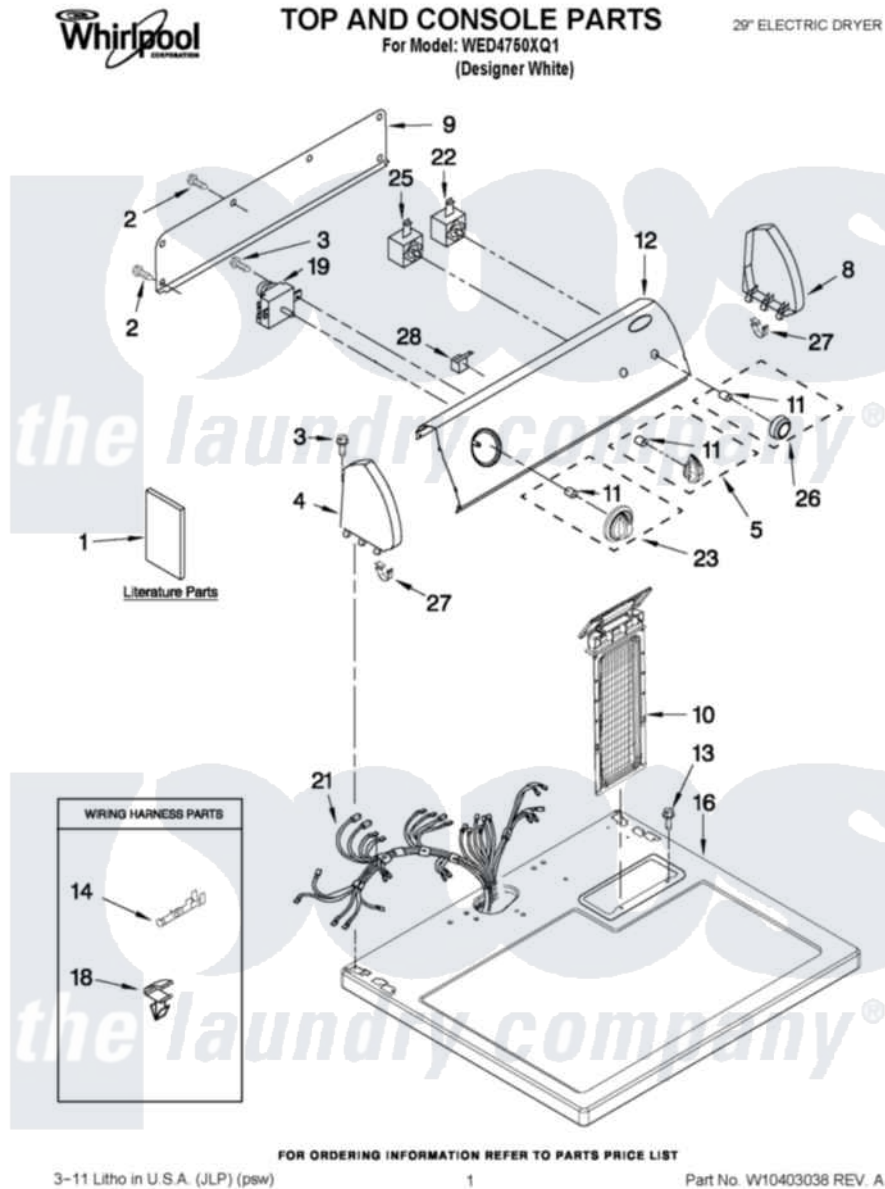

Whirlpool Residential Whirlpool WED4750XQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096986		Not Available	GUIDE, USE & CARE
"	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10185989		Not Available	WIRING DIAGRAM
2	693995			Screw, Hex Head
3	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
4	8566035	8565957		Cap, End
5	W10034380			Knob, Control
8	8566032	8565954		Cap, End
9	W10103406			Panel, Rear Console
10	8557861			Screen, Lint
11	8536939			Clip, Knob
12	W10295261			Panel Console And Bracket Assembly
13	688983	487240		Screw, For Mtg. Service Capacitor
14	94614			Terminal

16	8559800	8563663	Top
18	3394427		Clip-Harness
19	W10185988		Timer, 60 Hz
21	W10366756		Harness, Wiring
22	3977456		Switch, Push-To-Start
23	W10034750		Timer Knob Assembly
25	3405152		Switch, Wrinkle Shield
26	W10034770		Knob, Push-To-Start
27	8312709		Clip-Console
28	694419		Mini-Buzzer

