


Whirlpool WED4800XQ1 01 - TOP AND CONSOLE PARTS

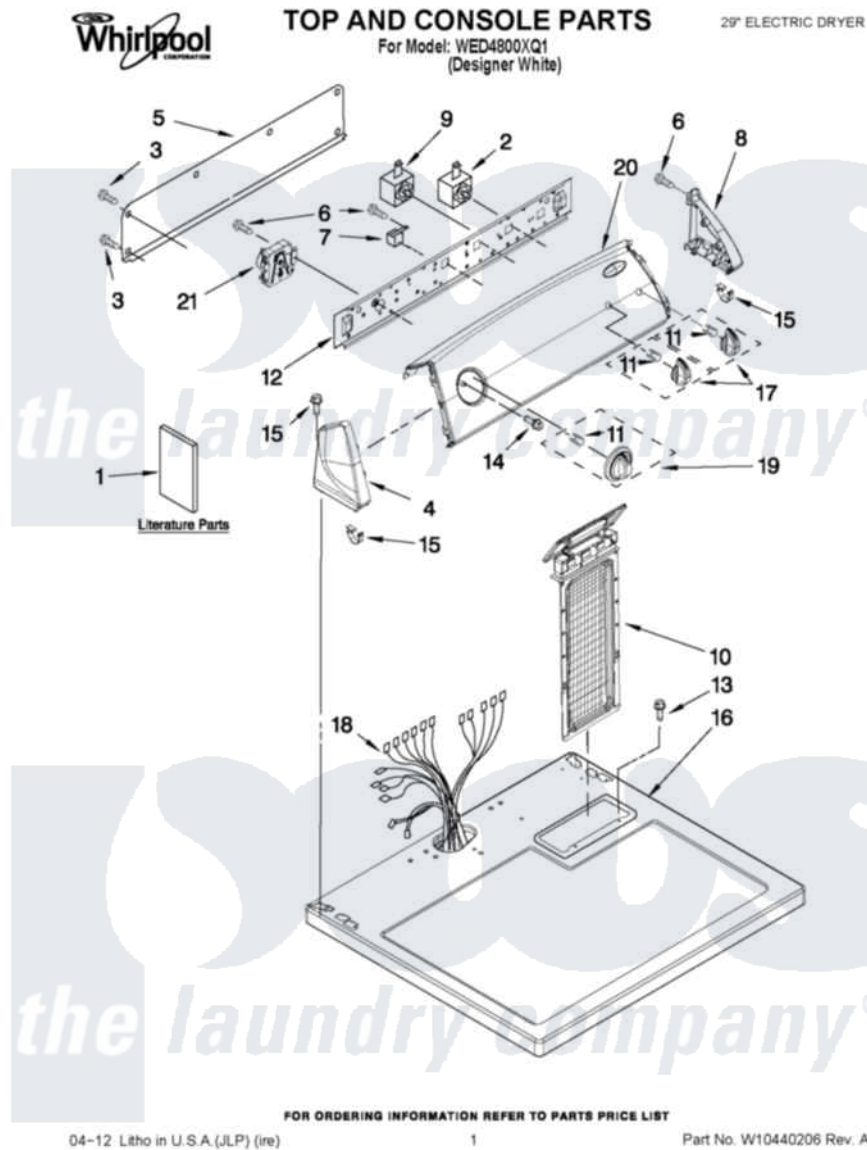

Whirlpool Residential Whirlpool WED4800XQ1 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|---------------------------|-------------------------|---------------|---|
| 1 | W10096987 | | Not Available | INSTRUCTIONS, INSTALLATION |
| " | W10096986 | | Not Available | GUIDE, USE & CARE |
| " | W10440756 | | Not Available | WIRING DIAGRAM |
| 2 | W10117655 | | | Switch, Push-To-Start |
| 3 | 693995 | | | Screw, Hex Head |
| 4 | 8566035 | 8565957 | | Cap, End |
| 5 | W10103406 | | | Panel, Rear Console |
| 6 | 3348629 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 7 | 694419 | | | Mini-Buzzer |
| 8 | 8566032 | 8565954 | | Cap, End |
| 9 | 3399639 | | | Switch, Rotary Temperature |
| 10 | 8557857 | | | Screen, Lint |
| 11 | 8536939 | | | Clip, Knob |
| 12 | 8566052 | | | Bracket, Console |
| 13 | 688082 | 487210 | | Screw, For Mtg. Service |

| | | | |
|----|---------------------------|-------------------------|------------------------------------|
| 13 | 000903 | 407440 | Capacitor |
| 14 | 8533974 | 4331106 | Screw, No.10-32 X 7/16 |
| 15 | 8312709 | | Clip-Console |
| 16 | 8559800 | 8563663 | Top |
| 17 | W10034380 | | Knob, Control |
| 18 | 8576503 | | Harness, Wiring |
| 19 | W10034750 | | Timer Knob Assembly |
| 20 | W10295262 | | Control Panel And Bracket Assembly |
| 21 | 3979618 | | Timer Assembly |

