


Whirlpool WED4800XQ2 01 - TOP AND CONSOLE PARTS

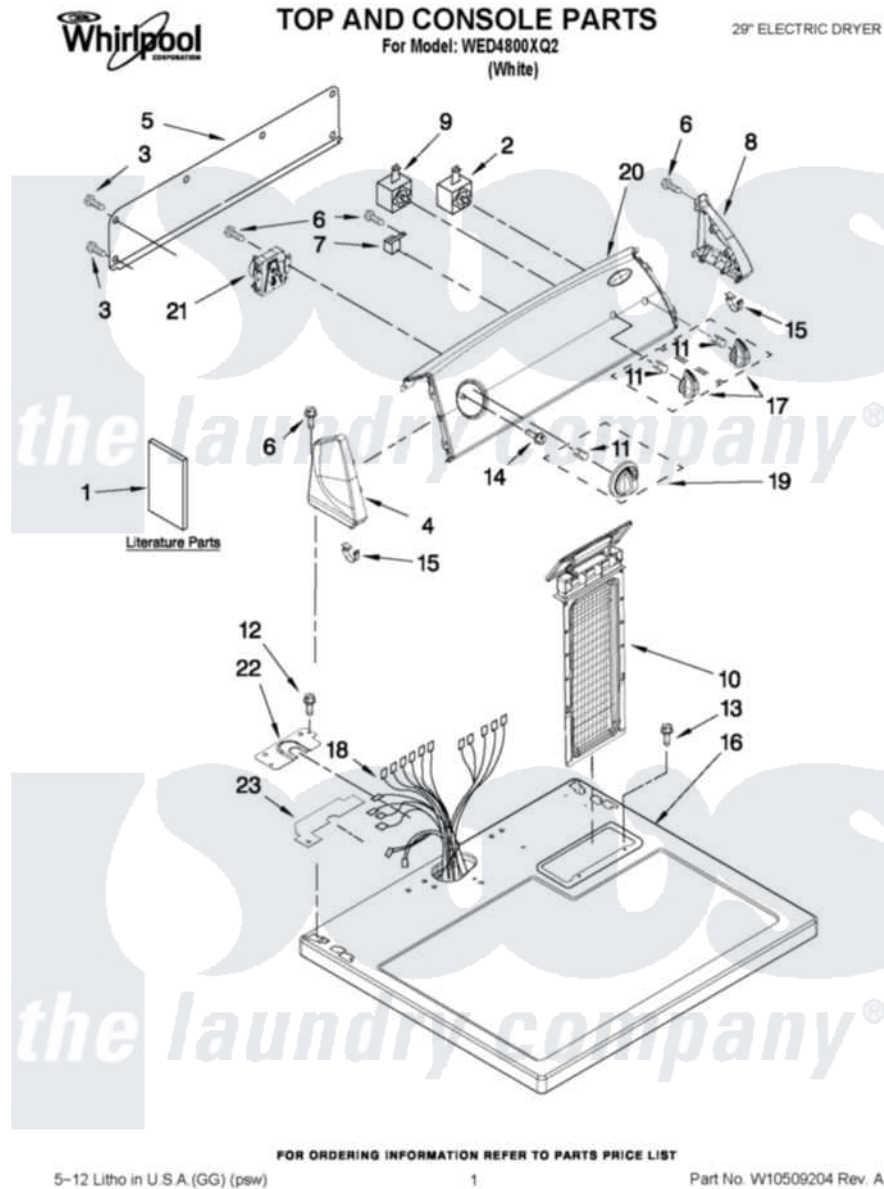

Whirlpool Residential Whirlpool WED4800XQ2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096986		Not Available	GUIDE, USE & CARE
"	W10440756		Not Available	WIRING DIAGRAM
2	W10117655			Switch, Push-To-Start
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	W10103406			Panel, Rear Console
6	3348629	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
7	694419			Mini-Buzzer
8	8566032	8565954		Cap, End
9	3399639			Switch, Rotary Temperature
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	359625	487240		Screw, For Mtg. Service Capacitor

13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533974	4331106	Screw, No.10-32 X 7/16
15	8312709		Clip-Console
16	8559800	8563663	Top
17	W10034380		Knob, Control
18	W10470705		Harness, Wiring
19	W10034750		Timer Knob Assembly
20	W10486243	Not Available	CONTROL PANEL & BRACKET ASSEMBLY
21	3979618		Timer Assembly
22	W10112578		Harness, Bracket
23	W10112603		Seal, Harness

the laundry company[®]

the laundry company[®]

the laundry company[®]