


# Whirlpool WED4850XQ2 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

29" ELECTRIC DRYER

For Model: WED4850XQ2  
(White)

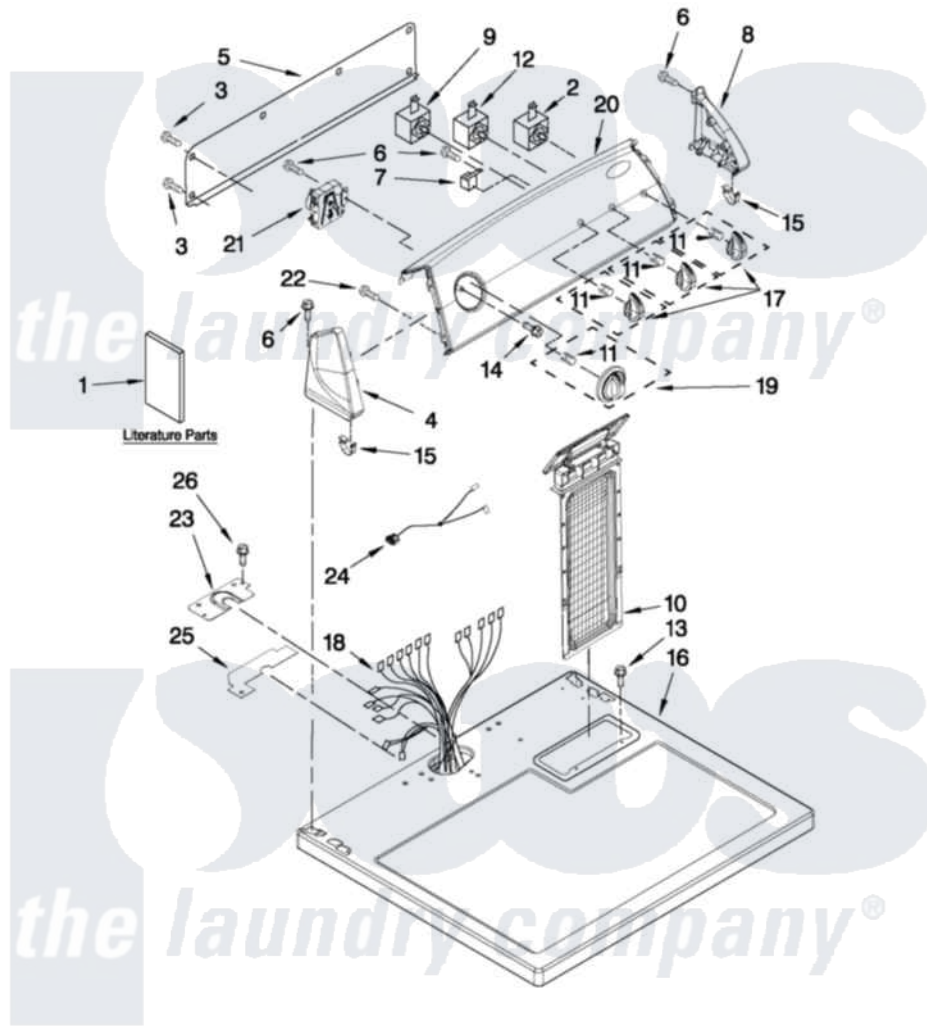

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

5-12 Litho in U.S.A. (GG)(bay)

1

Part No. W10509028 Rev. A

Whirlpool Residential Whirlpool WED4850XQ2 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS

[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096986		Not Available	GUIDE, USE & CARE
"	W10440756		Not Available	WIRING DIAGRAM
2	<a href="#">W10117655</a>			Switch, Push-To-Start
3	<a href="#">693995</a>			Screw, Hex Head
4	8566035	<a href="#">8565957</a>		Cap, End
5	<a href="#">W10103406</a>			Panel, Rear Console
6	3348629	<a href="#">90767</a>		Screw, 8A X 3/8 HeX Washer Head Tapping
7	<a href="#">694419</a>			Mini-Buzzer
8	8566032	<a href="#">8565954</a>		Cap, End
9	<a href="#">3399639</a>			Switch, Rotary Temperature
10	<a href="#">8557857</a>			Screen, Lint
11	<a href="#">8536939</a>			Clip, Knob
12	<a href="#">3405156</a>			Switch, Rotary
13	688082	<a href="#">487240</a>		Screw, For Mtg. Service

13	000903	<a href="#">487240</a>	Capacitor
14	8533974	<a href="#">4331106</a>	Screw, No.10-32 X 7/16
15	<a href="#">8312709</a>		Clip-Console
16	8559800	<a href="#">8563663</a>	Top
17	<a href="#">W10034380</a>		Knob, Control
18	<a href="#">W10470709</a>		Harness, Wiring
19	<a href="#">W10034750</a>		Timer Knob Assembly
20	W10486249	Not Available	CONTROL PANEL & BRACKET ASSEMBLY
21	<a href="#">3979618</a>		Timer Assembly
22	3348629	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
23	<a href="#">W10112578</a>		Harness, Bracket
24	<a href="#">W10450281</a>		Jumper Wire
25	<a href="#">W10112603</a>		Seal, Harness
26	359625	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor

