


Whirlpool WED4900XW0 01 - TOP AND CONSOLE PARTS

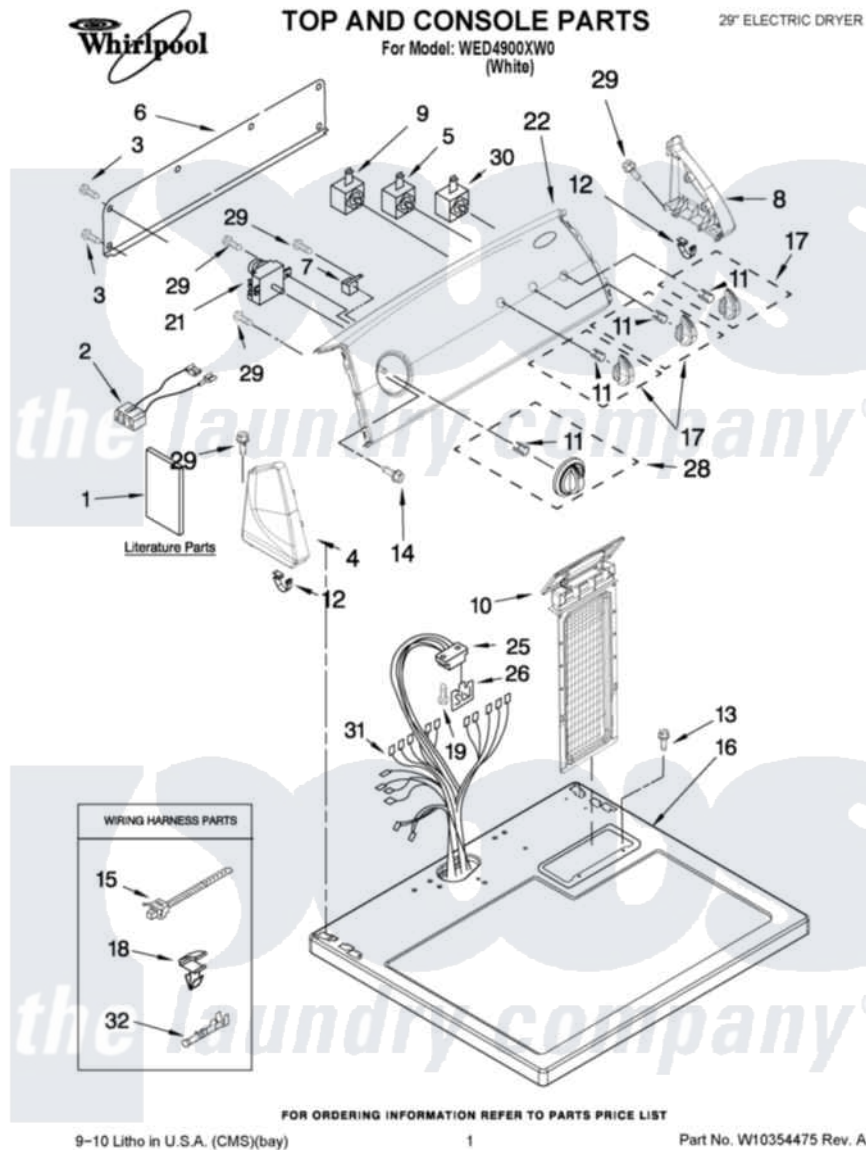

Whirlpool Residential Whirlpool WED4900XW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096986		Not Available	GUIDE, USE & CARE
"	8578889		Not Available	Wiring Diagram
2	W10113080			Wire, Jumper
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	3405156			Switch, Rotary
6	8274261			Do-It-Yourself Repair Manuals
7	694419			Mini-Buzzer
8	8566032	8565954		Cap, End
9	8578354			Switch, Temperature
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	8312709			Clip-Console
13	688983	487240		Screw, For Mtg. Service Capacitor

14	8533951	3400859	Screw, Grounding
15	3391018		Tie Cable
16	8559800	8563663	Top
17	W10034380		Knob, Control
18	3394427		Clip-Harness
19	343641	681414	Screw, 10AB X 1/2
21	8566184		Timer Assembly
22	W10295263		Control Panel And Bracket Assembly
25	3391885		Connector, Edge
26	8558178		Control, Electronic
28	W10034750		Timer Knob Assembly
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	W10117655		Switch, Push-To-Start
31	8576544	W10071280	Harn-Wire
32	94614		Terminal

