


# Whirlpool WED4900XW1 01 - TOP AND CONSOLE PARTS

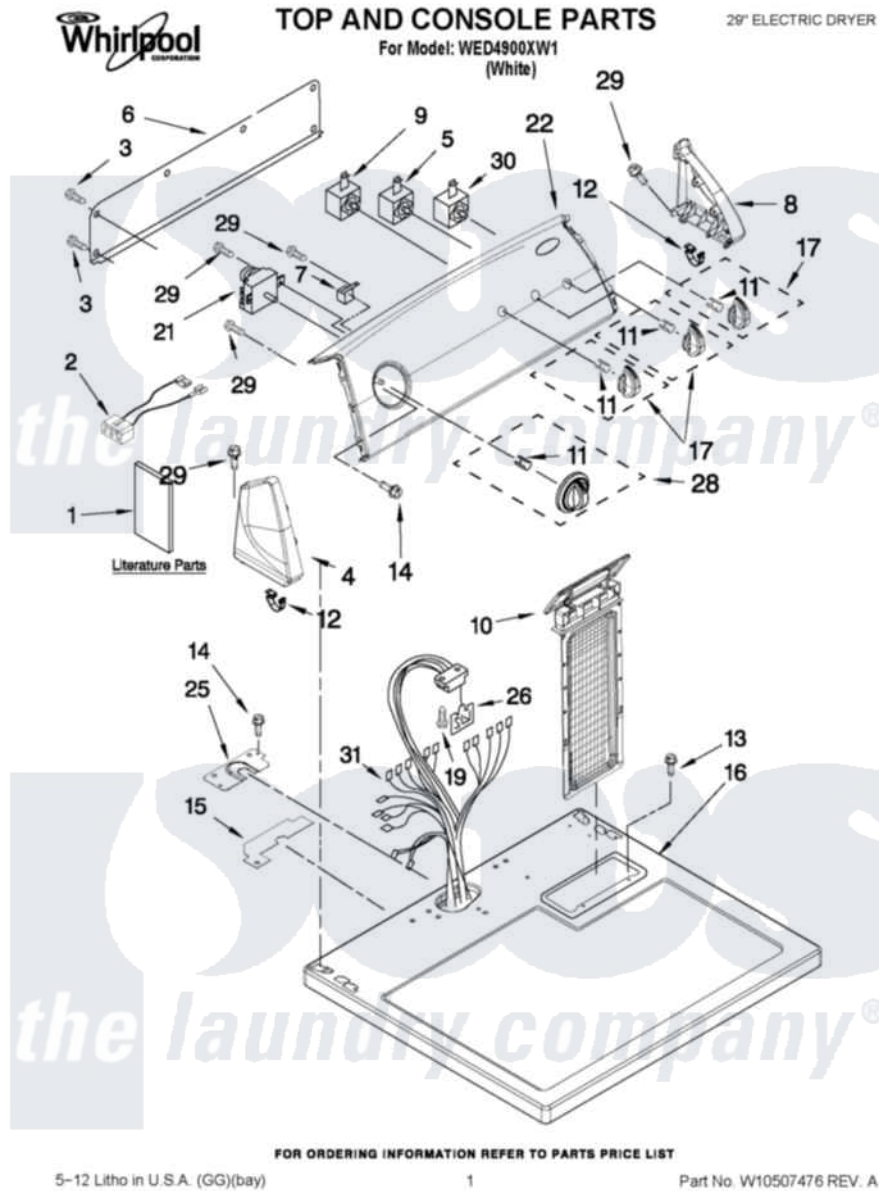

Whirlpool [Residential Whirlpool WED4900XW1 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096987		Not Available	INSTRUCTIONS, INSTALLATION
"	W10096986		Not Available	GUIDE, USE & CARE
"	8578889		Not Available	Wiring Diagram
2	<a href="#">W10113080</a>			Wire, Jumper
3	<a href="#">693995</a>			Screw, Hex Head
4	8566035	<a href="#">8565957</a>		Cap, End
5	<a href="#">3405156</a>			Switch, Rotary
6	<a href="#">W10103406</a>			Panel, Rear Console
7	<a href="#">694419</a>			Mini-Buzzer
8	8566032	<a href="#">8565954</a>		Cap, End
9	<a href="#">8578354</a>			Switch, Temperature
10	<a href="#">8557857</a>			Screen, Lint
11	<a href="#">8536939</a>			Clip, Knob
12	<a href="#">8312709</a>			Clip-Console
13	688983	<a href="#">487240</a>		Screw, For Mtg. Service Capacitor

14	359625	<a href="#">487240</a>	Screw, For Mtg. Service Capacitor
15	<a href="#">W10112603</a>		Seal, Harness
16	8559800	<a href="#">8563663</a>	Top
17	<a href="#">W10034380</a>		Knob, Control
19	343641	<a href="#">681414</a>	Screw, 10AB X 1/2
21	<a href="#">8566184</a>		Timer Assembly
22	W10486246	Not Available	CONTROL PANEL & BRACKET ASSEMBLY
25	<a href="#">W10112578</a>		Harness, Bracket
26	<a href="#">8558178</a>		Control, Electronic
28	<a href="#">W10034750</a>		Timer Knob Assembly
29	3348629	<a href="#">90767</a>	Screw, 8A X 3/8 HeX Washer Head Tapping
30	<a href="#">W10117655</a>		Switch, Push-To-Start
31	W10470721	Not Available	HARNESS, WIRING

