


Whirlpool WED5000VQ0 01 - TOP AND CONSOLE PARTS

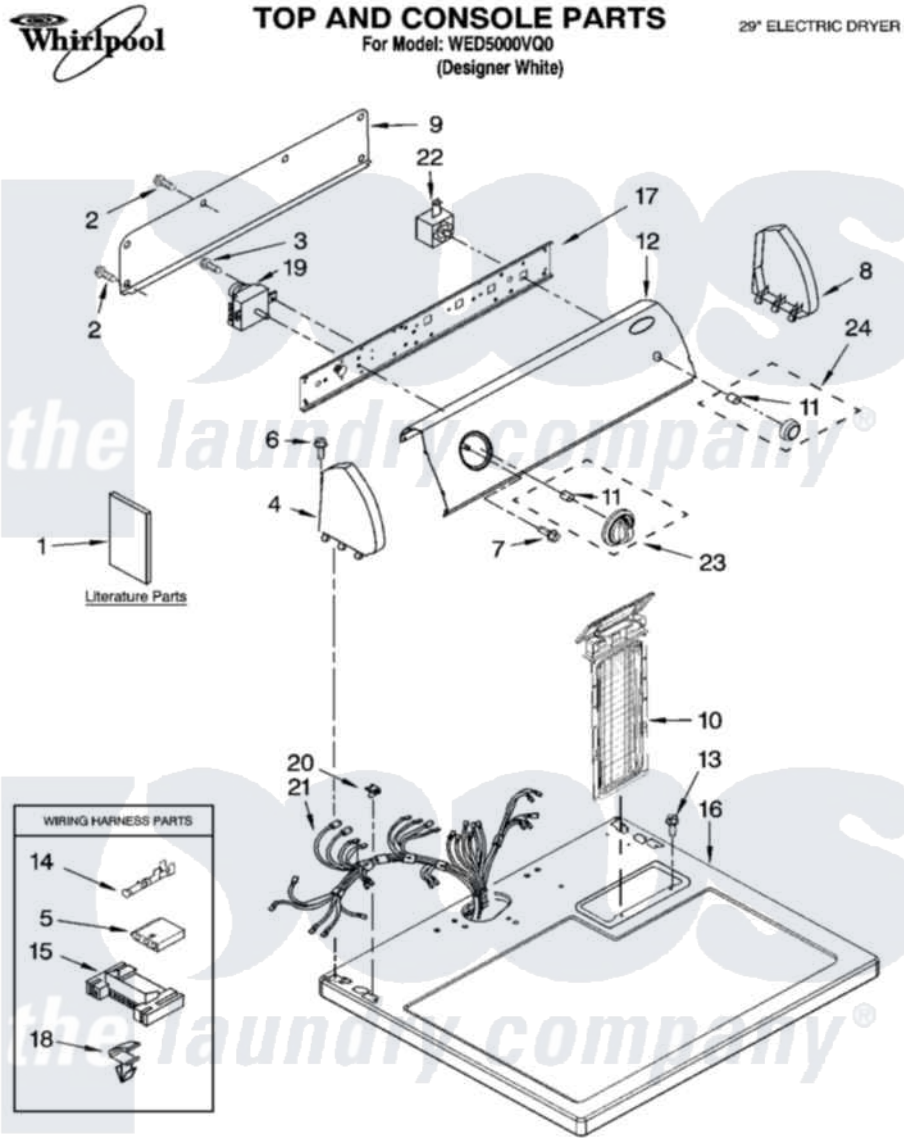

9-08 Litho in U.S.A. (LT) (psw)

1

Part No. W10224238 Rev.A.

Whirlpool Residential Whirlpool WED5000VQ0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

| Item | Original Part Number | Replaced By | Status | Part Description |
|------|-------------------------|-------------------------|---------------|--|
| 1 | W10150610 | | Not Available | Use & Care Guide |
| " | W10042960 | | Not Available | Sheet, Cycle Feature |
| " | W10150612 | | Not Available | Instructions, Installation |
| " | 8576793 | | Not Available | Wiring Diagram |
| " | BLANK | | Not Available | Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS |
| " | 677818 | | Not Available | Manual, Do-It- Yourself Repair (Dryer) |
| 2 | 693995 | | | Screw, Hex Head |
| 3 | 8533971 | 90767 | | Screw, 8A X 3/8 HeX Washer Head Tapping |
| 4 | 8271365 | 279962 | | Endcap |
| 5 | 3936144 | | | Do-It-Yourself Repair Manuals |
| 6 | 388326 | | | Screw, 8-18 X 1.25 |
| 7 | 8533951 | 3400859 | | Screw, Grounding |
| 8 | 8271359 | 279962 | | Endcap |
| 9 | 8274261 | | | Do-It-Yourself Repair Manuals |

| | | | |
|----|---------------------------|---------------------------|-----------------------------------|
| 10 | 8557861 | | Screen, Lint |
| 11 | 8536939 | | Clip, Knob |
| 12 | W10167874 | | Panel, Control |
| 13 | 688983 | 487240 | Screw, For Mtg. Service Capacitor |
| 14 | 94614 | | Terminal |
| 15 | 3395683 | | Receptacle, Multi-Terminal |
| 16 | 8557930 | 8563985 | Top |
| 17 | 8544895 | | Bracket, Control |
| 18 | 3394427 | | Clip-Harness |
| 19 | 8299778 | | Timer, 60 Hz |
| 20 | 357213 | | Nut, Push-In |
| 21 | 8576500 | W10450292 | Harness, Wiring |
| 22 | 3977456 | | Switch, Push-To-Start |
| 23 | 8566061 | | Timer Knob Assembly |
| 24 | 8566065 | | Knob, Push-To-Start |

