


Whirlpool WED5300VW0 01 - TOP AND CONSOLE PARTS

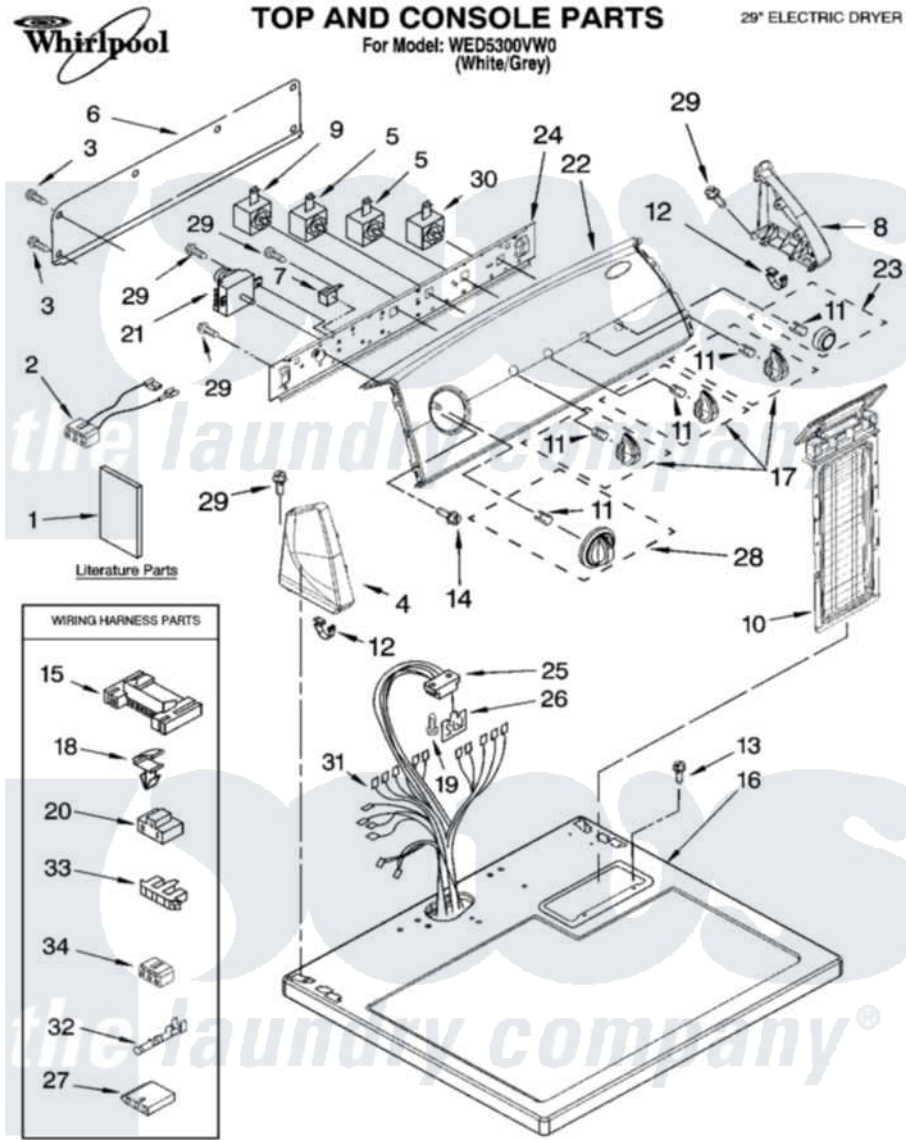

7-08 Litho in U.S.A. (LT)(bay)

1

Part No. W10221050 Rev. A

Whirlpool [Residential Whirlpool WED5300VW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS
 Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10150612		Not Available	Instructions, Installation
"	W10042950		Not Available	Sheet, Cycle Feature
"	W10150610		Not Available	Use & Care Guide
"	8578889		Not Available	Wiring Diagram
"	BLANK		Not Available	Following May Be Purchased DO-IT-YOURSELF REPAIR MANUALS
"	677818		Not Available	Manual, Do-It- Yourself Repair (Dryer)
2	W10113080			Wire, Jumper
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	3405156			Switch, Rotary
6	8274261			Do-It-Yourself Repair Manuals
7	694419			Mini-Buzzer
8	8566032	8565954		Cap, End
9	8578352			Switch, Temperature

10	8557857		Screen, Lint
11	8536939		Clip, Knob
12	8312709		Clip-Console
13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8559800	8563663	Top
17	W10034380		Knob, Control
18	3394427		Clip-Harness
19	343641	681414	Screw, 10AB X 1/2
20	3401144		Connector
21	8566184		Timer Assembly
22	W10206010		Panel, Control
23	W10034790		Knob, Push-To-Start
24	8566052		Bracket, Console
25	3391885		Connector, Edge
26	8558178		Control, Electronic
27	3936144		Do-It-Yourself Repair Manuals
28	W10034750		Timer Knob Assembly
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
30	3398095		Switch, Push-To-Start
31	8576544	W10071280	Hams-Wire
32	94614		Terminal
33	3397269		Connector, Timer
34	3347243		Block, Disconnect

the laundry company[®]

the laundry company[®]