


Whirlpool WED5320SQ0 02 - TOP AND CONSOLE PARTS

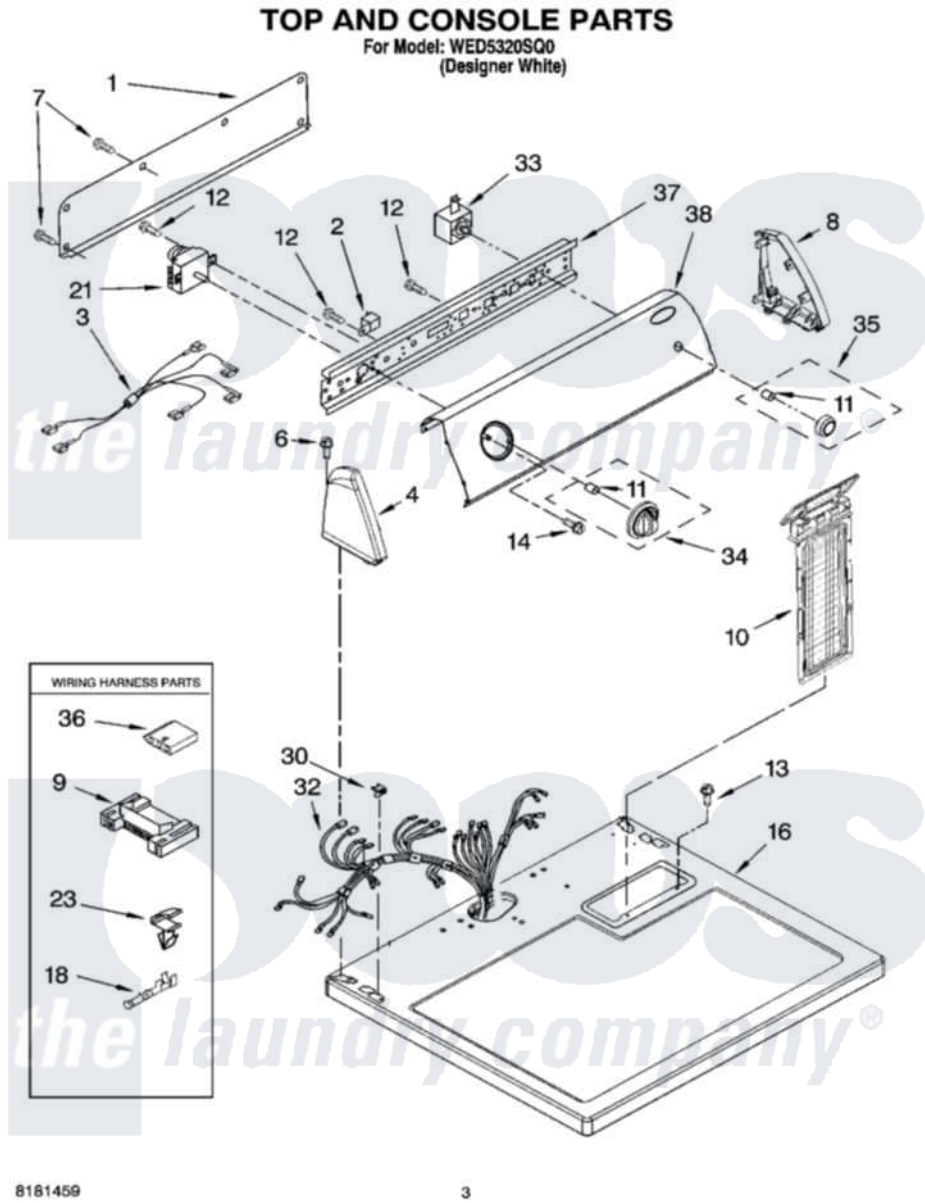

Whirlpool Residential Whirlpool WED5320SQ0 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	694419			Mini-Buzzer
3	3397690			Jumper,
4	8271365	279962		Endcap
6	388326			Screw, 8-18 X 1.25
7	693995			Screw, Hex Head
8	8271359	279962		Endcap
9	3395683			Receptacle, Multi-Terminal
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
16	8557930	8563985		Top
18	94614			Terminal

21	8299779		Timer, 60 Hz
23	3394427		Clip-Harness
30	357213		Nut, Push-In
32	8299867	W10450292	Harness, Wiring
33	3977456		Switch, Push-To-Start
34	8566061		Timer Knob Assembly
35	8566065		Knob, Push-To-Start
36	3936144		Do-It-Yourself Repair Manuals
37	8544895		Bracket, Control
38	W10104760		Panel, Control

