


Whirlpool WED5600XW0 01 - TOP AND CONSOLE PARTS

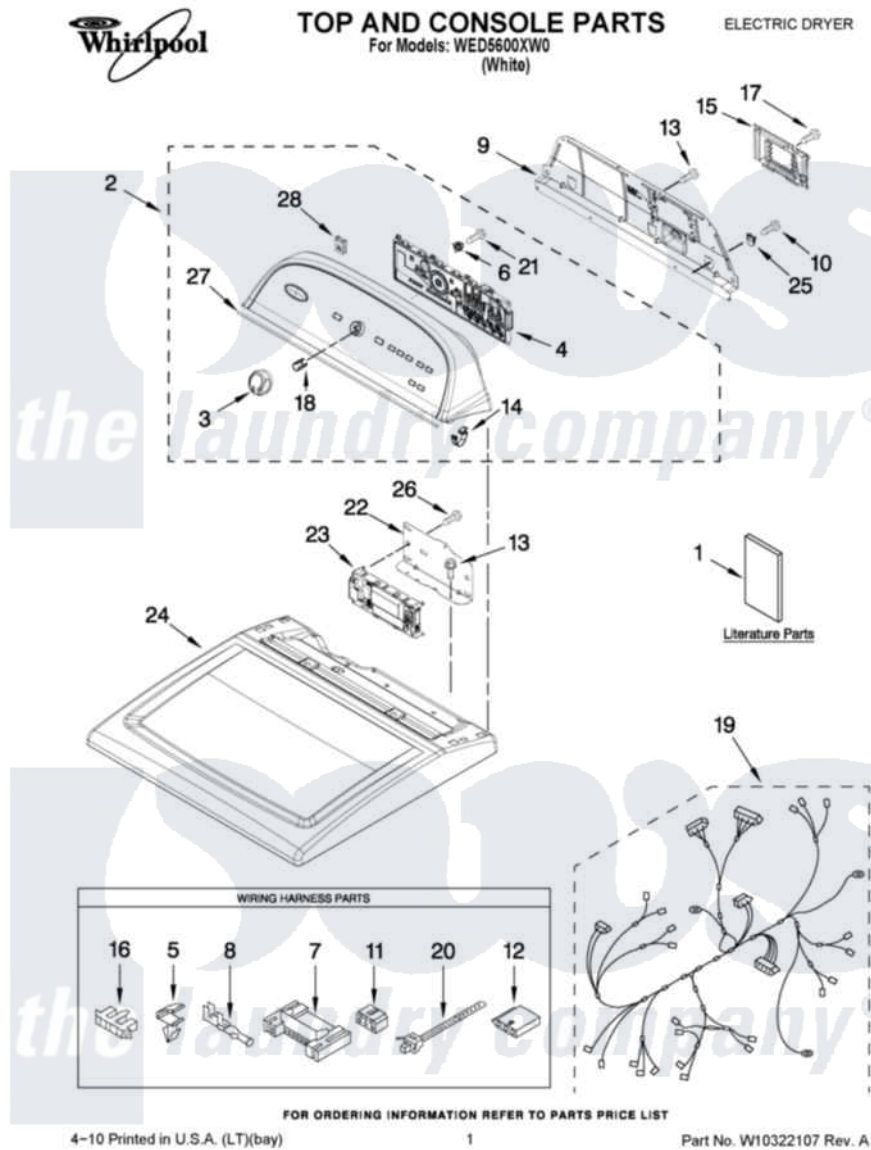

Whirlpool Residential Whirlpool WED5600XW0 Dryer Parts Parts Diagram 01 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10096988		Not Available	INSTALLATION INSTRUCTIONS
"	W10096985		Not Available	GUIDE, USE & CARE
"	W10096966		Not Available	TECH SHEET
2	W10269610			Console Assembly
3	W10251392			Knob Assembly
4	W10269625			User Interface Assembly
5	3394427			Clip-Harness
6	W10274524			Tensioner, Facia
7	3395683			Receptacle, Multi-Terminal
8	94614			Terminal
9	W10096969			Panel, Rear Console
10	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
11	3347243			Block, Disconnect
12	3936144			Do-It-Yourself Repair Manuals
13	3390647	488729		Screw

14	8312709		Clip-Console
15	W10286180	W10119283	Cover, Terminal Block
16	3397269		Connector, Timer
17	3390814	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
18	8536939		Clip, Knob
19	W10253981		Harness, Electric
20	3391018		Tie Cable
21	W10219342		Screw, Baffle Mounting
22	W10271580		Bracket, Motor Control
23	W10259285		CCU-Control
24	W10260246		Top
25	W10279552		Plug-Upper Rear Panel
26	337686	Not Available	SCREW, 8-18 X .500
27	W10280079		Seal, Console
28	W10298336		8-18 Nch, U-Type NUT

