


Whirlpool WED5700SW0 02 - TOP AND CONSOLE PARTS

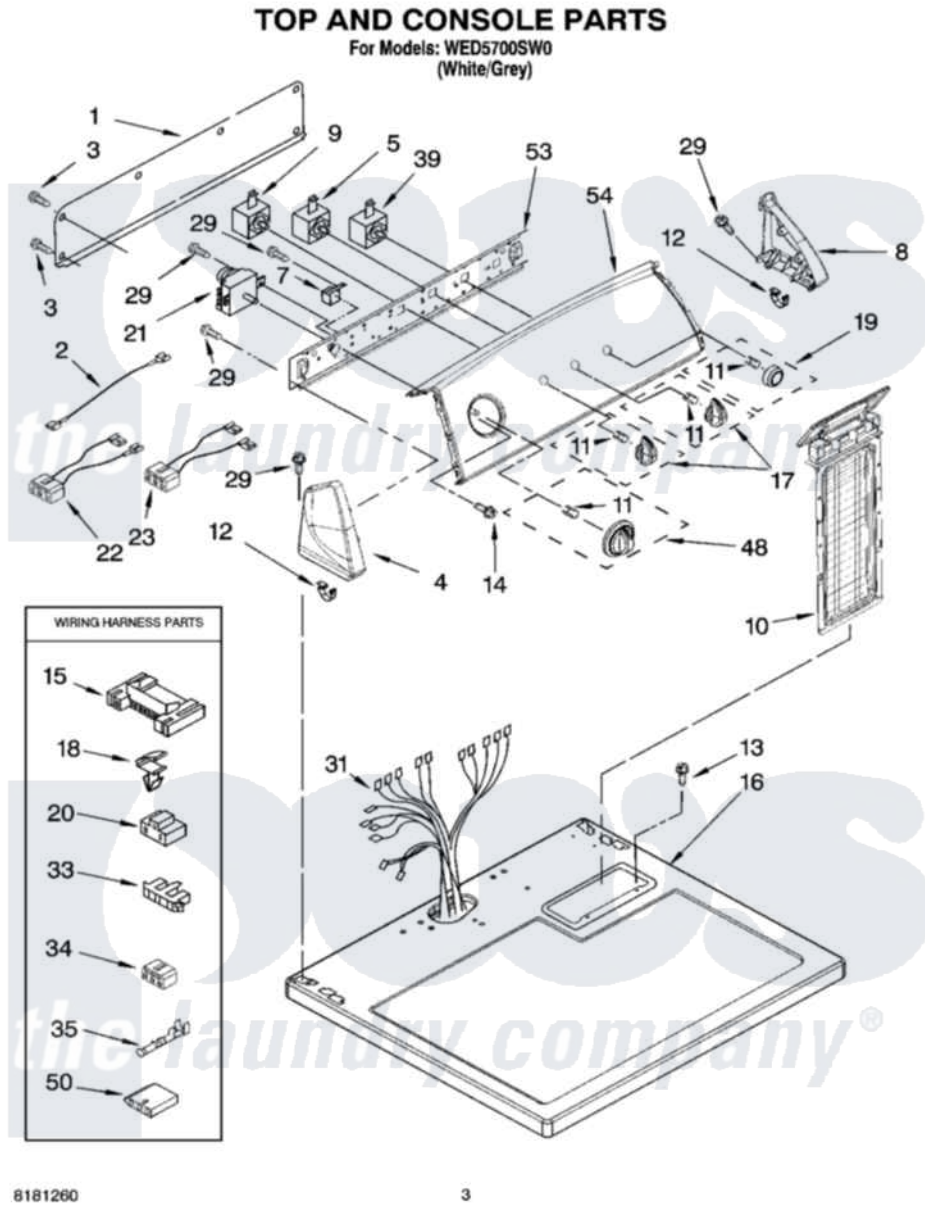

Whirlpool [Residential Whirlpool WED5700SW0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
[Click on the part number to view part](#)

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
5	3405156			Switch, Rotary
7	694419			Mini-Buzzer
8	8566032	8565954		Cap, End
9	3399639			Switch, Rotary Temperature
10	8557857			Screen, Lint
11	8536939			Clip, Knob
12	8312709			Clip-Console
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding
15	3395683			Receptacle, Multi-Terminal
16	8559800	8563663		Top
17	W10034380			Knob, Control

18	3394427		Clip-Harness
19	W10034790		Knob, Push-To-Start
20	3401144		Connector
21	3979618		Timer Assembly
22	3397695		Wire, Jumper
23	3396029	8539893	Wire, Jumper
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8299873	8576503	Harness, Wiring
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398095		Switch, Push-To-Start
48	W10034750		Timer Knob Assembly
50	3936144		Do-It-Yourself Repair Manuals
53	8566052		Bracket, Console
54	8578859		Panel, Control

