


Whirlpool WED5790SQ0 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Models: WED5790SQ0, WED5790ST0
(Designer White) (Biscuit)

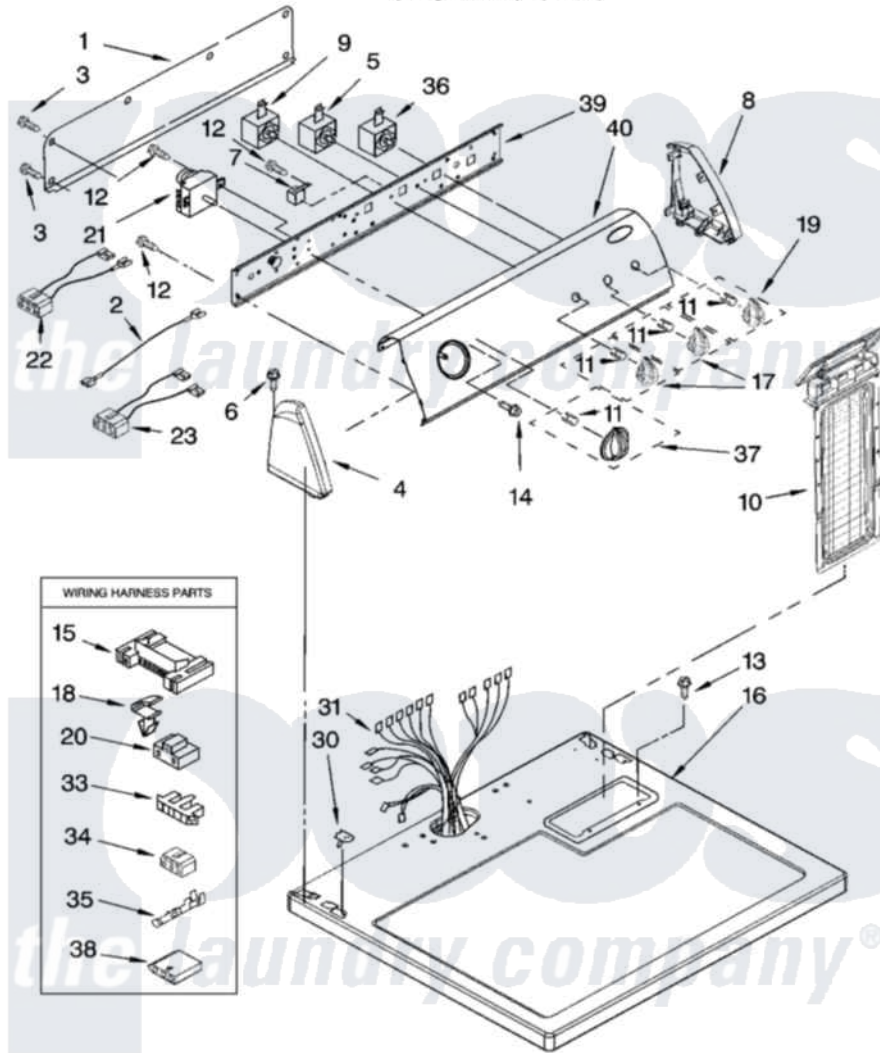

W10113143

3

Whirlpool Residential Whirlpool WED5790SQ0 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401684			Jumper, Wire
3	693995			Screw, Hex Head
4	8271365	279962		Endcap
"	8271368	279965		Endcap
5	3405156			Switch, Rotary
6	388326			Screw, 8-18 X 1.25
7	694419			Mini-Buzzer
8	8271359	279962		Endcap
"	8271362	279965		Endcap
9	3399639			Switch, Rotary Temperature
10	8557857			Screen, Lint
"	8557858			Screen, Lint
11	8536939			Clip, Knob
12	8533971	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
				Screw, For Mtn. Service

13	688983	487240	Screw, For Mtg. Service Capacitor
14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	8557930	8563985	Top
"	8557931	8563986	Top
17	8565944		Knob, Control
"	8565947		Knob, Control
18	3394427		Clip-Harness
19	8566073		Knob, Push-To-Start
"	8566076		Knob, Push-To-Start
20	3401144		Connector
21	3979618		Timer Assembly
22	3397695		Wire, Jumper
23	3396029	8539893	Wire, Jumper
30	357213		Nut, Push-In
31	8299873	8576503	Harness, Wiring
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
36	3398095		Switch, Push-To-Start
37	8566061		Timer Knob Assembly
"	8566064		Timer Knob Assembly
38	3936144		Do-It-Yourself Repair Manuals
39	8544895		Bracket, Control
40	8578856		Panel, Control
"	8578857		Panel, Control

the laundry company[®]

the laundry company[®]