


Whirlpool WED5840SG0 02 - TOP AND CONSOLE PARTS

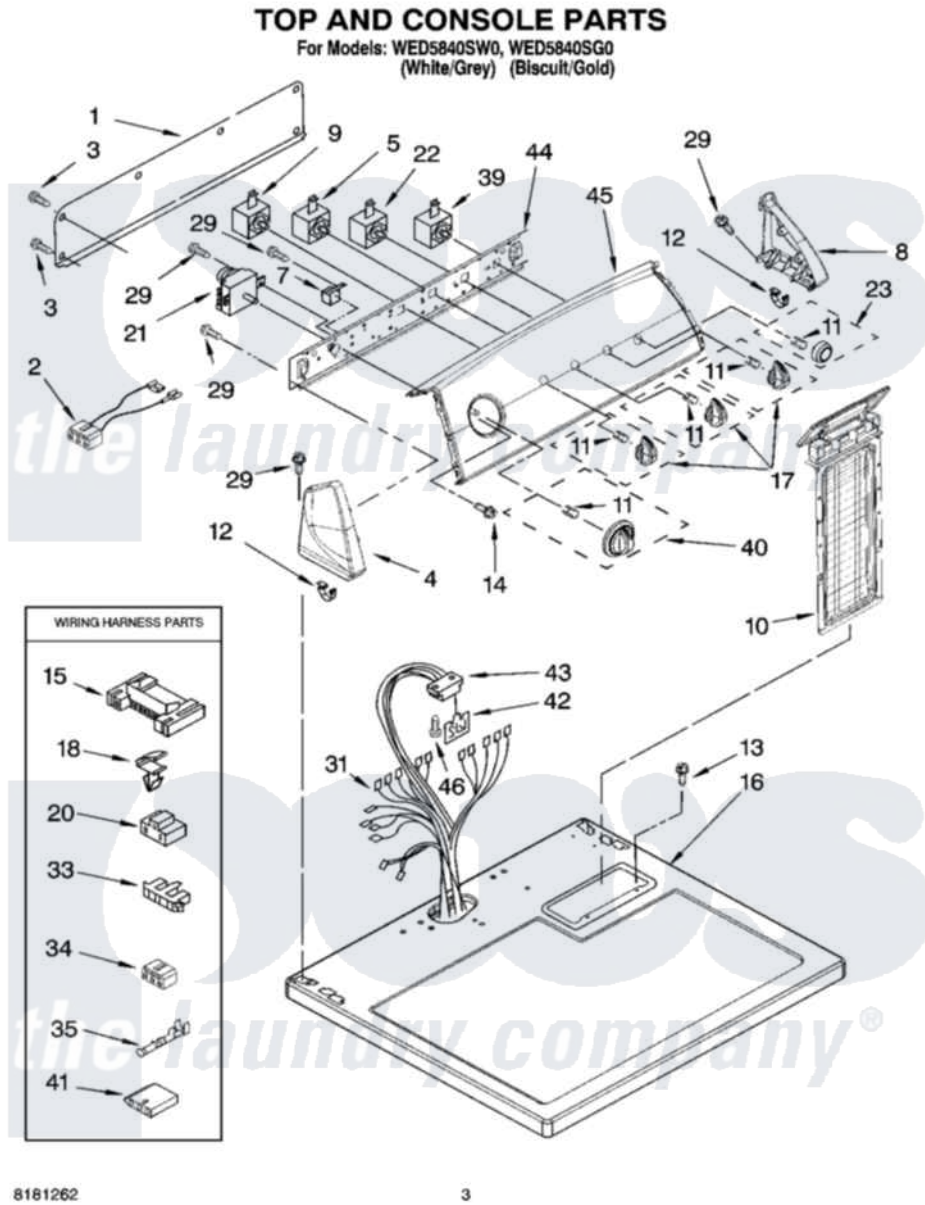

Whirlpool [Residential Whirlpool WED5840SG0 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	3401695			Wire, Jumper Buzzer
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
"	8566036	8565958		Cap, End
5	3405156			Switch, Rotary
7	694419			Mini-Buzzer
8	8566032	8565954		Cap, End
"	8566033	8565955		Cap, End
9	8578352			Switch, Temperature
10	8557857			Screen, Lint
"	8557858			Screen, Lint
11	8536939			Clip, Knob
12	8312709			Clip-Console
13	688983	487240		Screw, For Mtg. Service Capacitor
14	8533951	3400859		Screw, Grounding

15	3395683		Receptacle, Multi-Terminal
16	8559800	8563663	Top
"	8563660	8563664	Top
17	W10034380		Knob, Control
"	W10034390		Knob, Control
18	3394427		Clip-Harness
20	3401144		Connector
21	8566184		Timer Assembly
22	3405152		Switch, Wrinkle Shield
23	W10034770		Knob, Push-To-Start
"	W10034780		Knob, Push-To-Start
29	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
31	8576544	W10071280	Harns-Wire
33	3397269		Connector, Timer
34	3347243		Block, Disconnect
35	94614		Terminal
39	3398094		Switch, Push To Start
40	W10034750		Timer Knob Assembly
"	W10034760		Timer Knob Assembly
41	3936144		Do-It-Yourself Repair Manuals
42	8558178		Control, Electronic
43	3391885		Connector, Edge
44	8566052		Bracket, Console
45	8578866		Panel, Control
"	8578867		Panel, Control
46	359625	487240	Screw, For Mtg. Service Capacitor

the laundry company[®]

the laundry company[®]