


Whirlpool WED5900SB0 02 - TOP AND CONSOLE PARTS

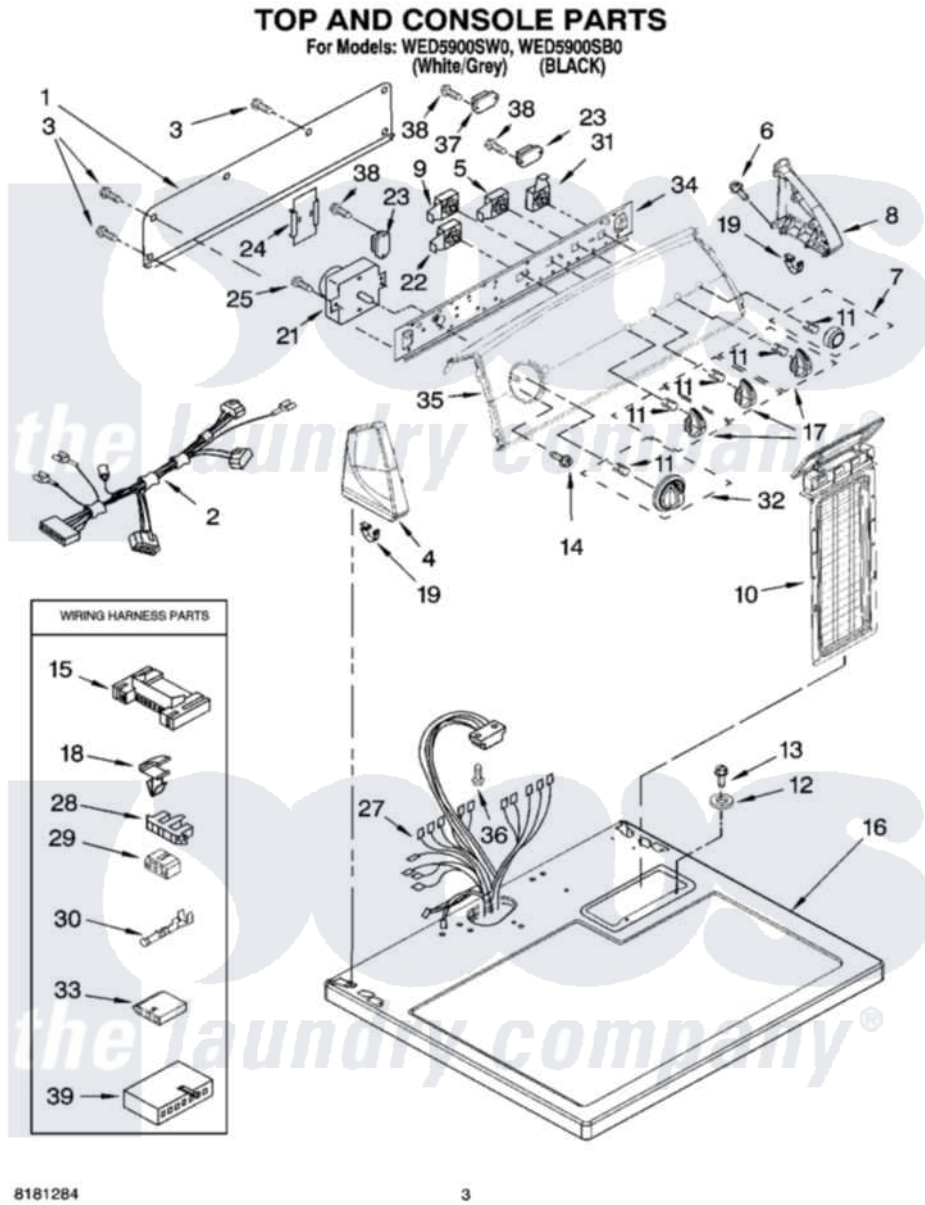

Whirlpool Residential Whirlpool WED5900SB0 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	8274261			Do-It-Yourself Repair Manuals
2	8283135			Harness, Console
3	693995			Screw, Hex Head
4	8566035	8565957		Cap, End
"	8566037	8565959		Cap, End
5	3405151			Switch, End Of Cycle
6	388326			Screw, 8-18 X 1.25
7	W10034770			Knob, Push-To-Start
8	8566032	8565954		Cap, End
"	8566034	8565956		Cap, End
9	3405152			Switch, Wrinkle Shield
10	8557857			Screen, Lint
"	8557859			Screen, Lint
11	8536939			Clip, Knob
12	237446	487596		Washer
13	688983	487240		Screw, For Mtg. Service Capacitor

14	8533951	3400859	Screw, Grounding
15	3395683		Receptacle, Multi-Terminal
16	W10028870		Top
"	W10028890		Top
17	W10034380		Knob, Control
18	3394427		Clip-Harness
19	8312709		Clip-Console
21	8299771		Timer Assembly
22	8299970		Switch, Temperature
23	3405281		Power Relay
24	3976623	W10116566	Control-Elec
25	8533971	90767	Screw, 8A X 3/8 HeX Washer Head Tapping
27	8299897		Harness, Wiring
28	3397269		Connector, Timer
29	3347243		Block, Disconnect
30	94614		Terminal
31	3977456		Switch, Push-To-Start
32	W10034750		Timer Knob Assembly
33	3936144		Do-It-Yourself Repair Manuals
34	8566052		Bracket, Console
35	8566077		Panel, Control
36	343641	681414	Screw, 10AB X 1/2
37	8566493		Power Relay
38	3388228		Screw, 8-18 X 1/32
39	3936150		Connector, 7-Circuit

the laundry company[®]

the laundry company[®]