


Whirlpool WED6400SG0 02 - TOP AND CONSOLE PARTS

TOP AND CONSOLE PARTS

For Model: WED6400SW0, WED6400SB0, WED6400SG0
(White/Grey) (Black) (Biscuit/Gold)

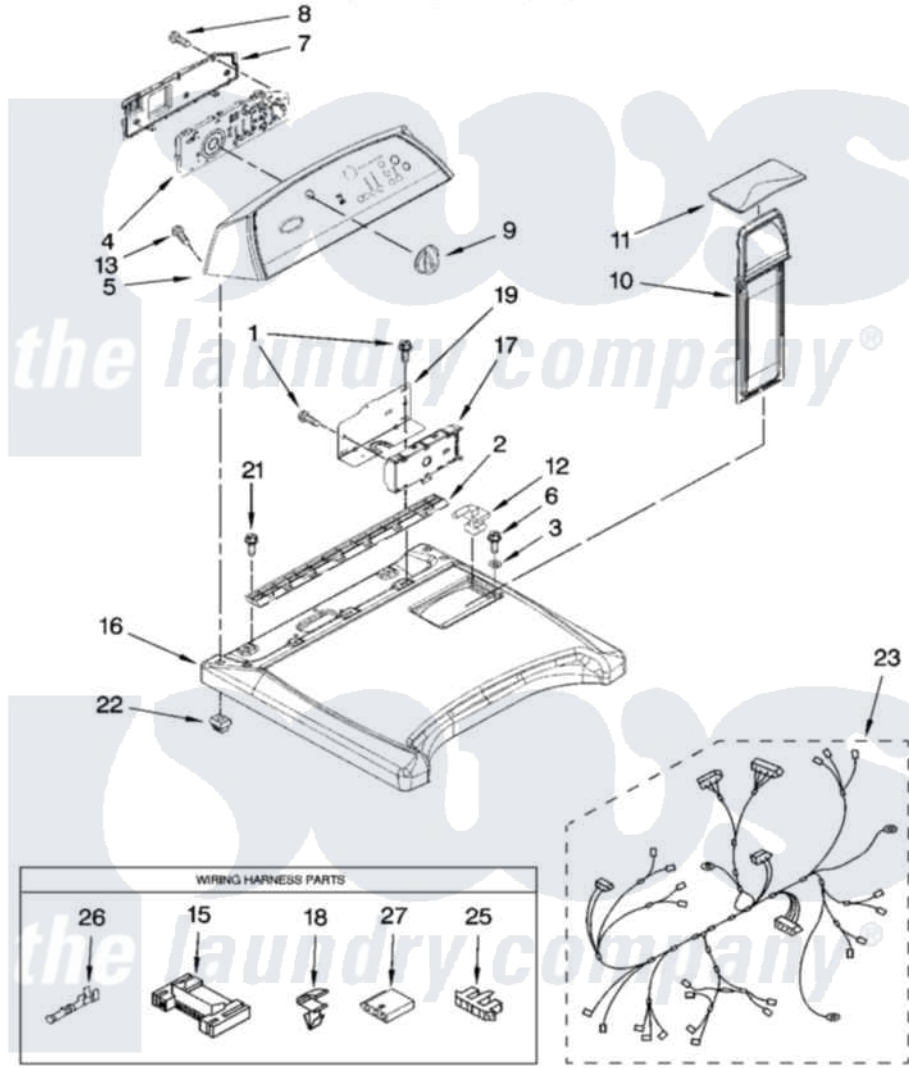

8181367

3

Whirlpool Residential Whirlpool WED6400SG0 Dryer Parts Parts Diagram 02 - TOP AND CONSOLE PARTS
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10106830	90767		Screw, 8A X 3/8 HeX Washer Head Tapping
2	8558863			Bracket, Console
3	237446	487596		Washer
4	8563974			Assembly, User Interface
5	W10110325			Panel, Console
"	W10110330			Panel, Console
"	W10110328			Panel, Console
6	3196537	3196557		Panel, Manifold
7	8564265			Cover, Rear- User Interface
8	W10003770			Screw, 6-19 X 1/2
9	8574957			Knob, Assembly
"	8574959			Knob, Assembly
"	8574958			Knob, Assembly
10	8572270			Assembly, Lint Screen
11	W10044320	W10168227		Cover, Lint Screen
"	W10044360			Cover, Lint Screen

"	W10044330	W10168229	Cover, Lint Screen
12	W10044470		Hinge, RH
"	W10044480		Hinge, L.H.
13	W10001580		Screw, 10-16 X 5/16
15	3395683		Receptacle, Multi-Terminal
16	8565025		Top
"	8565028		Top
"	8565027		Top
17	W10074270	W10111616	Control, Electronic
18	3394427		Clip-Harness
19	8563853		Bracket, Machine Controller
21	337686	Not Available	SCREW, 8-18 X .500
22	8558853		Screw, Grommet
23	8299914	W10111428	Harness Wiring
25	3936144		Do-It-Yourself Repair Manuals
26	94614		Terminal
27	3397269		Connector, Timer

