


# Whirlpool WED6400SG1 02 - TOP AND CONSOLE PARTS

## TOP AND CONSOLE PARTS

For Model: WED6400SW1, WED6400SB1, WED6400SG1  
(White/Grey) (Black) (Biscuit/Gold)

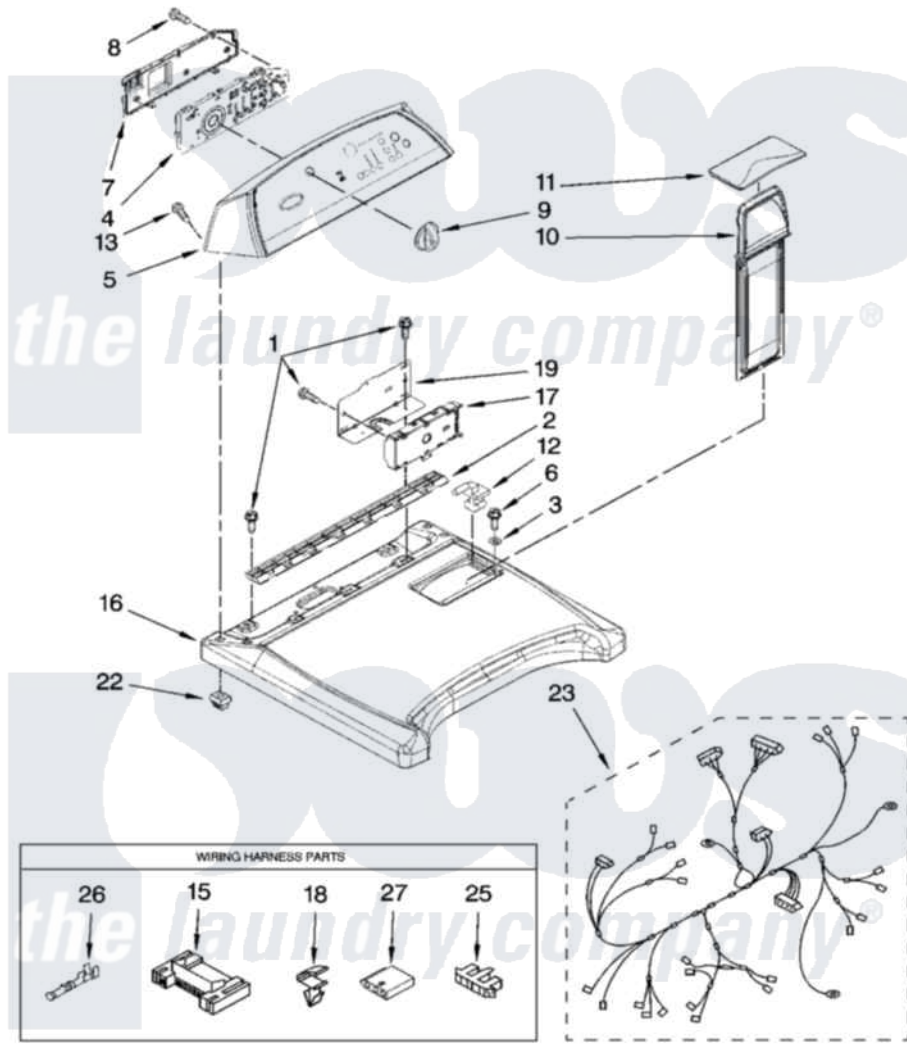

W10118947

3

Whirlpool [Residential Whirlpool WED6400SG1 Dryer Parts](#) Parts Diagram 02 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	337686		Not Available	SCREW, 8-18 X .500
2	<a href="#">8558863</a>			Bracket, Console
3	237446	<a href="#">487596</a>		Washer
4	<a href="#">8563974</a>			Assembly, User Interface
5	<a href="#">W10110325</a>			Panel, Console
"	<a href="#">W10110330</a>			Panel, Console
"	<a href="#">W10110328</a>			Panel, Console
6	3196537	<a href="#">3196557</a>		Panel, Manifold
7	<a href="#">8564265</a>			Cover, Rear- User Interface
8	<a href="#">W10003770</a>			Screw, 6-19 X 1/2
9	<a href="#">8574957</a>			Knob, Assembly
"	<a href="#">8574959</a>			Knob, Assembly
"	<a href="#">8574958</a>			Knob, Assembly
10	<a href="#">8572270</a>			Assembly, Lint Screen
11	W10044320	<a href="#">W10168227</a>		Cover, Lint Screen
"	<a href="#">W10044360</a>			Cover, Lint Screen

"	W10044330	<a href="#">W10168229</a>	Cover, Lint Screen
12	<a href="#">W10044470</a>		Hinge, RH
"	<a href="#">W10044480</a>		Hinge, L.H.
13	<a href="#">W10001580</a>		Screw, 10-16 X 5/16
15	<a href="#">3395683</a>		Receptacle, Multi-Terminal
16	<a href="#">8565025</a>		Top
"	<a href="#">8565028</a>		Top
"	<a href="#">8565027</a>		Top
17	W10111607	<a href="#">W10111616</a>	Control, Electronic
18	<a href="#">3394427</a>		Clip-Harness
19	<a href="#">8563853</a>		Bracket, Machine Controller
22	<a href="#">8558853</a>		Screw, Grommet
23	8299914	<a href="#">W10111428</a>	Harness Wiring
25	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals®
26	<a href="#">94614</a>		Terminal
27	<a href="#">3397269</a>		Connector, Timer

