


# Whirlpool WED7400XW0 01 - TOP AND CONSOLE PARTS



## TOP AND CONSOLE PARTS

For Models: WED7400XW0  
(White)

27" ELECTRIC DRYER

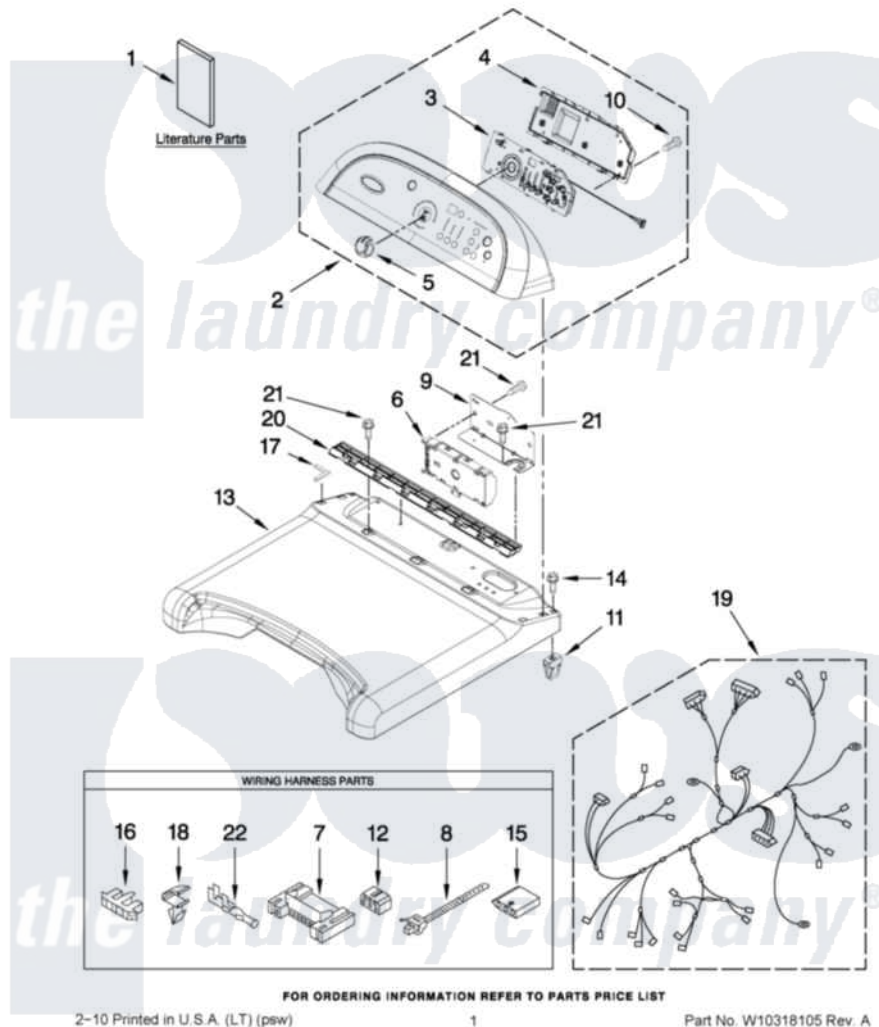

Whirlpool [Residential Whirlpool WED7400XW0 Dryer Parts](#) Parts Diagram 01 - TOP AND CONSOLE PARTS  
Click on the part number to view part

Item	Original Part Number	Replaced By	Status	Part Description
1	W10305227		Not Available	GUIDE, USE & CARE (ENGLISH)
"	W10267633		Not Available	INSTALLATION, INSTRUCTION
"	W10301482		Not Available	TECH SHEET
2	<a href="#">W10298647</a>			Console Assembly
3	<a href="#">W10298627</a>			Assembly, User Interface
4	<a href="#">8564265</a>			Cover, Rear- User Interface
5	<a href="#">W10211335</a>			Knob, Assembly
6	<a href="#">W10294317</a>			Control Electronic
7	<a href="#">3395683</a>			Receptacle, Multi-Terminal
8	<a href="#">3391018</a>			Tie Cable
9	<a href="#">W10211337</a>			Bracket, Machine Controller
10	<a href="#">W10003770</a>			Screw, 6-19 X 1/2
11	<a href="#">W10112673</a>			Screw, Grommet
12	<a href="#">3347243</a>			Block, Disconnect
13	<a href="#">W10211339</a>			Top

14	<a href="#">W10131402</a>		Screw, 8-18 X 1.370
15	<a href="#">3936144</a>		Do-It-Yourself Repair Manuals
16	<a href="#">3397269</a>		Connector, Timer
17	<a href="#">W10185554</a>		Seal, Foam Top
18	<a href="#">3394427</a>		Clip-Harness
19	W10111058	<a href="#">W10319802</a>	Harness, Electric
20	<a href="#">8558863</a>		Bracket, Console
21	337686	Not Available	SCREW, 8-18 X .500
22	<a href="#">94614</a>		Terminal

